










## **RTQ5132**

## **DDR5 Client VR on DIMM PMIC**

### 1 General Description

The RTQ5132 is an integrated power management IC designed for general DDR5 SODIMM and UDIMM applications. This device provides three Buck converters (SWA, SWB, and SWC) and two LDOs (VLDO\_1.0V and VLDO\_1.8V). Additionally, the RTQ5132 supports a selectable interface (I<sup>2</sup>C or I3C basic) accommodate various application environments. Α comprehensive protection mechanism is embedded to ensure safe power distribution, with the capability to record fault events in registers and signal them through PWR\_GOOD and GSI\_n open-drain indicators. The RTQ5132 is available in a WQFN-28L 3x4 (FC) package. The recommended junction temperature range is from -10°C to 125°C and the ambient temperature range is from 0°C to 85°C.

## 2 Ordering Information

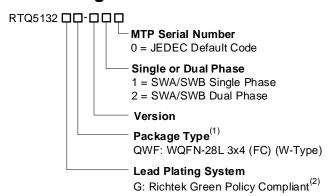

#### Note 1.

- Marked with (1) indicated: Compatible with the current requirements of IPC/JEDEC J-STD-020.
- Marked with (2) indicated: Richtek products are Richtek Green Policy compliant.

## 3 Marking Information

marking information, contact our representative directly or through a Richtek distributor located in your area.

### 4 Features

- VIN Bulk with Input Supply Range: 4.25V to 5.5V
- High Integration:
  - Three High Efficiency Buck Converters
    - SWA: ITDC = 4A. IMAX = 5A
    - SWB: ITDC = 4A, IMAX = 5A
    - SWC: ITDC = 1A, IMAX = 2A
  - Two LDOs
    - VLDO\_1.8V: IMAX = 25mA
    - VLDO\_1.0V: IMAX = 20mA
- 0.75% Converter Output Accuracy
- Fast Transient Response with A<sup>2</sup>RCOT Control
- Support I<sup>2</sup>C and I3C Slave Control
- Error Log Counter and Data Storage (NVM)
- MTP Registers with Secured R/W Access
- Programmable and DIMM Specific Registers for Customization
- Programmable Mode for Debug and Validation
- Telemetry for Output Current, Voltage, and **Power**
- Complete Protection Mechanisms
  - VIN\_Bulk Input Supply OVP
  - OVP, UVP, OCP, HCW for Each Rails
  - High Temp Warning and OTP
- General Status Interrupt Function
- Power-Good Indicator

## 5 Applications

DDR5 SODIMM/ UDIMM

RICHTEK



## **6 Simplified Application Circuit**

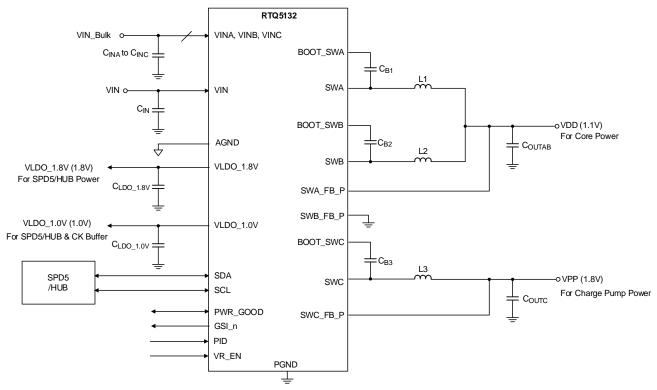


Figure 1. SWA and SWB are combined as Dual-Phase Mode

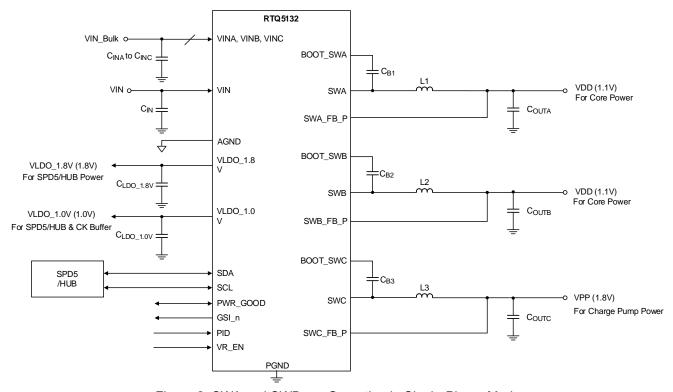


Figure 2. SWA and SWB are Operating in Single-Phase Mode




## **Table of Contents**

1	Gener	al Description1		15.13	Output Undervoltage and VIN_BULK	
2	Orderi	ng Information1			Undervoltage-Lockout Protection	43
3	Markir	ng Information1		15.14	Output Current Limiter Warning Event	43
4	Featur	es1		15.15	Output High Current Consumption	
5	Applic	ations1			Warning Event	44
6	Simpli	fied Application Circuit2		15.16	PMIC High Temperature Warning and	
7	Pin Co	onfiguration4			Critical Temperature Protection	45
8	Functi	onal Pin Description4		15.17	Packet Error Code (PEC) and	
9	Functi	onal Block Diagram6			Parity Error Event	46
10	Absol	ute Maximum Ratings7		15.18	Output Regulator Control Topology	47
11	Recon	nmended Operating Conditions7		15.19	Regulator Operating Mode Selection	48
12	Electri	ical Characteristics8		15.20	Analog-to-Digital Converter (ADC)	49
13	Typica	al Application Circuit14		15.21	PMIC Address ID (PID)	51
	13.1	Recommended Component Selection for		15.22	Error Injection	51
		Typical Application Circuit16	16	Applic	ation Information	52
14	Typica	al Operating Characteristics17		16.1	Inductor Selection	52
15	•	tion24		16.2	Output Capacitor Selection	54
	15.1	PMIC Input Voltage Supply and Ramp		16.3	Input Capacitor Selection	56
		Condition24		16.4	Bootstrap Circuit	58
	15.2	Enabling PMIC Output Switch Voltage		16.5	VLDO_1.8V and VLDO_1.0V Decoupling	
		Regulators27			Capacitor	60
	15.3	Secure Mode and Programmable Mode		16.6	Thermal Consideration	60
		of Operation28		16.7	Layout Consideration	
	15.4	Power Down Output Regulators28	17	Functi	ional Register Description	63
	15.5	PMIC Output Rail Off Timing31		17.1	Register Attribute Definition	
	15.6	GSI_n Signal32		17.2	Register Map Breakdown	
	15.7	Power State Definition33		17.3	Register Memory Protection	
	15.8	Function Interrupts for PWR_GOOD and		17.4	B-5 Host Region Registers	
		GSI_n Output Signals34		17.5	DIMM Vendor Region Registers	106
	15.9	Power-Good Signal39	18		e Dimension	
	15.10	Input Overvoltage Protection41	19	-	rint Information	
	15.11	Output Power-Good Status (SWA, SWB,	20	Packir	ng Information	
		SWC, LDO_1.8V, and LDO_1.0V)41		20.1	Tape and Reel Data	
	15.12	Output Overvoltage Protection (SWA,		20.2	Tape and Reel Packing	
		SWB, and SWC)42		20.3	Packing Material Anti-ESD Property	
			21	Datasl	heet Revision History	124



## 7 Pin Configuration

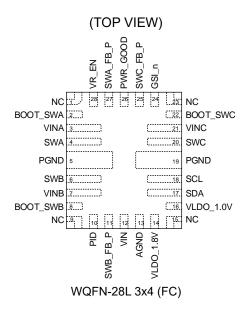

## **8 Functional Pin Description**


Pin No. Pin Name		Pin Function
1, 9, 15, 23	NC	Non-functional pins. No internal connections to the chip.
2	BOOT_SWA	Buck A bootstrap. Bootstrap node for the switch node SWA high-side NMOS driver. Connect a capacitor between SWA and BOOT_SWA to form a floating supply across the high-side switch driver of buck A.
3	VINA	Input supply of Buck A. VINA is connected to the 5V power plane on the DIMM. All three VINx input pins must be connected to 5V supply, even if one or more regulators are not intended to be used.
4	SWA	Buck A switch output. Output switch node of the SWA regulator. This pin is connected to an external inductor (L1).
5, 19	PGND	Common Power ground. Connect PGND to the DIMM ground plane. PGND pins require special consideration during PCB layout.
6	SWB	Buck B switch output. Output switch node of the SWB regulator. This pin is connected to an external inductor (L2).
7	VINB	Input supply of buck B. VINB is connected to the 5V power plane on the DIMM. All three VINx input pins must be connected to 5V supply, even if one or more regulators are not intended to be used.
8	BOOT_SWB	Buck B bootstrap. Bootstrap node for the switch node SWB high-side NMOS driver. Connect a capacitor between SWB and BOOT_SWB to form a floating supply across the high-side switch driver of buck B.
10	PID	PMIC ID pin for I <sup>2</sup> C and I3C basic bus.
11	SWB_FB_P	Positive feedback of buck B. This pin is connected to the SWB remote positive sense feedback.
12	VIN	5V power input supply to the PMIC for analog circuits.
13	AGND	Analog ground. Connect AGND to the power ground pin with a single via.
14	VLDO_1.8V	PMIC 1.8V LDO supply. Connect a 4.7μF decoupling capacitor near this pin.



Pin No.	Pin Name	Pin Function
16	VLDO_1.0V	PMIC 1.0V LDO supply for I3C push-pull driver. Connect a $4.7\mu F$ decoupling capacitor near this pin.
17	SDA	Bus data of I <sup>2</sup> C and I3C.
18	SCL	Bus clock of I <sup>2</sup> C and I3C.
20	SWC	Buck C switch output. Output switch node of the SWC regulator. This pin is connected to an external inductor (L3).
21	VINC	Input supply of Buck C. VINC is connected to the 5V power plane on the DIMM. All three VINx input pins must be connected to 5V supply, even if one or more regulators are not intended to be used.
22	BOOT_SWC	Buck C bootstrap. Bootstrap node for the switch node SWC high-side NMOS driver. Connect a capacitor between SWC and BOOT_SWC to form a floating supply across the high-side switch driver of buck C.
24	GSI_n	General status interrupt. Open-Drain Output. The PMIC asserts this pin low to communicate one or more events to the host. This pin remains asserted until the appropriate registers are explicitly cleared and the event is no longer present.
25	SWC_FB_P	Positive feedback of buck C. Switch node SWC remote positive sense feedback.
26	PWR_GOOD	Power-good indicator. This pin can be configured as an open-drain output pin or as an input pin.  • As an open-drain output pin: The PMIC allows this pin to float high when the VIN_Bulk input supply, all enabled buck output regulators, and all LDO regulators maintain the tolerance thresholds configured in the appropriate registers. The PMIC drives this pin low if the VIN_Bulk input falls below the threshold, or if any of the enabled buck output regulators or any LDO output regulator exceeds the configured threshold tolerance.  • As an input pin: The PMIC disables its output regulators when this pin is driven low; however, the LDO outputs should remain on.
27	SWA_FB_P	Positive feedback of buck A. This pin is connected to the SWA remote positive sense feedback.
28	VR_EN	PMIC Enable. When this pin is high, the PMIC turns the regulator on. Conversely, when the pin is low, the PMIC turns the regulator off. This pin should not be left floating. If unused, it should be connected to GND.



# 9 Functional Block Diagram

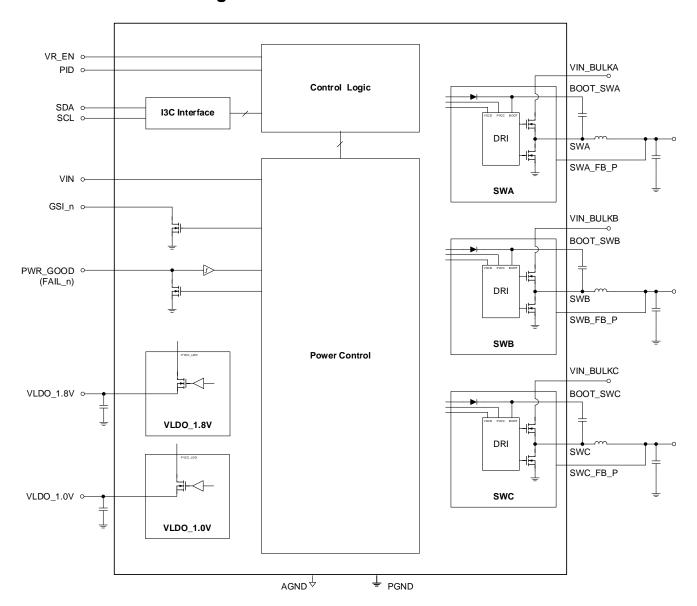



### 10 Absolute Maximum Ratings

### (Note 2)

• Supply Input Voltage, VINA, VINB, VINC	0.3V to 6V
Supply Input Voltage, VIN	0.3V to 6V
• AGND to PGND	0.3V to 0.3V
Switching PIN, SWA, SWB, SWC	
DC	0.3V to 6V
< 25ns	3V to 9V
Boot Voltage	
BOOT to SWA (BOOT-SWA)	0.3V to 6V
BOOT to SWB (BOOT-SWB)	0.3V to 6V
BOOT to SWC (BOOT-SWC)	0.3V to 6V
• Other I/O	0.3V to 6V
• Power Dissipation, PD @ TA = 25°C	
WQFN-28L 3x4 (FC)	- 2.43W
• Package Thermal Resistance (Note 3)	
WQFN-28L 3x4 (FC), θJA	- 41°C/W
WQFN-28L 3x4 (FC), θJC	- 15.8°C/W
WQFN-28L 3x4 (FC), θJB	- 8.38°C/W
Lead Temperature (Soldering, 10 sec.)	- 260°C
Junction Temperature	40°C to 155°C
Storage Temperature Range	55°C to 150°C
• ESD Susceptibility (Note 4)	
HBM	- 2kV
CDM	- 500V

- **Note 2**. Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions may affect device reliability.
- Note 3.  $\theta_{JA}$  is measured under natural convection (still air) at  $T_A$  = 25°C with the component mounted on a high effective-thermal-conductivity four-layer test board on a JEDEC 51-7 thermal measurement standard.  $\theta_{JC}$  is measured at the bottom of the package.
- Note 4. Devices are ESD sensitive. Handling precautions are recommended.

## 11 Recommended Operating Conditions

### (Note 5)

Supply Input Voltage, VINA, VINB, VINC	4.25V to 5.5V
Supply Input Voltage, VIN	4.25V to 5.5V
Junction Temperature Range	10°C to 125°C
Ambient Temperature Range	0°C to 85°C

**Note 5**. The device is not guaranteed to function outside its operating conditions.

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



## 12 Electrical Characteristics

 $(V_{IN\_SWA} = V_{IN\_SWB} = V_{IN\_SWC} = 5V, V_{IN} = 5V, T_A = -10^{\circ}C$  to  $105^{\circ}C$ , unless otherwise specified.)

Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit	
Input Supply Electrical Characteristics							
Bulk Input Supply Voltage Ramp Up Rate	VIN_Bulk_ Ramp_Up	The ramp up rate between 300 mV and 4.0V	0.1		3	V/ms	
Bulk Input Supply Voltage Ramp Down Rate	VIN_Bulk_ Ramp_Down	The ramp down rate between 4.0 V and 300mV.	0.5		1	V/ms	
(VIN) Shutdown Current	ISHDN_VIN	T <sub>A</sub> = 25°C; VIN = VIN_Bulk = 5V, VR_EN = 0, All circuitry including output regulators and LDOs are off.			25	μА	
VIN Supply Current (Non-Switching)	I <sub>Q_VIN_NSW</sub>	T <sub>A</sub> = 25°C; I <sub>OUT</sub> = 0mA, all LDO, SWA to SWC on, no switching		1.9	1	mA	
VIN Undervoltage-	Lockout and O\	/P Threshold					
VIN Undervoltage- Lockout Rising Threshold	Vin_uvlo_r	Rising edge		4		V	
VIN Undervoltage- Lockout Falling Threshold	VIN_UVLO_F	Falling edge		3.8		V	
VIN Overvoltage Rising Threshold	VIN_OVP_R	Setting by reg_0x1B"[7] = "0"		6	-	V	
I <sup>2</sup> C, I3C and Interfa	ace DC Electrica	l Specification					
SDA, SCL I <sup>2</sup> C Operate Frequency	fscl_i2C		0.01		1	MHz	
SDA, SCL I3C Operate Frequency	fscl_i3c		0.01	1	12.5	MHz	
SDA, SCL Input High Voltage	V <sub>IH_I2C</sub>		0.7		3.6	V	
SDA, SCL Input Low Voltage	V <sub>IL_I2C</sub>		-0.3		0.3	V	
PWR_GOOD Input High Voltage	VIH_PGOOD		1.26		3.6	V	
VR_EN Input High Voltage	VIH_EN		1.26		3.6	V	
PWR_GOOD Input Low Voltage	VIL_PGOOD		-0.3		0.3	V	
VR_EN Input Low Voltage	VIL_EN		-0.3		0.3	V	
PID Input High Voltage	VIH_PID		1.2			V	



Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit		
PID Input Low Voltage	VIL_PID				0.2	V		
SDA Output High Voltage	Voh_sda	I <sub>o</sub> = -3mA	0.75			V		
(SDA, GSI_n, PWR_GOOD) Output Low Voltage	VoL	I <sub>o</sub> = 3mA	I	I	0.3	V		
SDA Output High Current	IOH_SDA		-3			mA		
(SDA, GSI_n, PWR_GOOD Output Low Current	loL		1	1	3	mA		
SDA Output Pull- Up Impedance	Rpu_sda		-	40		Ω		
SDA Output Pull- Down Impedance	RPD_SDA		1	20		Ω		
GSI_n Output Pull-Down Impedance	RPD_GSI_n		1	50		Ω		
PWR_GOOD Output Pull-Down Impedance	RPD_PGOOD			50		Ω		
SWA/SWB Rail – V	/DD/VDDQ (1.1V)	) - Single Phase Regulator (0.8V to 1.	435V, ITD	CA/B =	4A/4A			
Output Voltage Setting	Vout	SWAB setting by reg_0x21"[7:1]	0.8		1.435	V		
Output Voltage Accuracy	Vout_ab_acc	IOUT = 0A, operating at CCM	-0.75		0.75	% of Vout_ AB		
VID Slew Rate	SRVID_AB			1		mV/ μs		
SWA/SWB Soft-St	art/Soft-Stop Tim	1e						
Soft-Start Time	t <sub>SS</sub>	t <sub>set</sub> = 1ms to 14ms	-15		15	% of tss		
Soft-Stop Time	t <sub>STOP</sub>	t <sub>set</sub> = 0.5ms to 4ms	-20		20	% of tstop		
SWA/SWB Interna	SWA/SWB Internal MOSFET Turn On Resistance							
On-Resistance of High-Side MOSFET	RDSON_H	T <sub>A</sub> = 25°C		16		mΩ		
On-Resistance of Low-Side MOSFET	RDSON_L	T <sub>A</sub> = 25°C		10		mΩ		

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



Parameter Symbol		Test Conditions	Min	Тур	Max	Unit	
SWA/SWB Switch	ing Frequency						
		Setting by reg_0x29"[5:4]/0x2A"[7:6] = "00" (default)	0.6375	0.75	0.8625		
Switching	f <sub>SW AB</sub>	Setting by reg_0x29"[5:4]/0x2A"[7:6] = "01"	0.85	1	1.15		
Frequency	ISW_AB	Setting by reg_0x29"[5:4]/0x2A"[7:6] = "10"	1.0625	1.25	1.4375	MHz	
		Setting by reg_0x29"[5:4]/0x2A"[7:6] = "11"	1.275	1.5	1.725		
SWA/SWB Power-	Good Indicator						
(Power Good)	V <sub>OUT_AB_PG</sub>	Setting by reg_0x21"[0]/0x25"[0] = "0" (default)		-5		% of	
Falling Threshold	OOD_F	Setting by reg_0x21"[0]/0x25"[0] = "1"		-7.5		VOUT_ AB	
(Power Good) Falling Propagation Delay	t <sub>DLY_PGOOD_</sub> F_AB			5		μS	
	Vout_ab_pg ood_r	Setting by reg_0x22"[7:6]/0x26"[7:6] = "00"		5			
(Power Good)		Setting by reg_0x22"[7:6]/0x26"[7:6] = "01" (default)		7.5		% of VOUT_ AB	
Rising Threshold		Setting by reg_0x22"[7:6]/0x26"[7:6] = "10"		10			
		Setting by reg_0x22"[7:6]/0x26"[7:6] = "11"		2.5			
(Power Good) Rising Propagation Delay	t <sub>DLY_PGOOD_</sub> R_AB			5		μs	
SWA/SWB Protec	tions						
		Setting by reg_0x22"[5:4]/0x26"[5:4] = "00"		7.5			
Output Overvoltage	V <sub>OUT_AB_OVP</sub>	Setting by reg_0x22"[5:4]/0x26"[5:4] = "01"		10		% of Vout	
Rising Threshold	_R	Setting by reg_0x22"[5:4]/0x26"[5:4] = "10" (default)		12.5		AB	
		Setting by reg_0x22"[5:4]/0x26"[5:4] = "11"		20			
Output Overvoltage Protection Propagation Delay	t <sub>DLY_OVP_AB</sub>			5		μs	



Parameter	Symbol	Test Conditions		Тур	Max	Unit	
	Vout_ab_uvp	Setting by reg_0x22"[3:2]/0x26"[3:2] = "00" (default)		-10			
Output		Setting by reg_0x22"[3:2]/0x26"[3:2] = "01"		-12.5		% of	
Undervoltage Falling Threshold	_F	Setting by reg_0x22"[3:2]/0x26"[3:2] = "10"	-	-7.5	-	Vout_ ab	
		Setting by reg_0x22"[3:2]/0x26"[3:2] = "11"	-	-20	-		
Output Undervoltage Protection Propagation Delay	t <sub>DLY_UVP_</sub> AB		ŀ	5	ŀ	μs	
SWA/SWB Curren	t Limit						
		Valley current limited Setting by reg_0x20"[7:6]/[3:2] = "00"		3			
0	ILIM_SWA/B	Setting by reg_0x20"[7:6]/[3:2] = "01"		3.5		- A	
Current Limit		Setting by reg_0x20"[7:6]/[3:2] = "10"		4			
		Setting by reg_0x20"[7:6]/[3:2] = "11" (default)		4.5	ŀ		
SWC Rail - VPP (1	I.8V) – Single Ph	ase Regulator (1.5V to 2.135V, ITDC =	= 1A)				
Output Voltage Setting	Vout_c	Setting by reg_0x27"[7:1]	1.5	1.8	2.135	V	
Output Voltage Accuracy	Vout_c_acc	IOUT = 0A, operating at CCM	-0.75		0.75	% of Vout_ C	
VID Slew Rate	SR <sub>VID_C</sub>			1		mV/μs	
SWC Soft-Start/So	oft-Stop Time						
Soft-Start Time	t <sub>SS</sub>	t <sub>set</sub> = 1ms to 14ms	-15		15	% of tss	
Soft-Stop Time	t <sub>STOP</sub>	t <sub>set</sub> = 1ms to 8ms	-20		20	% of tstop	
SWC Internal MOSFET Turn On Resistance							
On-Resistance of High-Side MOSFET	RDSON_H	TA = 25°C		55		mΩ	
On-Resistance of Low-Side MOSFET	RDSON_L	Ta = 25°C		45		mΩ	



Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit	
SWC Switching F	requency				•	•	
		Setting by reg_0x2A"[1:0] = "00"	0.6375	0.75	0.8625	MHz	
Switching	fsw c	Setting by reg_0x2A"[1:0] = "01" (default)	0.85	1	1.15		
Frequency	_	Setting by reg_0x2A"[1:0] = "10"	1.0625	1.25	1.4375		
		Setting by reg_0x2A"[1:0] = "11"	1.275	1.5	1.725		
SWC Power-Good	I Indicator						
(Power Good)	V <sub>OUT_C_PGO</sub>	Setting by reg_0x27"[0] = "0" (default)		-5		% of Vout	
Falling Threshold	OD_F	Setting by reg_0x27"[0] = "1"		-7.5		C	
(Power Good) Falling Propagation Delay	t <sub>DLY_PGOOD_</sub> F_C			5		μS	
	Vout_c_pgo	Setting by reg_0x28"[7:6] = "00"		5		% of Vout_ c	
(Power Good)		Setting by reg_0x28"[7:6] = "01" (default)		7.5			
Rising Threshold	OD_R	Setting by reg_0x28"[7:6] = "10"		10			
		Setting by reg_0x28"[7:6] = "11"		2.5			
(Power Good) Rising Propagation Delay	t <sub>DLY_PGOOD_</sub> R_C			5		μS	
SWC Protections							
		Setting by reg_0x28"[5:4] = "00"		7.5			
Output	V <sub>OUT_C_OVP_</sub>	Setting by reg_0x28"[5:4] = "01"		10		% of	
Overvoltage Rising Threshold	R	Setting by reg_0x28"[5:4] = "10" (default)		12.5		Vout_ c	
		Setting by reg_0x28"[5:4] = "11"		20			
Output Overvoltage Protection Propagation Delay	t <sub>DLY_OVP_C</sub>			5		μs	
		Setting by reg_0x28"[3:2] = "00" (default)		-10			
Output Undervoltage	V <sub>OUT_C_UVP_</sub>	Setting by reg_0x28"[3:2] = "01"		-12.5		% of Vout_ C	
Falling Threshold	F	Setting by reg_0x28"[3:2] = "10"		-7.5			
		Setting by reg_0x28"[3:2] = "11"		-20		1	



Parameter	Symbol	Test Conditions	Min	Тур	Max	Unit
Output Undervoltage Protection Propagation Delay	t <sub>DLY_UVP_</sub> C			5		μs
SWC Current Limi	t					
- ···		For Low Current, valley current limited Setting by reg_0x20"[1:0] = "00"		0.5		
Positive Inductor Valley Current	ILIM VALLEY C	Setting by reg_0x20"[1:0] = "01"		1.0		Α
Limit		Setting by reg_0x20"[1:0] = "10"		1.5		
		Setting by reg_0x20"[1:0] = "11" (default)		2.0		
VLDO_1.8V (1.8V,	IMAX = 25mA)					
		Setting by reg_0x2B"[7:6] = "00"	1.66	1.7	1.74	
Output Voltage	VLDO 1.8V	Setting by reg_0x2B"[7:6] = "01" (default)	1.76	1.8	1.84	V
	_	Setting by reg_0x2B"[7:6] = "10"	1.85	1.9	1.95	
		Setting by reg_0x2B"[7:6] = "11"	1.95	2.0	2.05	
Soft-Start Time	t <sub>SS</sub>			0.25		ms
(Power Good) Rising Threshold	V <sub>LDO_1.8</sub> V_PG OOD_R	Setting by reg_0x1A"[2] = "0"		1.6		V
(Power Good) Rising Propagation Delay	t <sub>DLY_PGOOD_</sub> R_LDO_1.8V			5		μs
Current Limit	ILIM_LDO_1.8V		50			mA
VLDO_1.0V (1.0V,	IMAX = 20mA)					
		Setting by reg_0x2B"[2:1] = "00"	0.88	0.9	0.92	
Output Voltage	VLDO 1.0V	Setting by reg_0x2B"[2:1] = "01" (default)	0.98	1.0	1.02	V
	_	Setting by reg_0x2B"[2:1] = "10"	1.08	1.1	1.12	
		Setting by reg_0x2B"[2:1] = "11"	1.18	1.2	1.22	
Soft-Start Time	t <sub>SS</sub>			0.12		ms
(Power Good)	V <sub>LDO_1.0</sub> V_PG	Setting by reg_0x1A"[0] = "0" (default)		-10		% of
Rising Threshold	OOD_R	Setting by reg_0x1A"[0] = "1"		-15		VLDO
(Power Good) Rising Propagation Delay	t <sub>DLY_PGOOD_</sub> R_LDO_1.0V			5		μs
Current Limit	ILIM_LDO_1.0V		50			mA

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# 13 Typical Application Circuit

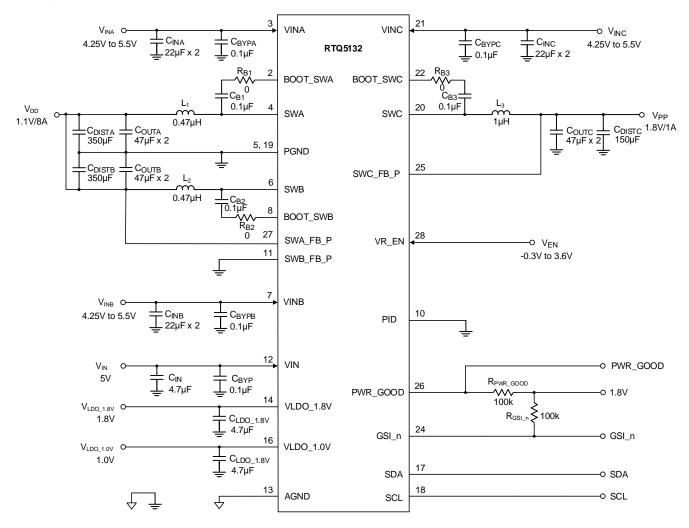


Figure 3. Typical Application Circuit When SWA and SWB Are Combined as Two-Phase, Single-Output Rail.



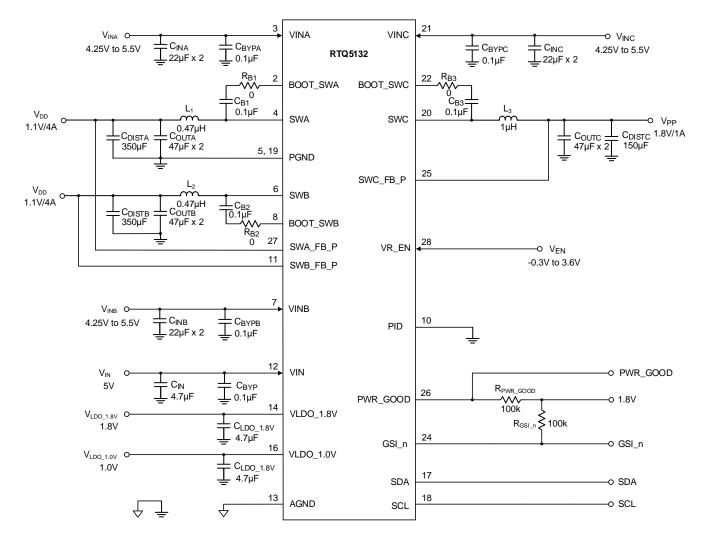


Figure 4. Typical Application Circuit When SWA and SWB Are Separated for Two Outputs.



### 13.1 Recommended Component Selection for Typical Application Circuit

**Suggested Components for SWA and SWB** 

ouggottu componente les estricula esta						
Component	Value	Physical Size	Part No.			
L1, L2	0.47μΗ	3.2 x 2.5 x 1.2	HTTD32251BR47MMR/GLVQMR4701A			
L1, L2	0.68μΗ	3.2 x 2.5 x 1.2	HTTD32251BR68MMR/GLVQMR6801A			
Свурх	0.1μF	10V; 0201	GRM033C81E104KE14			
CINX	22μF (x2)	10V; 0603	GRM188R61A226ME15			
Соитх	47μF (x2)	6.3V; 0603	GRM188R60J476ME01			

**Suggested Components for SWC** 


Component	Value	Physical Size	Part No.			
L3	1.0μΗ	2.5 x 2.0 x 1.2	HTTD25201B1R0MSR/GLULM1R001A/DFE252012P-1R0M			
L3	1.5μΗ	2.5 x 2.0 x 1.2	HTTD25201B1R5MSR/GLULM1R501A/MEMK2520D1R5ML			
Свурс	0.1μF	10V; 0201	GRM033C81E104KE14			
CINC	22μF (x2)	10V; 0603	GRM188R61A226ME15			
Соитс	47μF (x2)	6.3V; 0603	GRM188R60J476ME01			


Suggested Components for VLDO\_1.8V and VLDO\_1.0V


Component	Value	Physical Size	Part No.
Свур	0.1μF	10V; 0201	GRM033C81E104KE14
Cin	4.7μF	10V; 0402	GRM155R61A475MEAA
CLDO_1.8V	4.7μF	6.3V; 0402	GRM155R60J475ME47
CLDO_1.0V	4.7μF	6.3V; 0402	GRM155R60J475ME47





## 14 Typical Operating Characteristics

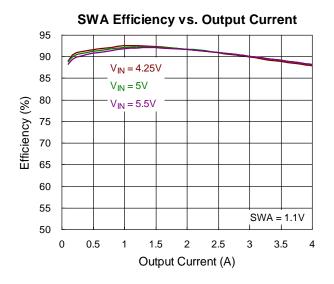


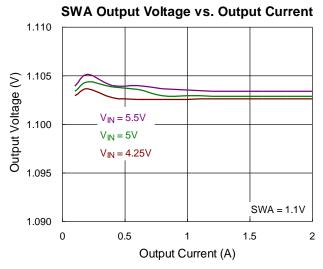

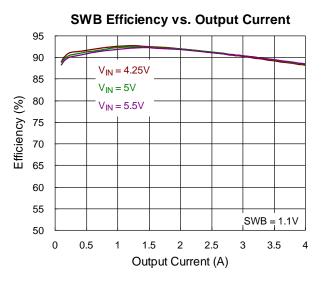

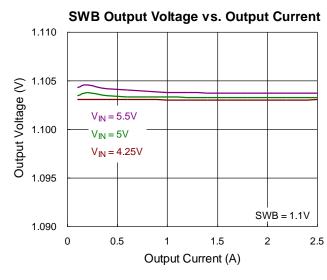


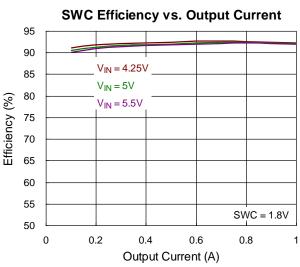

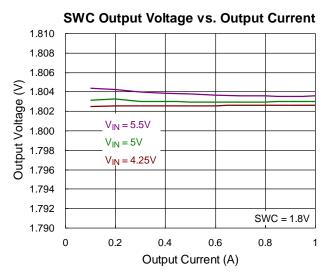


Copyright © 2024 Richtek Technology Corporation. All rights reserved.



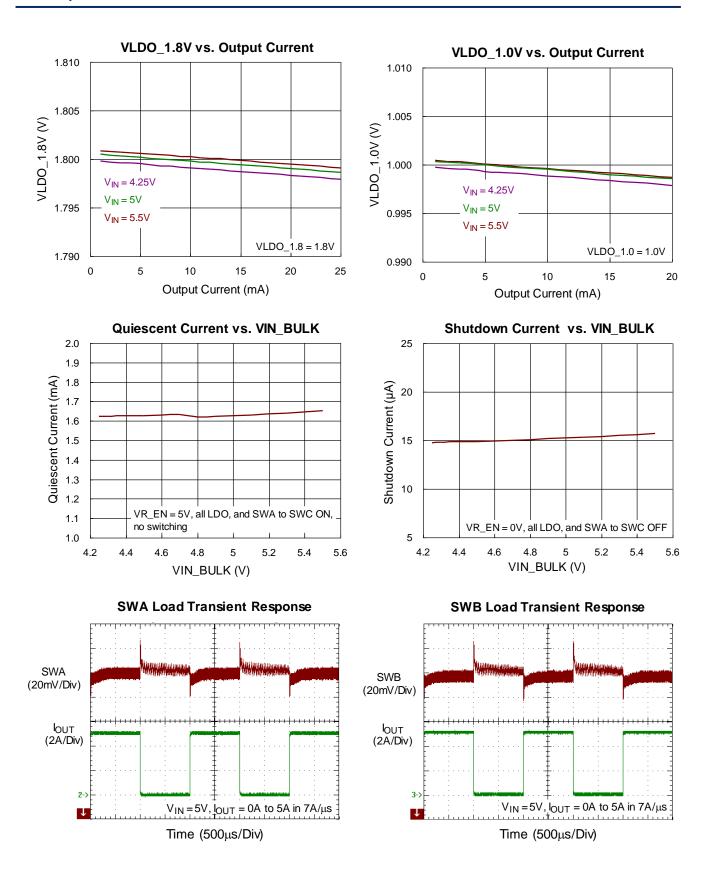




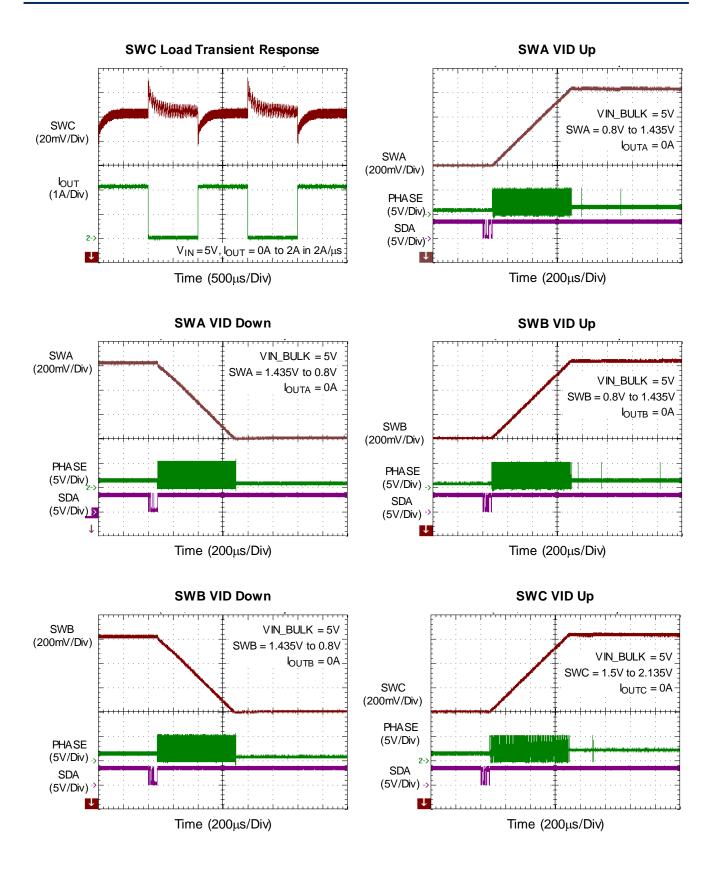


Copyright © 2024 Richtek Technology Corporation. All rights reserved.



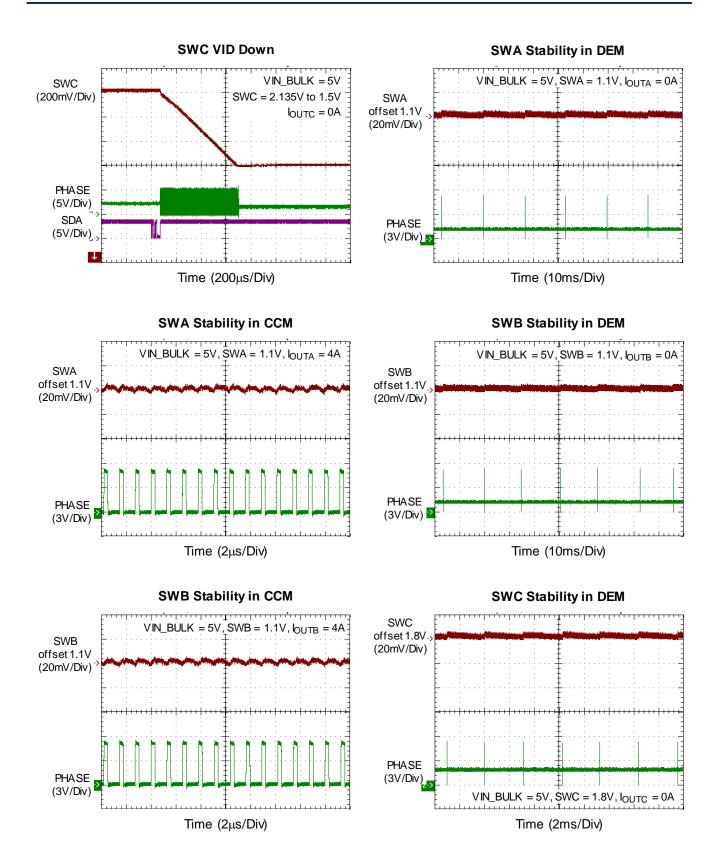


2024



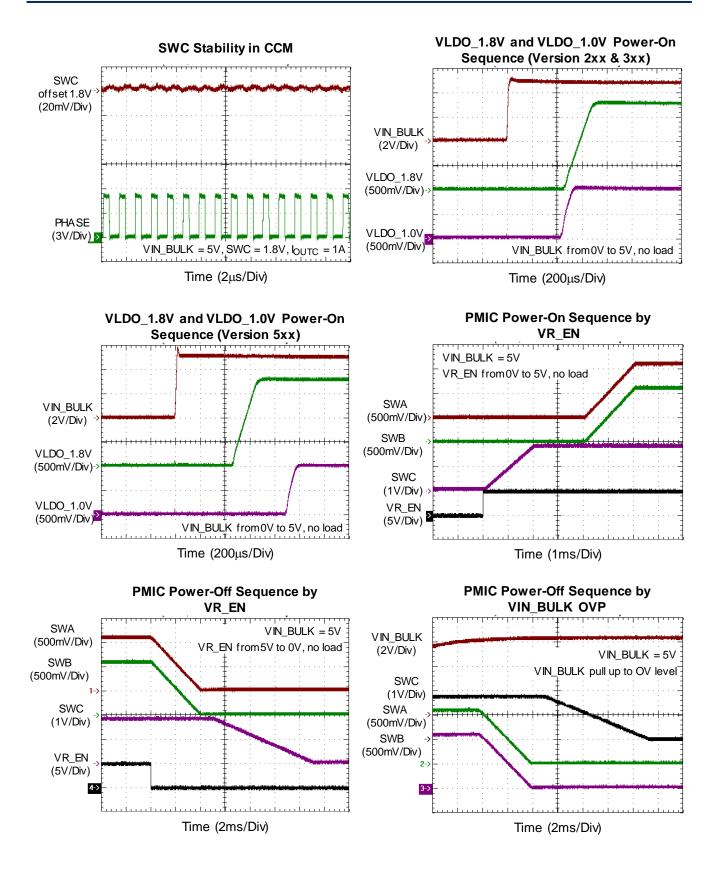



Copyright © 2024 Richtek Technology Corporation. All rights reserved.




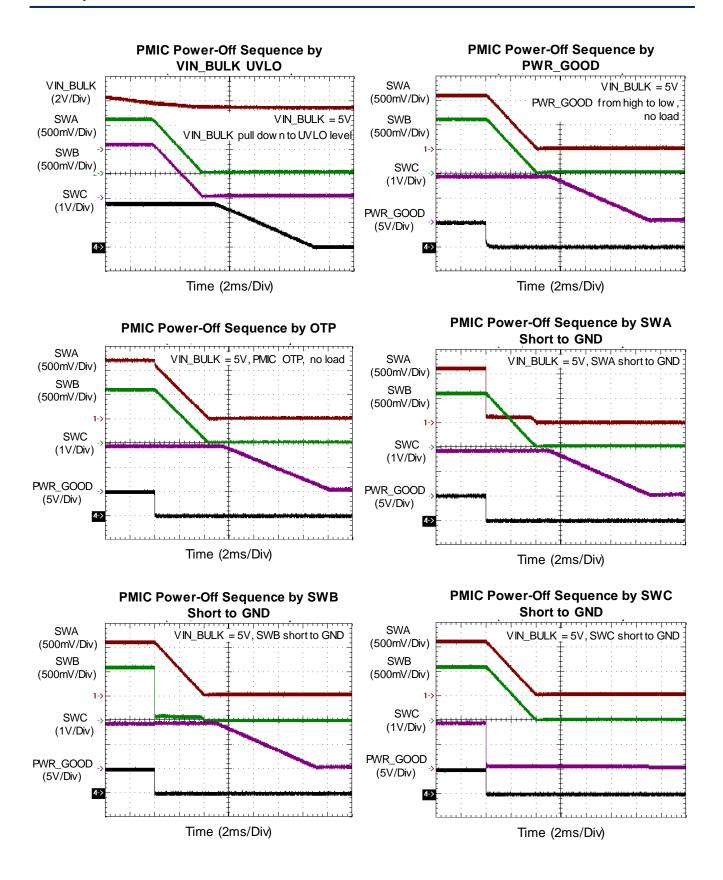



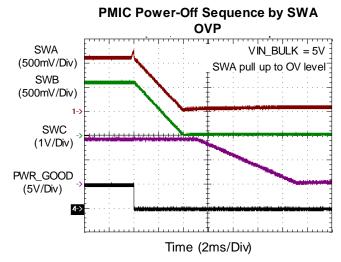

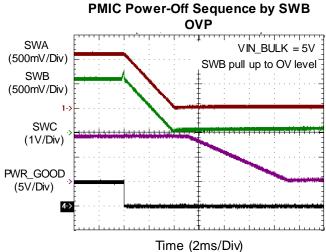

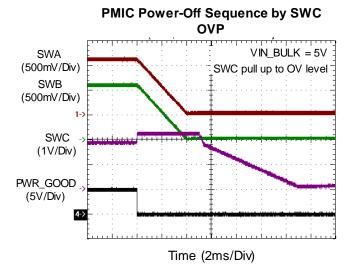

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



### 15 Operation

### 15.1 PMIC Input Voltage Supply and Ramp Condition

The VIN Bulk supply is used by the RTQ5132 for all three switch (SWA, SWB, and SWC) output regulators and two LDO output (VLDO 1.8V and VLDO 1.0V) regulators. Note that the VLDO 1.8V LDO output is separate and independent from the SWC output, which is for the DRAM VPP rail. The VLDO 1.0V LDO output is separate and independent from SWA or SWB.

At the first power-on, the VIN Bulk input supply should reach a minimum threshold voltage of 4.25V before it can be detected as a valid input supply by the RTQ5132.

Once the VIN Bulk supply is valid and stable, the RTQ5132 should assert the PWR GOOD output low and drive VLDO\_1.8V and VLDO\_1.0V supplies within t1.8V\_Ready (typically 500μs) and t1.0V\_Ready (typically 500μs) time, respectively. The RTQ5132 only drives the PWR\_GOOD output signal low when the VIN\_Bulk input supply reaches a minimum of 4.25V. The PWR\_GOOD output is pulled up to either 1.8V or 3.3V on the platform or the host controller.

The PWR GOOD pull-up voltage (either 1.8V or 3.3V) is available before or after the VIN Bulk is valid and stable. If the PWR\_GOOD pull-up voltage is available before the VIN\_Bulk is applied, the PWR\_GOOD signal is high. When the VIN\_Bulk is applied to the RTQ5132, the RTQ5132 asserts the PWR\_GOOD output low.

The RTQ5132 should enable the  $I^2C/I3C$  bus interface function within tManagement\_Ready (maximum = 3ms). The user should not attempt to access the RTQ5132's memory registers until the tManagement\_Ready timing requirement is satisfied.

During power-on, the user should:

- 1. Ramp up the VIN\_BULK supply.
- 2. Hold the VIN Bulk supply stable for a minimum of tVIN Bulk to VR Enable time (minimum = 6.5ms).
- 3. Keep the VR\_EN pin static, either low or high.
- 4. If the VR EN signal is held low during the VIN Bulk ramp, it may transition to high only once. Once high, it should remain high. The VR\_EN signal is not allowed to transition to low during the VIN\_Bulk ramp-up.
- 5. If the VR\_EN pin is held high during the VIN\_Bulk ramp-up, or transitions to high, the RTQ5132 turns on its output rails.
- 6. If the VR EN pin is held low during the VIN Bulk ramp, assert the VR EN signal high to turn on the RTQ5132 output rails. Alternatively, the user can issue a VR Enable command by setting the register, Register 0x32[7] = 1, via I<sup>2</sup>C/I3C basic bus or via DEVCTRL CCC to turn on the RTQ5132 output rails.

Figure 6 to Figure 8 show examples of the PMIC power-up initialization sequence. Note that the specific sequence of ramping the output regulators (SWA, SWB, and SWC) is for example purposes only. The specific ramp-up sequence is configurable through power-on sequence configuration registers.

After the VR Enable command is registered on the I<sup>2</sup>C or I3C basic bus, or the VR EN pin is registered high, the RTQ5132 should complete the following steps within tPMIC\_PWR\_GOOD\_OUT:

- 1. Check that the VIN Bulk Power-Good status is valid.
- 2. Power up itself the RTQ5132 executes Power-On Sequence Config0 to Power-On Sequence Config2 registers and configures its internal registers as programmed in the DIMM vendor's memory space registers.
- 3. Power up all enabled output switch regulators and prepare for normal operation.
- 4. Update status registers "Register 0x08" [5,3:2] and float the PWR GOOD signal within a maximum of the tPMIC\_PWR\_GOOD\_OUT time.

If the RTQ5132's PWR GOOD signal is not floated within the tPMIC PWR GOOD OUT time, the user can



access the RTQ5132 status registers for detailed information after the tPMIC\_PWR\_GOOD\_OUT time. The RTQ5132 may issue a NACK (Negative-Acknowledge) to any host request on the I<sup>2</sup>C or I3C basic bus after the VR Enable command (either with the VR\_EN pin set high or via the I2C/I3C basic bus) until the tPMIC\_PWR\_GOOD\_OUT time expires.

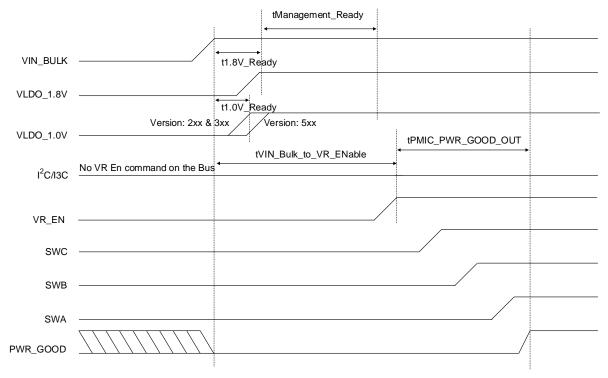


Figure 5. Power-Up Sequence; VR\_EN Pin High After VIN\_Bulk Ramp; No Bus Command

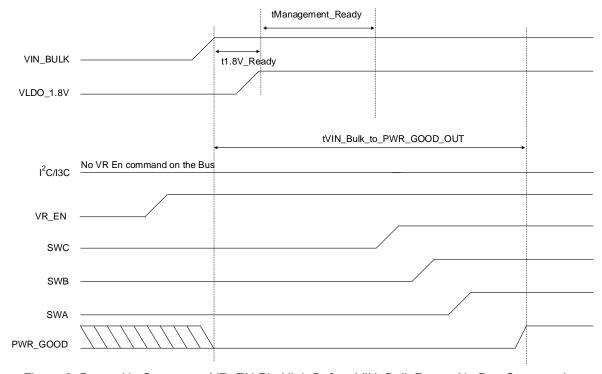


Figure 6. Power-Up Sequence; VR\_EN Pin High Before VIN\_Bulk Ramp; No Bus Command

DSQ5132-07 October 2024 www.richtek.com

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation

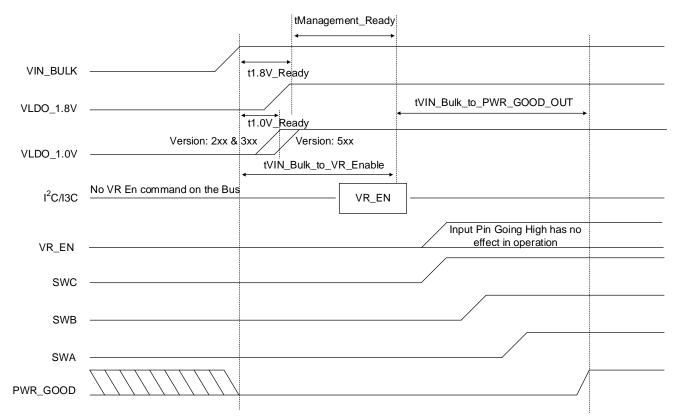


Figure 7. PMIC Power Up Sequence with VR\_EN Pin Followed by Bus Command

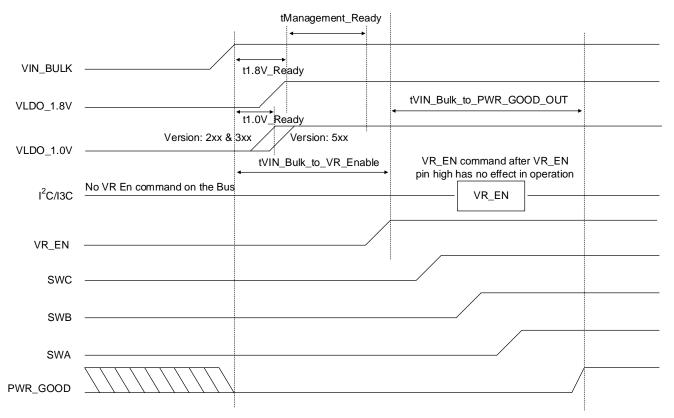


Figure 8. PMIC Power-Up Sequence with VR\_EN Pin Followed by Bus Command

DSQ5132-07



### 15.2 Enabling PMIC Output Switch Voltage Regulators

<u>Figure 9</u> illustrates the timing relationship when the RTQ5132 receives a VR Enable command (either via the VR\_EN pin or on the I<sup>2</sup>C/I3C basic bus) and subsequently floats the PWR\_GOOD output signal. The timing parameter tPMIC\_PWR\_GOOD\_OUT applies here. This parameter represents the sum of the maximum soft-start time, the delay configured for each power-on sequence configuration register executed, plus an additional timing margin error of 5ms. The waveform indicates the soft-start time for each buck regulator output, as well as the delay time once the soft-start period concludes for each power-on sequence, from config0 to config2 registers.

It is important to note that if more than one regulator is enabled in a power-on sequence config register, and these regulators have different programmed soft-start times, the longest soft-start time will be used as the reference for the delay timer to initiate. However, each regulator will still adhere to its distinct soft-start time for powering on the buck regulator.

In <u>Figure 9</u>, three power-on sequence config registers (config0 to config2) are used, and only one buck regulator is enabled in each of these registers.

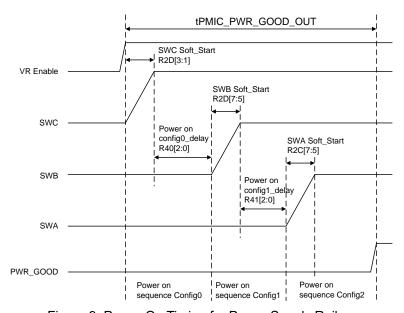


Figure 9. Power On Timing for Power Supply Rails

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



### 15.3 Secure Mode and Programmable Mode of Operation

Before issuing a VR Enable command (using the VR\_EN pin or via the I<sup>2</sup>C/I3C basic bus), the host must appropriately configure Register 0x2F [2] as required. Once the VR Enable command is received, the RTQ5132 offers two modes of operation:

- 1. Programmable Mode: Regardless of when the VR Enable command is issued, the RTQ5132 permits the host to modify any register in the host region, and the PMIC responds accordingly.
- 2. Secure Mode: Following the issuing of the VR Enable command, the RTQ5132 prohibits modification to certain registers, including Register 0x15 to Register 0x2F, Register 0x32 [7,5:0] in the host region, and Register 0x40 to Register 0x6F in the DIMM vendor region. These registers are write-protected. To make any changes, the host must power cycle the RTQ5132, defined as completely removing the VIN Bulk input supply to the RTQ5132. This definition is consistent throughout the entire specification.

Note that Secure Mode becomes relevant only after the VR Enable command has been registered. By default, Register 0x2F [2] is set to '0' when the RTQ5132 is first powered up. Before the VR Enable command is issued, the RTQ5132 permits modifications to any registers in the host region.

#### 15.4 Power Down Output Regulators

The RTQ5132 powers down its output regulators based on its mode of operation, regardless of whether the output regulators are activated using the VR\_EN pin or a VR Enable command on the I2C/I3C basic bus. The powerdown is described in the following sub-sections:.

### Programmable Mode Operation; 0x1A[4] = '0'

The RTQ5132 allows the user to power down any or all output regulators using any of the three methods below:

- 1. The VR Disable command (setting Register 0x32[7] to '0' or transitioning the VR\_EN pin to low) triggers the RTQ5132 to execute the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) in order to maintain the appropriate voltage relationships as configured in the registers. The RTQ5132 then controls the PWR\_GOOD signal as follows in points (1) and (2):
  - (1) If the VR Disable command is initiated by a pin transition (the VR EN pin transitioning to Low), the RTQ5132 asserts the PWR GOOD signal to Low. The host can re-enable the RTQ5132's output regulators by transitioning the VR EN pin to High. After this transition, the RTQ5132 will execute the power-on sequence from config0 to config2 registers and will float the PWR\_GOOD signal once the tPMIC\_PWR\_GOOD\_OUT timing parameter is met.
  - (2) If the VR Disable command is issued on an I<sup>2</sup>C/I3C bus (setting Register 0x32[7] to '0'), the RTQ5132 keeps the PWR GOOD signal floating. This indicates an intentional command from the host rather than a fault condition. The host can re-enable the RTQ5132's output regulators by issuing a VR EN command on the I<sup>2</sup>C/I3C bus (setting Register 0x32[7] to '1'). The RTQ5132 then executes the power-on sequence from config0 to config2 registers, continuing to float the PWR GOOD signal until the tPMIC PWR GOOD OUT time is satisfied. At that point, the RTQ5132 assumes normal control of the PWR\_GOOD signal.

Simultaneous use of the VR\_EN pin and the I<sup>2</sup>C/I3C bus command to control the RTQ5132 is not permitted. If the VR\_EN pin transitions to Low first, the PWR\_GOOD signal responds as described in point (1) and remains low even if a subsequent I<sup>2</sup>C/I3C bus command is issued, as mentioned in point (2).

2. Configuring one or more bits in Register 0x2F[6,4:3] to '0' allows the user to determine a specific sequence. The RTQ5132 will not automatically execute the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A). It maintains the PWR\_GOOD signal in a floating state because this represents an intentional



command by the user rather than a fault condition. Note that the user can re-enable any disabled output regulators by setting one or more bits in Register 0x2F[6,4:3] to '1', following any specific sequence they prefer. During this process, the PWR\_GOOD signal remains floating.

3. If Register 0x32[5] = '1', driving PWR\_GOOD input low. The RTQ5132 executes power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers and drives the PWR\_GOOD signal low. The RTQ5132 preserves all register contents, including the MTP error log registers. If the user re-enables RTQ5132's output regulators by issuing the VR\_EN command on the I<sup>2</sup>C/I3C basic bus (setting Register 0x32[7] = '1'), the RTQ5132 executes the power-on sequence from config0 to config2 registers and floats the PWR\_GOOD output signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied. The RTQ5132 does not require a power cycle.

The RTQ5132, can generate an internal VR Disable command at any time due to one or more events listed in <u>Table 3</u>. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. The RTQ5132 asserts the PWR\_GOOD signal low. The user can re-enable RTQ5132's output regulators with a VR Enable command by either setting Register 0x32[7] ='1' or transitioning the VR\_EN pin to high. The RTQ5132 then turns on its output regulators and floats the PWR\_GOOD signal. The RTQ5132 does not require a power cycle.

### 15.4.2 Programmable Mode Operation; 0x1A[4] = '1'

The RTQ5132 allows the user to power down any or all output regulators by any of the three methods below:

- 1. The VR Disable command (Register 0x32[7] ='0' or VR\_EN pin transitions to low): The RTQ5132 executes the power-off sequence config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers and enters the P1 state. The RTQ5132 controls the PWR\_GOOD signal as follows in (1) and (2):
  - (1) If the VR Disable command comes with a pin (VR\_EN transitions to Low), the RTQ5132 asserts the PWR\_GOOD signal Low. The user can re-enable the RTQ5132's output regulators by transitioning the VR\_EN pin to High. The RTQ5132 exits the P1 state and executes the power-on sequence from config0 to config2 registers and floats the PWR\_GOOD signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied.
  - (2) If the VR Disable command is issued via a I<sup>2</sup>C/I3C basic bus (Register 0x32[7] ='0'), the RTQ5132 keeps the PWR\_GOOD signal floating because this is an intentional command from the user and not a fault condition. The RTQ5132 exits from the P1 state with only the VR\_EN pin transition to High. The user can re-enable the RTQ5132's output regulators by transitioning the VR\_EN pin to High, and the RTQ5132 executes the power-on sequence from config0 to config2 registers. The RTQ5132 continues to float the PWR\_GOOD signal until the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied, at which point the RTQ5132 assumes normal control of the PWR\_GOOD signal.
  - (3) The simultaneous usage of the VR\_EN pin and I<sup>2</sup>C/I3C bus command to turn on/off the RTQ5132 is not allowed. If the VR\_EN pin transitions to Low first, the PWR\_GOOD signal follows as described in (1) and the PWR\_GOOD signal remains low even if there is a subsequent I<sup>2</sup>C/I3C bus command as described in (2).
- 2. Configure one or more bits in Register 0x2F [6, 4:3] to '0' in any specific sequence desired by the user. The RTQ5132 does not execute the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) on its own. The RTQ5132 keeps the PWR\_GOOD signal floating because this is an intentional command from the host and not a fault condition. Note that the user can re-enable any of the disabled output regulators by configuring one or more bits in Register 0x2F[6, 4:3] to '1' in any specific sequence desired by the host. The RTQ5132 keeps the PWR\_GOOD signal floating.

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



3. If Register 0x32[5] = '1', the PWR GOOD input is driven low. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers and drives PWR GOOD signal low. The RTQ5132 preserves all register contents, including the MTP error log registers. The RTQ5132 does not enter the P1 state. If the user re-enables the RTQ5132's output regulators by issuing the VR EN command on the  $I^2C/I3C$  Basic bus (Register 0x32[7] = '1'), the RTQ5132 executes power-on sequence from config0 to config2 registers and floats the PWR\_GOOD signal after the tPMIC PWR GOOD OUT timing parameter is satisfied. The RTQ5132 does not require a power cycle.

The RTQ5132 can generate an internal VR Disable command at any time due to one or more events listed in Table 3. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. The RTQ5132 does not enter the P1 state. The RTQ5132 asserts the PWR\_GOOD signal low. The user can re-enable RTQ5132's output regulators with the VR Enable command by setting either Register 0x32[7] = '1' or transitioning the VR\_EN pin to high. The RTQ5132 turns on its output regulators and sets the PWR\_GOOD signal to float. The RTQ5132 does not require a power cycle.

#### 15.4.3 Secure Mode Operation; R1A[4] = '0'

The RTQ5132 allows the user to power down any or all output regulators by either of the two methods below:

- 1. The VR Disable command with the VR EN pin transitions to low. The RTQ5132 asserts the PWR GOOD signal to Low. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. The user can re-enable the RTQ5132's output regulators by transitioning the VR EN pin to High. The RTQ5132 executes the power-on sequence from config0 to config2 registers and floats the PWR\_GOOD signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied. The RTQ5132 does not require a power cycle. Note that the VR Disable or Enable command on a I<sup>2</sup>C/I3C basic bus (for example, Register 0x32[7] = '0' or '1') has no effect on the RTQ5132. Also, configuring one or more bits in Register 0x2F[6, 4:3] to '0' has no effect on the RTQ5132.
- 2. If Register 0x32[5] ='1', the PWR GOOD input is driven low. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. It drives the PWR GOOD signal low and unlocks only Register 0x32[7]. The RTQ5132 preserves all register contents, including the MTP error log registers and keeps all write protect registers locked except for the Register 0x32[7]. When the user issues a VR Enable command by I<sup>2</sup>C/I3C basic bus, the RTQ5132 executes the power-on sequence from config0 to config2 registers, floats the PWR GOOD output signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied, and re-locks register Register 0x32[7]. The RTQ5132 does not require a power cycle to re-enable RTQ5132's output regulators.

The RTQ5132 can generate an internal VR Disable command at any time due to one or more events listed in Table 3. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. The RTQ5132 asserts the PWR\_GOOD signal low. The RTQ5132 requires a power cycle. The VR Enable command, with Register 0x32[7] = '1', or the VR EN pin transitioning to high, has no effect on the RTQ5132, and the RTQ5132 keeps its PWR GOOD signal low.



### 15.4.4 Secure Mode Operation; 0x1A[4] = '1'

The RTQ5132 allows the user to power down any or all output regulators by either of the two methods below:

- 1. The VR Disable command with the VR\_EN pin transitions to low. The RTQ5132 asserts the PWR\_GOOD signal Low. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers and enters the P1 state. The user can re-enable the RTQ5132's output regulators by transitioning the VR\_EN pin to High. The RTQ5132 exits the P1 state and executes the power-on sequence from config0 to config2 registers, and floats the PWR\_GOOD signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied. Note that the VR Disable or Enable command on an I<sup>2</sup>C/I3C basic bus (for example, Register 0x32[7] = '0' or '1') has no effect on the RTQ5132. Also, configuring one or more bits in Register0x2F[6, 4:3] to '0' has no effect on the RTQ5132.
- 2. If Register 0x32[5] ='1', the PWR\_GOOD input is driven low. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. It drives the PWR\_GOOD signal low and unlocks only Register 0x32[7]. The RTQ5132 preserves all register contents, including the MTP error log registers and keeps all write protect registers locked except for the Register 0x32[7]. When the user issues the VR Enable command by the I<sup>2</sup>C/I3C basic bus, the RTQ5132 executes the power-on sequence from config0 to config2 registers, floats the PWR\_GOOD output signal after the tPMIC\_PWR\_GOOD\_OUT timing parameter is satisfied, and re-locks Register 0x32[7]. The RTQ5132 does not require a power cycle to re-enable RTQ5132's output regulators.

The RTQ5132 can generate an internal VR Disable command at any time due to one or more events listed in <u>Table 3</u>. The RTQ5132 executes the power-off sequence from config0 (Register 0x58) to config2 (Register 0x5A) to preserve the appropriate voltage relationship as configured in the registers. The RTQ5132 does not enter the P1 state. The RTQ5132 asserts the PWR\_GOOD signal low. The RTQ5132 requires a power cycle. The VR Enable command, with either Register 0x32[7] = '1', or the VR\_EN

pin transitioning to high, has no effect on the RTQ5132 and the RTQ5132 keeps its PWR GOOD signal low.

#### 15.5 PMIC Output Rail Off Timing

Figure 10 shows the timing relationship once the RTQ5132 registers receive a VR Disable command internally due to a fault condition, as listed in Events Interrupt Summary. The waveform shows soft-stop time and delay time for each buck regulator output once the soft-stop time expires from each power-off sequence config0 to power-off sequence config2 registers. Note that if more than one regulator is disabled in a power-off sequence config register and these regulators have different programmed soft-stop times, then the larger soft-stop time value is used as a reference for the delay timer to start. Each regulator will still follow different soft-stop time to turn off the buck regulator.

The specific example in <u>Figure 12</u> uses only three power-off sequence config0 to config2 registers and only one buck regulator is disabled in each of the power-off sequence config0, config1, and config2 registers.

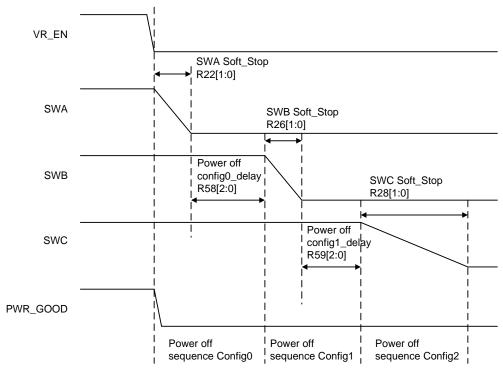


Figure 10. PMIC Power Off Timing Due to Internal Fault Condition

### 15.6 GSI n Signal

The RTQ5132 features a general-purpose interrupt, GSI\_n, for signaling any event to the user. The GSI\_n is an open-drain output pin that needs an external pull-up resistor (~10kΩ) to 3.3V or 1.8V.

The interrupts are active Low "latched" signals. When an interrupt event occurs in the RTQ5132, a low level is output on the corresponding interrupt pin.

The interrupt pin is held low until both of the following requirements are met:

- 1. The condition causing the interrupt (or any other condition that has occurred since) no longer persists.
- 2. The register is cleared through an I<sup>2</sup>C or I3C write to the clear bit.

All warning status bits are latched to '1' based on their condition occurring. The latch remains at '1' until the corresponding clear bit is written with a '1'. If an exception bit is cleared, but the condition continues to persist, a new interrupt will be generated as if it is a new condition.

When the GSI\_n signal is asserted, the RTQ5132 continues to operate normally.

The user can guery the appropriate status registers to determine and isolate the cause of the GSI\_n signal assertion.

2024



Table 1. Summary of GSI\_n Assertion Events

No	Event Description
1	Input (VIN_BULK) Power-Good status.
2	Input (VIN_BULK) Overvoltage protection.
3	Output (SW[A:C] or VLDO_1.8V, VLDO_1.0V) Power-Good status.
4	Output (SW[A:C]) Overvoltage protection.
5	Output (SW[A:C]) Undervoltage-Lockout protection.
6	LDO Output or VIN_BULK Input Undervoltage-Lockout protection.
7	Output (SW[A:C]) Current Limiter Warning event.
8	Output (SW[A:C]) High Current Consumption Warning event.
9	PMIC High Temperature Warning status.
10	PMIC Critical Temperature protection.
11	PEC Error.
12	Parity Error.

#### 15.7 Power State Definition

This section provides detailed definitions for Quiescent Power State and Idle Power State.

Table 2 describes the definition for each power state, including the conditions and characteristics of each state, to help understand how to efficiently transition between different power modes.

#### 15.7.1 Quiescent Power State

- VIN\_Bulk nominal = 5.0V.
- All circuits including the RTQ5132 switch output and LDO output regulators are off.
- The VR\_EN signal is at a static low or high level.
- The I<sup>2</sup>C or I3C basic interface access is not allowed and is pulled high.
- The PID signal is at a static low or high level.

This state is only applicable if Register 0x1A[4] = '1'. This state is labeled as P1 state below.

#### 15.7.2 **Idle Power State**

- VIN Bulk nominal = 5.0V.
- All circuits including the RTQ5132 switch output and LDO output regulators are on with 0A load.
- The VR\_EN signal is at a static low or high level.
- The I<sup>2</sup>C or I3C basic interface access is allowed but the bus is pulled high.
- The PID signal is at static low or high level.

This state is only applicable if Register 0x1A[4] = '0'. This state is the same as the P3 state, but the load on all switch output regulators and LDO output regulators is 0A.

**Table 2. Power State Definition** 

State	Description					
P0	1. VIN_Bulk is invalid					
P1	<ol> <li>0x1A[4] = '1'</li> <li>Entry from P3 State Only</li> </ol>					
P2_B	<ol> <li>Transition from P0 or P1 State; Before VR Enable Command</li> <li>All Switch Regulators are OFF</li> <li>All LDOs are ON</li> <li>PWR_GOOD Output = L</li> <li>VR_EN Input = L</li> <li>0x32[7] = '0'</li> </ol>					
P2_A1 (No Fault Event)	<ol> <li>Transition from P3; After VR Enable Command</li> <li>All Switch Regulators are OFF</li> <li>All LDOs are ON</li> <li>PWR_GOOD Output = L or H</li> <li>VR_EN Input = L or H</li> <li>0x32[7] = '0'</li> </ol>					
P2_A2 (Fault Event)	<ol> <li>Transition from P3; After VR Enable Command</li> <li>All Switch Regulators are OFF</li> <li>All LDOs are ON</li> <li>PWR_GOOD Output = L</li> <li>VR_EN Input = L or H</li> <li>0x32[7] = '0'</li> </ol>					
P3 (Regulation Mode or Bulk Control Link Monitor Mode)	<ol> <li>All Switch Regulators are ON</li> <li>0x32[7] = '1'</li> </ol>					

### 15.8 Function Interrupts for PWR\_GOOD and GSI\_n Output Signals

This section defines the output functionality of the GSI\_n pin and the PWR\_GOOD pin.

When the mask register bits are not set, the RTQ5132 asserts its GSI\_n output and PWR\_GOOD output signals as shown in Table 3 when any event occurs. The table also lists 9 events that cause the RTQ5132 to generate an internal VR Disable command. For other events that do not trigger an internal VR Disable command, the RTQ5132 continues to operate normally.

**Table 3. Events Interrupt Summary** 

Status Event	Status Bit	Clear Bit	Mask Bit	Threshold Setting	VR Disable Trigger?	PWR_GOOD Output	GSI_n
VIN_BULK Overvoltage	0x08[0]	0x10[0]	0x15[0]	0x1B[7]	Yes	Low	Low



Status Event	Status Bit	Clear Bit	Mask Bit	Threshold Setting	VR Disable Trigger?	PWR_GOOD Output	GSI_n
SWA Output Power Good	0x08[5]	0x10[5]	0x15[5]	0x21[1:0], 0x22[7:6]	No	Low	Low
SWB Output Power Good	0x08[3]	0x10[3]	0x15[3]	0x25[1:0], 0x26[7:6]	No	Low	Low
SWC Output Power Good	0x08[2]	0x10[2]	0x15[2]	0x27[1:0], 0x28[7:6]	No	Low	Low
1.8V LDO Power Good	0x09[5]	0x11[5]	0x16[5]	0x1A[2]	No	Low	Low
1.0V LDO Power Good	0x33[2]	0x14[2]	0x19[2]	0x1A[0]	No	Low	Low
SWA Output Overvoltage	0x0A[7]	0x12[7]	0x17[7]	0x22[5:4]	Yes	Low	Low
SWB Output Overvoltage	0x0A[5]	0x12[5]	0x17[5]	0x26[5:4]	Yes	Low	Low
SWC Output Overvoltage	0x0A[4]	0x12[4]	0x17[4]	0x28[5:4]	Yes	Low	Low
SWA Output Undervoltage	0x0B[3]	0x13[3]	0x18[3]	0x22[3:2]	Yes	Low	Low
SWB Output Undervoltage	0x0B[1]	0x13[1]	0x18[1]	0x26[3:2]	Yes	Low	Low
SWC Output Undervoltage	0x0B[0]	0x13[0]	0x18[0]	0x28[3:2]	Yes	Low	Low
VIN_BULK Input Undervoltage				3.8V	Yes	Low	Low
SWA Output Current Limit	0x0B[7]	0x13[7]	0x18[7]	0x20[7:6]	No	High	Low
SWB Output Current Limit	0x0B[5]	0x13[5]	0x18[5]	0x20[3:2]	No	High	Low
SWC Output Current Limit	0x0B[4]	0x13[4]	0x18[4]	0x20[1:0]	No	High	Low
SWA Output High Current /Power	0x09[3]	0x11[3]	0x16[3]	0x1C[7:2]	No	High	Low
SWC Output High Current /Power	0x09[0]	0x11[0]	0x16[0]	0x1F[7:2]	No	High	Low
High Temperature Warning	0x09[7]	0x11[7]	0x16[7]	0x1B[2:0]	No	High	Low
Critical Temperature	0x08[6]			0x2E[2:0]	Yes	Low	Low
PEC Error	0x0A[3]	0x12[3]	0x17[3]	N/A	No	High	Low
Parity Error	0x0A[2]	0x12[2]	0x17[2]	N/A	No	High	Low

The user is expected to read appropriate status registers to determine and isolate the cause of the GSI\_n signal

Copyright © 2024 Richtek Technology Corporation. All rights reserved. DSQ5132-07 October 2024



assertion or the PWR\_GOOD signal assertion. The user may attempt to clear or mask the corresponding interrupt event. The RTQ5132 keeps the GSI\_n signal or the PWR\_GOOD signal asserted until the corresponding registers are explicitly cleared or masked by the user.

<u>Table 4</u> and <u>Table 5</u> show the RTQ5132's response to the GSI\_n signal and the PWR\_GOOD output signal for each event before and after the user issues the Clear command.

Table 4 and Table 5 assume that all mask bits are either '0' or '1' for simplicity.

Table 4. RTQ5132 Response for Clear Command by Host (Part I)

	Event Occurred; All Mask Bits = "0"		Clear Command; Event Not Present; All Mask Bits = "0"		Event Occurred; All Mask Bits = "1"		Clear Command; Event Not Present; All Mask Bits = "1"	
Event			0x2F[1:0] = "00" or "01" or "10"		0x2F[1:0] = "00"		0x2F[1:0] = "00"	
	PWR_GO OD Output	GSI_n Output	PWR_GO OD Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output
VIN_BULK Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWA Output Power Good	Low	Low	High	High	Low	High	High	High
SWB Output Power Good	Low	Low	High	High	Low	High	High	High
SWC Output Power Good	Low	Low	High	High	Low	High	High	High
1.8V LDO Power Good	Low	Low	High	High	Low	High	High	High
1.0V LDO Power Good	Low	Low	High	High	Low	High	High	High
SWA Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWB Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWC Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWA Output Undervoltage	Low	Low	Low	High	Low	High	Low	High



	Event Occurred; All Mask Bits = "0"		Clear Command; Event Not Present; All Mask Bits = "0"		Event Occurred; All Mask Bits = "1"		Clear Command; Event Not Present; All Mask Bits = "1"	
Event			0x2F[1:0] = 0 or "		0x2F[1:0	o] = "00"	0x2F[1:0] = "00"	
	PWR_GO OD Output	GSI_n Output	PWR_GO OD Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output
SWB Output Undervoltage	Low	Low	Low	High	Low	High	Low	High
SWC Output Undervoltage	Low	Low	Low	High	Low	High	Low	High
VIN_BULK Input Undervoltage	Low	Low						
SWA Output Current Limit	High	Low	High	High	High	High	High	High
SWB Output Current Limit	High	Low	High	High	High	High	High	High
SWC Output Current Limit	High	Low	High	High	High	High	High	High
SWA Output High Current /Power	High	Low	High	High	High	High	High	High
SWB Output High Current /Power	High	Low	High	High	High	High	High	High
SWC Output High Current /Power	High	Low	High	High	High	High	High	High
High Temperature Warning	High	Low	High	High	High	High	High	High
Critical Temperature	Low	Low	Power Cycle	Power Cycle	Low	Low	Power Cycle	Power Cycle
PEC Error	High	Low	High	High	High	High	High	High
Parity Error	High	Low	High	High	High	High	High	High

<u>Table 5</u> shows the RTQ5132's response to the GSI\_n signal and the PWR\_GOOD signal for each event before and after the user issues the Clear command. The table assumes that all mask bits are set to '1'.

Table 5. RTQ5132 Response for Clear Command by Host (Part II)

DSQ5132-07 October 2024 www.richtek.com



	Event O		Clear Co Event Not All Mask	Present;	Event O		Clear Command; Event Not Present; All Mask Bits = "1"	
Event	0x2F[1:0] = "01"		0x2F[1:0] = "01"		0x2F[1:0] = "10"		0x2F[1:0] = "10"	
	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output
VIN_BULK Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWA Output Power Good	High	Low	High	High	High	High	High	High
SWB Output Power Good	High	Low	High	High	High	High	High	High
SWC Output Power Good	High	Low	High	High	High	High	High	High
1.8V LDO Power Good	High	Low	High	High	High	High	High	High
1.0V LDO Power Good	High	Low	High	High	High	High	High	High
SWA Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWB Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWC Output Overvoltage	Low	Low	Low	High	Low	High	Low	High
SWA Output Undervoltage	Low	Low	Low	High	Low	High	Low	High
SWB Output Undervoltage	Low	Low	Low	High	Low	High	Low	High
SWC Output Undervoltage	Low	Low	Low	High	Low	High	Low	High
VIN_BULK Input Undervoltage	Low	Low						
SWA Output Current Limit	High	Low	High	High	High	High	High	High
SWB Output Current Limit	High	Low	High	High	High	High	High	High
SWC Output Current Limit	High	Low	High	High	High	High	High	High
SWA Output High Current /Power	High	Low	High	High	High	High	High	High
SWB Output High Current /Power	High	Low	High	High	High	High	High	High



	Event Occurred; All Mask Bits = "1"		Clear Command; Event Not Present; All Mask Bits = "1"		Event Occurred; All Mask Bits = "1"		Clear Command; Event Not Present; All Mask Bits = "1"	
Event	0x2F[1:0	)] = "01"	0x2F[1:0	)] = "01"	0x2F[1:0	)] = "10"	0x2F[1:0	)] = "10"
	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output	PWR_GOO D Output	GSI_n Output
SWC Output High Current /Power	High	Low	High	High	High	High	High	High
High Temperature Warning	High	Low	High	High	High	High	High	High
Critical Temperature	Low	Low	Power Cycle	Power Cycle	Low	Low	Power Cycle	Power Cycle
PEC Error	High	Low	High	High	High	High	High	High
Parity Error	High	Low	High	High	High	High	High	High

Note that when the user masks any event in the appropriate register, it only masks the assertion of the GSI\_n output signal or the assertion of the PWR\_GOOD output signal. The RTQ5132 functional behavior remains the same for each event, except for the assertion of the GSI\_n output signal and the assertion of the PWR\_GOOD output signal.

#### 15.9 Power-Good Signal

The PWR\_GOOD output signal type can be configured as either output-only or input and output through register Register 0x32[5]. By default, PWR\_GOOD is an output signal. The PWR\_GOOD signal can only be configured once, at power-on, before issuing the VR Enable command (either with the VR\_EN pin or via the I<sup>2</sup>C/I3C basic bus). The PWR\_GOOD signal configuration applies to both secure mode and programmable mode of operation.

# 15.9.1 Power Good as Output Only Signal

When Register 0x32[5] = '0', the PWR\_GOOD signal type is output only; the input of the PWR\_GOOD signal is ignored. The RTQ5132's PWR\_GOOD pin indicates the status of the VIN\_Bulk input supply and all output regulators (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V). The RTQ5132 floats the PWR\_GOOD pin when the VIN\_Bulk input supply is valid and all enabled output regulators (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V) tolerances as configured in the appropriate register space. At first power-up, when the input supply VIN\_Bulk is ramped up and stable, the RTQ5132 keeps the PWR\_GOOD pin asserted low; however, the RTQ5132 updates the corresponding status register. By default, Register 0x32[5] = '0'. Once the RTQ5132 receives a VR Enable command (either via the VR\_EN pin or on the I<sup>2</sup>C/I3C basic bus) from the user, the RTQ5132 enables all appropriate output regulators, updates the corresponding status registers, and enters an operating state called as Regulation. At this point, the RTQ5132 floats the PWR\_GOOD pin, and the external board pull-up resistor pulls the pin high, as other PMICs on different DIMMs may be driving the PWR\_GOOD pin low. Once the PWR\_GOOD pin is pulled high (no other PMIC is driving the PWR\_GOOD pin low), the RTQ5132 remains in the Regulation state.

Once the PWR\_GOOD pin is high, if the RTQ5132 detects any condition either on the VIN\_Bulk input supply or

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



any of the output regulators (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V) that causes the RTQ5132 to update it status registers to indicate the power status is not good, then the RTQ5132 asserts the PWR GOOD pin low and keeps it asserted until the user explicitly takes a specific action. The RTQ5132 does not automatically let the PWR GOOD pin float (get high) even if the condition that triggered the RTQ5132 to assert the PWR GOOD pin no longer exists. In other words, the RTQ5132's PWR GOOD pin is latched, and once latched, it must be explicitly addressed by the user.

#### PWR GOOD as Input and Output Signal 15.9.2

When Register 0x32[5] = '1', the PWR GOOD signal type is both input and output and is only applicable after the user issues the VR Enable command (either with the VR\_EN pin or on the I<sup>2</sup>C/I3C basic bus). Note that simultaneous usage of the PWR\_GOOD pin as IO and the VR\_EN pin is not allowed and is considered an illegal configuration. If the VR EN pin is intended to be used to turn on and turn off output rails, the PWR GOOD pin must be configured as output only. If the PWR\_GOOD pin is intended to be used as IO, the VR\_EN pin must be connected to GND on the board.

The RTQ5132's PWR GOOD pin indicates the status of the VIN\_Bulk input supply and all output regulators (SWA, SWB, SWC, VLDO 1.8V, and VLDO 1.0V). The RTQ5132 floats the PWR GOOD pin when the VIN Bulk input supply is valid and all enabled output regulators (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V) maintain their tolerances as configured in the appropriate register space.

At first power-up, when the input supply VIN Bulk is ramped up and stable, the RTQ5132 keeps the PWR GOOD pin asserted low; however, the PMIC updates the corresponding status register. The user, prior to issuing the VR Enable command on I<sup>2</sup>C/I3C basic bus, can configure Register 0x32[5] = '1'. When the user issues the VR Enable command on the I<sup>2</sup>C/I3C basic bus, the RTQ5132 turns on its output regulators, updates the corresponding status registers, and enters an operating state called "Regulation". At this point, the RTQ5132 floats PWR GOOD pin and waits for external board pull-up resistor to pull the pin high as other PMICs on different DIMM may be driving the PWR GOOD pin low. Once the PWR GOOD pin is pulled high (no other PMIC is driving the PWR GOOD pin low), the RTQ5132 automatically enters into operating state called "Bulk Control Link Monitor".

Once the PWR\_GOOD pin is high, if the RTQ5132 detects any condition either on the VIN\_Bulk input supply or any of the output regulators (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V) that causes the RTQ5132 to update its status registers to indicate the power status is not good, then the RTQ5132 asserts the PWR GOOD pin low and keeps it asserted until the host explicitly takes a specific action corresponding to it. The RTQ5132 does not automatically let the PWR\_GOOD pin float (get High) even if the condition that triggered the RTQ5132 to assert the PWR\_GOOD pin no longer exists. In other words, the RTQ5132's PWR GOOD pin is latched, and once latched, it must be explicitly addressed by the user.

If the RTQ5132 is operating in Secure mode, the RTQ5132 allows the PWR GOOD input signal to be low at any time. The host must keep the PWR GOOD signal low for minimum tPWR GOOD Low Pulse Width to issue a command to the RTQ5132 to execute VR Disable. When the RTQ5132 detects the PWR GOOD signal is low, the RTQ5132 internally triggers the VR Disable command and shuts off all output regulators (the RTQ5132 executes the power-off sequence from config0 (Register 0x58) to power-off sequence config2 (Register 0x5A); drives the PWR\_GOOD signal low and unlocks only Register 0x32[7]. The RTQ5132 preserves all register contents, including the MTP error log registers, and keeps all write protect registers locked except for Register 0x32 [7]. As long as there is a valid VIN Bulk input supply, the RTQ5132 allows read access to all its configuration registers. The RTQ5132 allows write access to non-locked configuration registers and Register 0x32[7]. If the user issues the VR Enable command via the I<sup>2</sup>C/I3C bus, the RTQ5132 executes the power-on sequence from config0 to config2 registers, floats the PWR\_GOOD output signal, and re-locks Register 0x32[7].

If the RTQ5132 is in programmable mode, the RTQ5132 allows the PWR\_GOOD input signal low at any time. The



user must keep the PWR\_GOOD signal low for minimum tPWR\_GOOD\_Low\_Pulse\_Width to issue a command to the RTQ5132 to execute VR Disable. When the RTQ5132 detects the PWR\_GOOD signal is low, the RTQ5132 internally triggers the VR Disable command and shuts off all output regulators (the RTQ5132 executes power-off sequence from config0 (Register 0x58) to power-off sequence config2 (Register 0x5A); drives the PWR\_GOOD signal low. The RTQ5132 preserves all register contents, including the MTP error log registers. As long as there is a valid VIN\_Bulk input supply, the RTQ5132 allows read and write access to all its configuration registers. The user can issue the VR Enable command with the VR\_EN command on the I<sup>2</sup>C/I3C basic bus (Register 0x32[7] = '1') again to turn on the RTQ5132's output regulator. the RTQ5132 will execute the power-on sequence from config0 to config2 registers and float the PWR\_GOOD output signal.

#### 15.10 Input Overvoltage Protection

An input overvoltage protection mechanism is implemented to limit the voltages to the RTQ5132. The RTQ5132 actively monitors the input voltage VIN\_BULK rail.

When the VIN BULK input exceeds the threshold set in Register 0x1B[7].

When this event lasts longer than the tInput\_OV\_GSI\_Assertion time (maximum =  $10\mu$ s), the RTQ5132 sets Register 0x08[0] accordingly and drives the GSI\_n output signal as shown in <u>Table 3</u> at the same time. Note that at this point, the RTQ5132 does not assert the PWR\_GOOD output signal. The RTQ5132 allows access to all registers and continues to operate normally. The user can clear the VIN\_BULK input overvoltage status register by writing '1' to Register 0x10[0] appropriately or by writing '1' to the global status clear Register 0x14[0]. If the input overvoltage condition is still present, then the RTQ5132 will continue to assert the GSI\_n output signal, and the status Register 0x08[0] will remain at '1'.

In programmable mode, if the VIN\_BULK input supply overvoltage condition persists for longer than the  $tInput_OV_VR_D$ isable time (maximum =  $20\mu s$ ), then the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators and asserts the PWR\_GOOD signal. The output regulators stop switching once the VR disable command is issued by the RTQ5132, following the power-off sequence config0 to config3 to discharge the output voltage using an internal discharging resistor. The RTQ5132 keeps VLDO\_1.8V and VLDO\_1.0V LDO output regulators active. The RTQ5132 allows access to all registers. The user can query the PMIC register space to determine the cause of the PWR\_GOOD signal assertion and the GSI\_n signal assertion. Once the user determines the cause, the user must first clear the VIN\_BULK input overvoltage status register as well as any other relevant status registers individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI\_n signal. If the input overvoltage condition is still present, the RTQ5132 will continue to assert the GSI\_n output signal, and the status Register 0x08[0] will remain at '1'. Once the status register is cleared and the GSI\_n output signal is de-asserted, the user may re-enable the RTQ5132's output switching regulator by issuing a VR Enable command. The RTQ5132 enables the output switching regulators and ensures the PWR\_GOOD signal is floated when all of its output regulators are normal and the input overvoltage condition is no longer present.

In secure mode, if the VIN\_BULK input supply overvoltage condition persists for longer than the  $tInput_OV_VR_D$  is able time (maximum =  $20\mu s$ ), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators by executing power-off sequence configuration registers, asserts the PWR\_GOOD signal low, and returns to configuration mode. The RTQ5132 keeps its VLDO\_1.8V and VLDO\_1.0V output regulators active.

# 15.11 Output Power-Good Status (SWA, SWB, SWC, LDO\_1.8V, and LDO\_1.0V)

The RTQ5132 provides output power-good indicators to determine that the output regulators have crossed the desired voltage tolerance from their nominal programmed settings. The nominal programmed settings for output regulators SWA, SWB, and SWC are programmed in Register 0x21[7:1], Register 0x25[7:1], and Register

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



0x27[7:1], respectively. The RTQ5132 offers the PWR GOOD condition to be set independently for low-side and high-side thresholds regarding voltage regulators (SWA, SWB, and SWC). In addition, there are two LDO regulators: VLDO\_1.8V and VLDO\_1.0V in the RTQ5132.

There are four possibilities where the RTQ5132 recognizes the output power-good event for any output regulator.

- 1. The output voltage goes below the threshold set in Register 0x21[0] for SWA, Register 0x25[0] for SWB, or Register 0x27[0] for SWC.
- 2. The output voltage goes above the threshold set in Register 0x22[7:6] for SWA, Register 0x26[7:6] for SWB, or Register 0x28[7:6] for SWC.
- 3. The LDO output VLDO\_1.8V goes below the threshold set in Register 0x1A[2].
- 4. The LDO output VLDO\_1.0V goes below the threshold set in Register 0x1A[0].

When any of the above events last longer than the Output PWR GOOD GSI Assertion time (maximum = 10 µs), the RTQ5132 sets the Register 0x08[5, 3:2], Register 0x09[5], or Register 0x33[2] appropriately and drives the PWR\_GOOD and GSI\_n output signals as shown in Table 3 at the same time. The RTQ5132 continues to operate but DDR5 DIMM functionality may not be guaranteed.

The user can query the register space to determine and identify the cause of the PWR\_GOOD signal assertion and the GSI in signal assertion. Once the cause is determined, the user may clear the appropriate status register individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI in signal and the PWR\_GOOD signal. If the output power not good condition is still present, the RTQ5132 will continue to assert the GSI\_n output signal and assert the PWR\_GOOD signal, and the appropriate status Register 0x08[5; 3:2], Register 0x09[5], or Register 0x33[2] will remain at '1'. If the output power not good condition persists, the user may set the appropriate mask register to remove the GSI\_n or PWR\_GOOD output signal as shown in

#### Table 4 and Table 5.

#### 15.12 Output Overvoltage Protection (SWA, SWB, and SWC)

An output overvoltage protection mechanism is implemented to limit the voltages on the RTQ5132 output regulators. The RTQ5132 actively monitors the output voltage on each enabled regulator.

There are three possibilities where the RTQ5132 recognizes the overvoltage event:

- 1. The SWA output regulator goes above the threshold set in Register 0x22[5:4].
- 2. The SWB output regulator goes above the threshold set in Register 0x26[5:4].
- The SWC output regulator goes above the threshold set in Register 0x28[5:4].

In programmable mode (Register 0x2F[2] = '1'), if any output overvoltage condition persists for more than the tOutput\_OV\_VR\_Disable time (maximum = 20µs), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators, sets Register 0x0A[7,5:4] appropriately, asserts the PWR\_GOOD and GSI\_n output signals. The RTQ5132 keeps its VLDO\_1.8V and VLDO\_1.0V output regulators active. The user may query the RTQ5132 register space to determine the cause of the PWR\_GOOD signal assertion and the GSI\_n signal assertion.

Once the cause is determined, the user must first clear the appropriate output overvoltage status register as well as any other relevant status registers individually or by writing '1' to the global status clear Register 0x14[0], which



triggers the GSI\_n signal to be de-asserted. Once the status register is cleared and the GSI\_n output signal is de-asserted, the user may re-enable the RTQ5132's output switching regulator by issuing a VR Enable command.

The RTQ5132 enables output switching regulators and ensures the PWR\_GOOD signal is floated when all of its output regulators are normal.

In secure mode (Register 0x2F[2] = '0'), if any output overvoltage condition persists for more than the tOutput\_OV\_VR\_Disable time (maximum =  $20\mu s$ ), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators, sets Register 0x0A[7,5:4] appropriately, asserts the PWR\_GOOD and asserts GSI\_n output signal. The RTQ5132 keeps its VLDO\_1.8V and VLDO\_1.0V output regulators active.

#### 15.13 Output Undervoltage and VIN\_BULK Undervoltage-Lockout Protection

An output undervoltage-lockout protection mechanism is implemented to limit the voltages on the RTQ5132 output regulators. The RTQ5132 actively monitors the output voltage on each enabled regulator.

There are four possibilities where the RTQ5132 recognizes the undervoltage-lockout event:

- 1. The SWA output regulator goes below the threshold set in Register 0x22[3:2].
- 2. The SWB output regulator goes below the threshold set in Register 0x26[3:2].
- 3. The SWC output regulator goes below the threshold set in Register 0x28[3:2].
- 4. The VIN\_BULK Input Voltage goes below 3.8V.

In programmable mode (Register 0x2F[2] = '1'), if any output undervoltage condition or the VIN\_Bulk input voltage condition as listed above persists for more than the tOutput\_UV\_VR\_Disable time (maximum =  $20\mu s$ ), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators, sets Register 0x0B[3,1:0] and Register 0x33[3] appropriately, asserts PWR\_GOOD, and asserts the GSI\_n output signal. The RTQ5132 keeps its VLDO\_1.8V and VLDO\_1.0V output regulators active.

The user may query the RTQ5132's register space to determine the cause of the PWR\_GOOD signal assertion and the GSI\_n signal assertion. Once the cause is determined, the user must first clear the appropriate output undervoltage status register as well as any other relevant status registers individually or by writing '1' to the global status clear Register 0x14[0], which triggers the GSI\_n signal to be de-asserted. Once the status register is cleared and the GSI\_n output signal is de-asserted, the user may re-enable the RTQ5132's output switching regulator by issuing a VR Enable command, assuming a valid VIN\_Bulk input voltage. The RTQ5132 enables output switching regulators and floats the PWR\_GOOD signal high when all of its output regulators are normal.

In secure mode (Register 0x2F[2] = '0'), if any output undervoltage condition or the VIN\_Bulk input voltage condition as listed above persists for more than the tOutput\_UV\_VR\_Disable time (maximum =  $20\mu$ s), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators, sets Register 0x0B[3,2:0] and Register 0x33[3] appropriately, asserts PWR\_GOOD, and asserts the GSI\_n output signal. The RTQ5132 keeps its VLDO\_1.8V and VLDO\_1.0V output regulators active.

## 15.14 Output Current Limiter Warning Event

The RTQ5132 has output current limiter mechanism to limit the current on the output voltage regulators. The inductor current is actively monitored through the low-side MOSFET during conduction. The voltage drop across the phase node to PGND is compared with the current-limit threshold, which is set in Register 0x20, and the valley point of the inductor current is limited cycle-by-cycle. When output voltage regulators operate in current limit mode, the PWM on-time one-shot should wait for the inductor current discharging below the current-limit threshold to trigger the next on-time output, even if the output voltage has fallen below the reference feedback voltage. Hence, the output voltage starts dropping under current limit conditions due to insufficient energy to supply the output load. The output undervoltage event will occur if the output voltage falls below the undervoltage threshold, as described in Output Undervoltage and VIN\_BULK Undervoltage-Lockout Protection. The protection mechanism of the output

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



current limit is shown in Figure 11.

There are three possibilities where the RTQ5132 recognizes the current limiter event:

- 1. The SWA output regulator current goes above the threshold set in Register 0x20 [7:6].
- 2. The SWB output regulator current goes above the threshold set in Register 0x20 [3:2].
- 3. The SWC output regulator current goes above the threshold set in Register 0x20 [1:0].

When any of the events last longer than the tOutput\_Current\_Limiter time (maximum =  $10\mu$ s), the RTQ5132 sets the Register 0x0B[7, 5:4] appropriately and drives the GSI\_n output signal, as shown in <u>Table 3</u> at the same time. The RTQ5132 continues to operate as normal.

The user can query the register space to determine the cause of the GSI\_n signal assertion. Once the cause is determined, the user may clear the appropriate output current limiter status register as well as any other status registers individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI\_n signal. If the output current limiter condition is still present, the RTQ5132 will continue to assert the GSI\_n output signal and the appropriate status Register 0x0B[7, 5:4] will remain at '1'. If the output current limiter condition persists, the user can set the appropriate mask register to remove the GSI\_n output signal as shown in

#### Table 4 and Table 5.

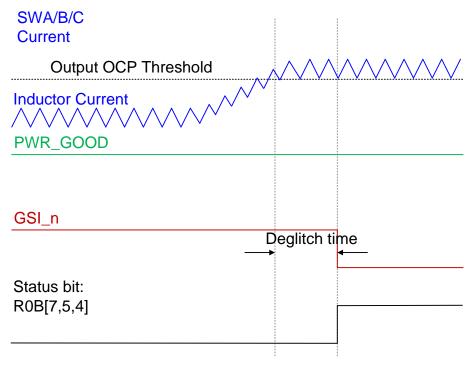


Figure 11. Output Current Limiter Protection

# 15.15 Output High Current Consumption Warning Event

The RTQ5132 supports a high output current consumption warning mechanism for each of its regulator output. Through sensing the voltage drop across low-side MOSFET during conduction, the inductor current can be detected. If enabled, the RTQ5132 actively monitors the average output current of the regulator.

There are three possibilities where the RTQ5132 recognizes high output current consumption.

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation



- 1. The SWA output regulator average current goes above the threshold set in Register 0x1C[7:2].
- 2. The SWB output regulator average current goes above the threshold set in Register 0x1E[7:2].
- 3. The SWC output regulator average current goes above the threshold set in Register 0x1F[7:2].

When any of these events occur, the RTQ5132 sets the Register 0x09[3, 1:0] appropriately, and drives the GSI\_n output signal as shown in <u>Table 3</u> at the same time. The RTQ5132 continues to operate as normal.

The user can query the register space to determine the cause of the GSI\_n signal assertion. Once the cause is determined, the user can clear the appropriate output current consumption warning status register as well as any other status registers individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI\_n signal. If the output current consumption warning condition is still present, the RTQ5132 will continue to assert the GSI\_n output signal, and the appropriate status Register 0x09[3, 1:0] will remain at '1'. If the output current consumption warning condition persists, the user can set the appropriate mask register to remove the GSI\_n output signal as shown in

#### Table 4 and Table 5.

#### 15.16 PMIC High Temperature Warning and Critical Temperature Protection

The RTQ5132 provides a high-temperature warning mechanism as well as critical temperature shutdown. An internal temperature sensor is placed near the heating MOSFET to detect the die temperature and protect the RTQ5132 from overheating. There are two registers associated with the RTQ5132's die temperature: the high-temperature warning threshold Register 0x1B[2:0] and the shutdown temperature threshold Register 0x2E[2:0]. The value programmed in the shutdown temperature register must be equal or greater than the value programmed in a warning threshold register.

If the die temperature goes above the threshold set in Register 0x1B[2:0] for a period longer than the tHigh\_Temp\_Warning time (maximum =  $10\mu s$ ), the RTQ5132 sets the Register 0x09[7] and drives the GSI\_n output signal as shown in Table 3 at the same time.

The user can query the register space to determine the cause of the GSI\_n signal assertion. Once the cause is determined, the user can clear the temperature warning status register as well as any other status registers individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI\_n signal. If the high-temperature warning condition is still present, the RTQ5132 will continue to assert the GSI\_n output signal, and the appropriate status Register 0x09[7] will remain at '1'. If the high-temperature warning condition persists, the user can set the appropriate mask register to remove the GSI\_n output signal as shown in

# Table 4 and Table 5.

If the die temperature goes above the threshold set in Register 0x2E[2:0] for a period longer than the tShut\_Down\_Temp time (maximum= $10\mu s$ ), the RTQ5132 internally generates a VR Disable command and disables all of its switching output regulators, sets the code in Register 0x05[2:0], updates Register 0x08[6], and drives the GSI\_n and PWR\_GOOD output signals as shown in Table 3 at the same time. The VLDO\_1.8V and VLDO\_1.0V output regulators keep active.

The user is expected to monitor the temperature status registers. When the temperature drops below the threshold, Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation

DSQ5132-07 October 2024 www.richtek.com



the user must restart the RTQ5132 by going through the power cycle of the VIN\_BULK input supply.

### 15.17 Packet Error Code (PEC) and Parity Error Event

The RTQ5132 provides two types of error checking: parity error checking and packet error checking. By default, the parity error checking is always enabled and packet error checking is disabled. The user may enable the packet error checking at any time. Parity errors are checked for each byte in a packet, except for the device select code byte. The user sends parity error information in the "T" bit.

I3C basic defines S0, S1, S2, S3, S4, S5, S6 error detection for slave devices. Only S1 and S2 error detection is supported by the RTQ5132 for parity checking. All other errors are not supported and not applicable.

In I3C basic mode, on the RTQ5132's primary management interface, the PEC function and the parity function can be enabled. If enabled, when the RTQ5132 detects either a PEC error or a parity error, the RTQ5132 sets the Register 0x0A[3:2] appropriately, drives the GSI\_n output signal as shown in Table 3, continues to operate as normal, and allows access to all registers.

The user can query the register space to determine the cause of the GSI\_n signal assertion. Once the cause is determined, the user can clear the status register individually or by writing '1' to the global status clear Register 0x14[0], which de-asserts the GSI\_n signal. No further action is needed by the user at this point.



### 15.18 Output Regulator Control Topology

The RTQ5132 applies A<sup>2</sup>RCOT (Accurate Adaptive Ramp COT) to regulate the output voltage of VDD, VDDQ, and VPP. The SWA and SWB can operate in either single phase mode or dual-phase mode. When operating as dual-phase mode, the interleaving PWM control is applied to balance the output current.

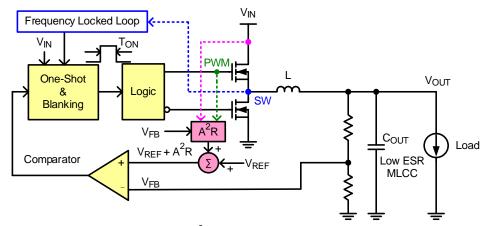


Figure 12. A<sup>2</sup>RCOT Control Mechanism

Figure 12 illustrates a standard A<sup>2</sup>RCOT control buck converter. To achieve good stability with low-ESR ceramic capacitors, A<sup>2</sup>RCOT generates an internal ramp by sensing VIN, VFB, and PWM signal. The internal ramp is in phase with the PWM signal, and its magnitude is proportional to VIN. Moreover, the average of VFB can be well regulated at VREF, which makes good output load and line regulation. This internal ramp signal replaces the ESR ramp normally provided by the output capacitor's ESR. The ramp signal and other internal compensations are optimized for low-ESR ceramic output capacitors.

However, making the on-time proportional to Vout and inversely proportional to Vin is not sufficient to achieve good constant-frequency behavior for the following reasons. The voltage drops across the MOSFET and inductor make the equivalent conversion ratio smaller than the ideal duty ratio. That is, the switching frequency is not fixed under different output load conditions. The frequency is increasing at higher loading and junction temperature as compared to smaller loading and junction temperature.

One way to reduce these effects is to measure the actual switching frequency and compare it to the desired range. The A<sup>2</sup>RCOT uses the frequency-locked loop, measuring the actual switching frequency and modifying the ontime with a feedback loop to make the average switching frequency in the desired range.

The RTQ5132 control algorithm is simple to understand, as depicted in Figure 13. The feedback voltage is compared to the reference voltage,  $V_{REF}$ , with the accurate adaptive ramp ( $A^2R$ ) added. When the feedback signal is less than the combined reference, the on-time one-shot is triggered as long as the minimum off-time one-shot is clear and the measured inductor current (through the synchronous rectifier) is below the current limit. The on-time one-shot turns on the high-side switch and the inductor current ramps up linearly. After the on-time, the high-side switch is turned off and the synchronous rectifier is turned on and the inductor current ramps down linearly. At the same time, the minimum off-time one-shot is triggered to prevent another immediate on-time during the noisy switching time and allow the feedback voltage and current sense signals to settle. The minimum off-time is kept short so that rapidly-repeated on-times can raise the inductor current quickly when needed.

Copyright © 2024 Richtek Technology Corporation. All rights reserved.

DSQ5132-07 October 2024 www.richtek.com

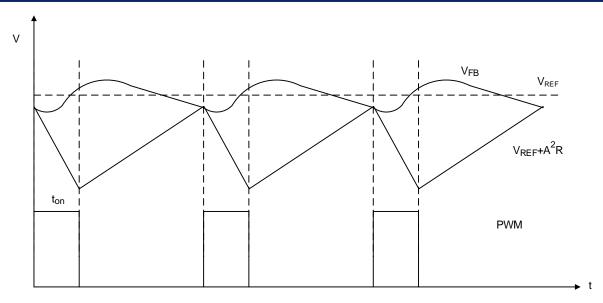


Figure 13. A<sup>2</sup>RCOT PWM Control Diagram

### 15.19 Regulator Operating Mode Selection

The RTQ5132 offers two kinds of PWM operations under the light load: DEM (Diode Emulation Mode) and FCCM (Forced Continuous Conduction Mode). The user can switch between DEM and FCCM by the Register 0x29[7:6], Register 0x2A[7:6], and Register 0x2A[3:2] in programmable mode or in the configuration state of FSM before issuing the VR\_EN command.

#### 15.19.1 DEM (Diode Emulation Mode)

In diode emulation mode, the RTQ5132 automatically reduces the switching frequency under light load conditions to maintain high efficiency. The reduction of frequency is achieved smoothly. As the output current decreases from heavy load conditions, the inductor current also decreases and eventually reaches to the point where its current valley touches zero, which is the boundary between continuous conduction and discontinuous conduction modes. To emulate the behavior of diodes, the low-side MOSFET allows only partial negative current to flow when the inductor free-wheeling current becomes negative. As the load current is further decreased, it takes longer to discharge the output capacitor to the level that requires the next "ON" cycle. Contrarily, when the output current increases from light load to heavy load, the switching frequency increases to the pre-set value as the inductor current reaches the continuous conduction. The transition load point between DEM and CCM operation is shown in Figure 14 and can be calculated as follows:

$$I_{LOAD\_BCM} = \frac{V_{IN} - V_{OUT}}{2L} \times t_{ON}$$

, where ton is the on-time of the high-side MOSFET.

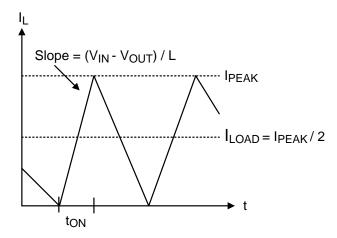


Figure 14. Boundary Condition of DEM/CCM

The switching frequency in DEM can be calculated as follows:

$$f_{SW}\left(I_{LOAD}\right) = \frac{2LI_{LOAD}}{V_{IN}t_{ON}^{2}\left(\frac{V_{IN}}{V_{OUT}} - 1\right)}$$

, where ILOAD is smaller than ILOAD\_BCM.

As shown in the equation, the switching frequency is a function of the output load current, ILOAD, and it is proportional to ILOAD, which means it becomes higher at heavy load and reduces to almost zero at a very light load. Besides, the inductor selection can also change the switching frequency in DEM. Choosing a large inductance makes more switching loss compared to a small inductance. However, the core loss of the inductor increases with larger inductor current ripple for a given inductor. That is, proper selection of the inductor based on efficiency target is important.

Moreover, to achieve a smooth transition from DEM to CCM or backward, during discontinuous switching, the ontime is immediately increased to add "hysteresis" to discourage the IC from switching back to continuous switching unless the load increases substantially. The RTQ5132 returns to continuous conduction as soon as an on-time is generated before the inductor current reaches zero. The on-time is reduced back to the length needed for the presetting switching frequency and encouraging the circuit to remain in continuous conduction, preventing repetitive mode transitions between continuous switching and discontinuous switching.

# 15.19.2 FCCM (Forced Continuous Conduction Mode)

Unlike diode emulation mode (DEM) that enables zero current detection (ZDC) to reject negative inductor current when the low-side MOSFET turns on, the inductor current can be negative until the next on-time is generated in FCCM. The switching frequency is fixed from no load to full load. Therefore, the results in benefits like better transient response from light load to heavy load and smaller EMI/EMC come along with FCCM. Nevertheless, the poor efficiency at light loads is a trade-off.

# 15.20 Analog-to-Digital Converter (ADC)

The RTQ5132 supports an analog-to-digital converter (ADC) to monitor input supply voltages VIN as well as output voltage regulator voltages (SWA, SWB, SWC, VLDO\_1.8V, and VLDO\_1.0V). Register 0x30[7:3] allows to enable the ADC and select the desired input supply voltage or output supply voltage. Register 0x31[7:0] provides the actual voltage measurement. The accuracy of the voltage measurement is as follows:

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



**Table 6. ADC Accuracy Table** 

Input Rail	ADC Range	ADC Accuracy
SWA SWB Output Voltage	1050mV to 1160mV	± 1 LSB
SWA, SWB Output Voltage	Outside of 1050mV to 1160mV	± 3 LSB
SWC Output Voltage	1750mV to 1850mV	± 1 LSB
SWC Output Voltage	Outside of 1750 mV to 1850mV	± 3 LSB
VLDO_1.8V, VLDO_1.0V Output Voltage		± 3 LSB
VIN_BULK Input Voltage		± 6 LSB

The RTQ5132 also monitors the output voltage regulator current or power (SWA, SWB, and SWC) and updates Register 0x0C[7:0] for SWA, Register 0x0E[5:0] for SWB, and Register 0x0F[5:0] for SWC. The Register 0x1B[6] allows the user to select whether the RTQ5132 should report current measurements or power measurements. The current or power measurements reported in these registers are average measurements over a time period defined in Register 0x30[1:0]. If Register 0x1B[6] = '1', Register 0x1A [1] allows the user to select whether the RTQ5132 should report individual rail power or total power in Register 0x0C[7:0]. The register update frequency of this register is configured in Register 0x30[1:0]. The accuracy of the current (>0.5A) or the corresponding power measurement is ± 3 LSB or ± 6 LSB, respectively. The accuracy of the current measurement (<0.5A) is ± 4 LSB or the corresponding power measurement is ± 7 LSB, respectively.

If Register 0x1A[1] = '1', the accuracy of the total power reported in Register  $0x0C = \pm 12$  LSB.

Besides, the RTQ5132 die temperature is also monitored and converted to an ADC value, the temperature is reported in Register 0x33[7:5]. The ADC for temperature automatically works when the die temperature is higher than 85°C.

Table 7. General Purpose of ADC Units

Default Monitoring (5-Channel) ± User Selection (1-Channel)					
Channel Sensor	Type	Monitor Register	Current/Power Measurement Selector		
SWA Output Current or Power		0x0C[7:0]			
SWB Output Current or Power	Default monitor	0x0E[5:0]			
SWC Output Current or Power		0x0F[5:0]			
PMIC Die Temperature		0x33[7:5]	0x1B[6]=0 Set for current		
SWA Output voltage			0x1B[6]=1 Set for power 0x1A[1]=0 Report power for single switcher		
SWB Output voltage			output		
SWC Output voltage	User selection	0x31[7:0]	0x1A[1]=1 Report the sum of power for all switcher outputs (SWA, SWB, SWC)		
VIN_BULK Input voltage	0x30[6:3]	0.31[7.0]			
VLDO_1.8V Output voltage					
VLDO_1.0V Output voltage					



#### 15.21 PMIC Address ID (PID)

The RTQ5132 has a PID input pin, which allows assigning up to three different unique IDs for I<sup>2</sup>C and I3C basic protocols.

At first power-on, when the VIN\_BULK input is applied, the RTQ5132 automatically senses its ID as shown in Table 8.

Table 8. PMIC ID

PID Pin Connection on DIMM Board	PMIC ID	Comment
Short to GND	PID = 1001	PMIC can be configured
Floating	PID = 1000	
Short to 1.8V	PID = 1100	Connected to RTQ5132's VLDO_1.8V

# 15.22 Error Injection

The RTQ5132 offers error injection capability for debugging, testing, and validation at various stages. It also helps isolate and map out faulty PMICs in the memory subsystem for normal application environments. There are two conditions for the error injection test.

#### 15.22.1 Error Injection Function Usage Prior to VR Enable

Before issuing the VR Enable command, the error injection function can be invoked by setting the error injection enable bit Register 0x35[7] = '1' during the configuration state. The RTQ5132 will not execute the power-on sequence and will not enable the output regulators when receiving the VR Enable command if any of following errors are injected prior to the VR Enable command: VIN\_BULK UV/OV, SWx OV/UV, or Critical Temp Shutdown. The RTQ5132 will not update error log registers (Register 0x04 to Register 0x06). The RTQ5132 enters secure mode if Register 0x2F[2] = '0' and programmable mode if Register 0x2F[2] = '1'.

#### 15.22.2 Error Injection Function Usage After VR Enable

After the RTQ5132 output regulators are enabled with the VR Enable command and the RTQ5132 is in programmable mode, the error injection function can be invoked by setting the error injection enable bit Register 0x35[7] = '1'. The RTQ5132 executes the power-off sequence to disable output regulators and updates the error log registers (Register 0x04 to Register 0x06) as well as the status registers accordingly if any of the following errors are injected: VIN\_BULK UV/OV, SWx OV/UV, or Critical Temp Shutdown.

To exit the error injection mode of operation, the RTQ5132 requires a power cycle of the VIN\_BULK input supply.

DSQ5132-07 October 2024 www.richtek.com



# 16 Application Information

(Note 7)

#### 16.1 Inductor Selection

Selecting an inductor involves specifying its inductance and also its required peak current. The exact inductor value is generally flexible and is ultimately chosen to obtain the best mix of cost, physical size, and circuit efficiency. Lower inductor values benefit from reduced size and cost and they can improve the circuit's transient response; however, they increase the inductor ripple current and output voltage ripple, and reduce the efficiency due to the resulting higher peak currents. Conversely, higher inductor values increase efficiency, but the inductor will either be physically larger or have higher resistance since more turns of wire are required. Also, transient response will be slower since more time is required to change current (up or down) in the inductor. A good compromise between size, efficiency, and transient response is to use a ripple current (ΔIL) about 20-50% of the desired full output load current. Calculate the approximate inductor value by selecting the input and output voltages, the switching frequency (fsw), the maximum output current (Iout(MAX)) and estimating a ∆IL as some percentage of that current.

$$L = \frac{V_{\text{OUT}} \times (V_{\text{IN}} - V_{\text{OUT}})}{V_{\text{IN}} \times f_{\text{SW}} \times \Delta I_{L}}$$

Once an inductor value is chosen, the ripple current ( $\Delta I_L$ ) is calculated to determine the required peak inductor current.

$$\Delta I_L = \frac{V_{OUT} \times (V_{IN} - V_{OUT})}{V_{IN} \times f_{SW} \times L} \quad \text{and} \quad I_{L(PEAK)} = I_{OUT(MAX)} + \frac{\Delta I_L}{2}$$

To guarantee the required output current, the inductor needs a saturation current rating and a thermal rating that exceeds IL(PEAK). These are minimum requirements. To maintain control of inductor current in overload and shortcircuit conditions, some applications may require current ratings up to the current-limit value. However, the IC's output undervoltage shutdown feature makes this unnecessary for most applications.

For best efficiency, choose an inductor with a low DC resistance that meets the cost and size requirements. For low inductor core losses, shielded ferrite cores are usually better. Although they are possibly larger or more expensive, they will probably give fewer EMI and other noise problems.


Since DDR5 on DIMM has layout space limitations to the power management IC on DIMM as well as the surrounding components like inductors and input/output capacitors, a standard inductor mechanical specification is defined in Table 9 and Table 10. Moreover, the electrical specifications of the inductor are also defined in Table 11 and Table 12. The electrical specifications include inductance, maximum DCR, maximum ACR, and the minimum inductance requirement after de-rating at a specified operating current. The DIMM vendors can select an inductor based on Table 11 and Table 12. Because the inductor size is fixed, the trade-off between efficiency and transient response is the main concern on selection. Generally, the inductance for SWA and SWB, which are 1.1V output rails, is recommended to choose between  $0.47\mu H$  and  $0.68\mu H$ . The transient performance with L =  $0.47\mu H$  is better than that with L =  $0.68\mu H$ . However, the efficiency performance with L =  $0.68\mu H$  is better than that with L =  $0.47\mu$ H. On the other hand, the output rail with V<sub>OUT</sub> = 1.8V, which is the SWC or VPP rail, is suggested to apply an inductance between 1μH to 1.5μH.



# Table 9. SWA an SWB Inductor Mechanical Specifications

Packa	ge Size Reference Drawings		Recommended Land Pattern
L [mm]	3.4 max.	L: Perpendicular direction to each terminal	1.2 mm min.
W [mm]	3.2 max.	Parallel direction each terminals	3.2 mm max.
H [mm]	1.2 max.	± ↑	3.4 mm max.

# **Table 10. SWC Inductor Mechanical Specifications**

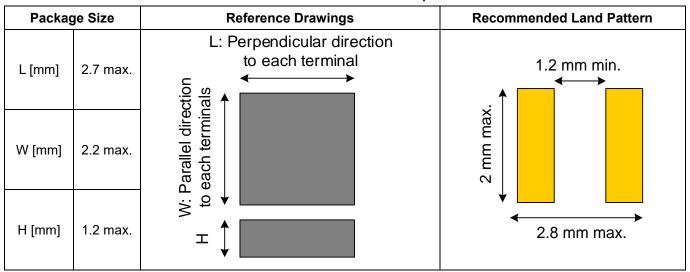

# Table 11. SWA and SWB Inductor Electrical Specifications

Package Height	L @ 0.5-1MHz/0bias ± 20% [μH]	Max. DCR [mΩ]	Max. ACR @ 1MHz [mΩ]	Min. L @ 6A [μH]
1.2 may [mm]	0.47	14.5	93	0.30
1.2 max. [mm]	0.68	18.5	113	0.38

# **Table 12. SWC Inductor Electrical Specifications**

Package Height	L @ 0.5-1MHz/0bias ± 20% [μH]	Max. DCR [mΩ]	Max. ACR @ 1MHz [mΩ]	Min. L @ 2A [μH]
1.0 may [mm]	1.0	48	182	0.56
1.2 max. [mm]	1.5	75	300	0.82

Copyright © 2024 Richtek Technology Corporation. All rights reserved.

DSQ5132-07 October 2024 www.richtek.com



### 16.2 Output Capacitor Selection

The buck output regulators of the RTQ5132 are optimized for ceramic output capacitors, which provide the best performance. The total output capacitance value is usually determined by the desired output voltage ripple level and transient response requirements for sag (undershoot during positive load steps) and soar (overshoot during negative load steps).

Output ripple at the switching frequency is caused by the inductor current ripple and its effect on the output capacitor's ESR (Equivalent Series Resistance), ESL (Equivalent Series Inductance), and stored charge. These three ripple components are called ESR ripple, ESL ripple, and capacitive ripple. Since ceramic capacitors have extremely low ESR, ESL, and relatively little capacitance, all these components should be considered if ripple is critical. The decomposition of output ripple is shown in Figure 15. The formulas to describe each component are listed as follows.

 $V_{RIPPLE} = V_{RIPPLE(ESR)} + V_{RIPPLE(ESL)} + V_{RIPPLE(C)}$ 

 $V_{RIPPLE(ESR)} = \Delta I_L \times R_{ESR}$ 

$$V_{RIPPLE(ESL)} = \frac{d}{dt}I_{L} \times ESL$$

$$V_{RIPPLE(C)} = \frac{\Delta I_L}{8 \times C_{OUT} \times f_{SW}}$$

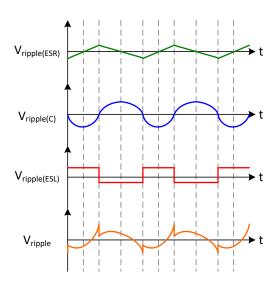


Figure 15. Output Ripple Decomposition

In addition to voltage ripple at the switching frequency, the output capacitor and its ESR also affect the voltage sag (undershoot) and soar (overshoot) when the load steps up and down abruptly. The A<sup>2</sup>RCOT transient response is very quick, and output transients are usually small. However, the combination of small ceramic output capacitors (with little capacitance), low output voltages (with little stored charge in the output capacitors), and low duty cycle applications (which require high inductance to get reasonable ripple currents with high input voltages) increases the size of voltage variations in response to very quick load changes. Typically, load changes occur slowly with respect to the IC's switching frequency. But some modern digital loads can exhibit nearly instantaneous load changes. The following section shows how to calculate the worst-case voltage swings in response to very fast load steps.

The amplitude of the capacitive sag is a function of the load step, the output capacitor value, the inductor value, the input-to-output voltage differential, and the maximum duty cycle. The maximum duty cycle during a fast transient is a function of the on-time and the minimum off-time since the A<sup>2</sup>RCOT control scheme will ramp the current using on-times spaced apart with minimum off-times, which is as fast as allowed. The behavior diagram of

DSQ5132-07



the output voltage drop is depicted in Figure 16. Calculate the approximate on-time (neglecting parasitic) and maximum duty cycle for a given input and output voltage as follows:

$$t_{ON} = \frac{V_{OUT}}{V_{IN} \times f_{SW}} \ \, \text{,and} \, \, D_{MAX} = \frac{t_{ON}}{t_{ON} + t_{OFF(MIN)}}$$

The actual on-time will be slightly longer as the IC compensates for voltage drops in the circuit, but it can be neglected both of these since the on-time increase compensates for the voltage losses. Calculate the output voltage sag as follows:

$$V_{SAG} = \frac{L \times \left(\Delta I_{OUT}\right)^2}{2 \times C_{OUT} \times \left(V_{IN(MIN)} \times D_{MAX} - V_{OUT}\right)}$$

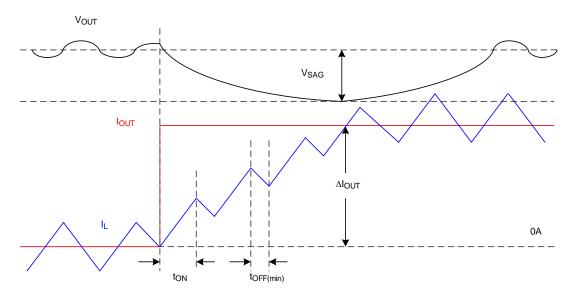


Figure 16. Output Voltage Drop (VSAG) Estimation as Output Load Current Step Up

The amplitude of the capacitive soar is a function of the load step, the output capacitor value, the inductor value, and the output voltage:

$$V_{SOAR} = \frac{L \times (\Delta I_{OUT})^2}{2 \times C_{OUT} \times V_{OUT}}$$

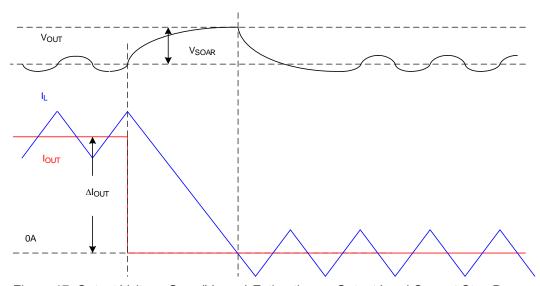


Figure 17. Output Voltage Soar (VSOAR) Estimation as Output Load Current Step Down

Copyright © 2024 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation

DSQ5132-07 October 2024 www.richtek.com



Most applications never experience instantaneous full load steps and the RTQ5132's high switching frequency and fast transient response can easily control voltage regulation at all times. Therefore, sag and soar are seldom an issue except in very low-voltage CPU core or DDR memory supply applications, particularly for devices with high clock frequencies and quick changes into and out of sleep modes. In such applications, simply increasing the amount of ceramic output capacitors (sag and soar are directly proportional to capacitance) or adding extra bulk capacitance can easily eliminate any excessive voltage transients.

In any application with large quick transients, it should calculate soar and sag to make sure that overvoltage protection and undervoltage protection will not be triggered.

In addition, the recommended dielectric type of the capacitor is X7R, which has the best performance among temperature and DC and AC bias voltage variations. The variation of the capacitance value with temperature, DC bias voltage, and switching frequency needs to be taken into consideration. For example, the capacitance value of a capacitor decreases as the DC bias across the capacitor increases. It is important to consider the voltage coefficient of ceramic capacitors when choosing the value and case size. Most ceramic capacitors lose 50% or more of their rated value when used near their rated voltage.

The standard electrical specifications for output capacitors are defined in Table 13. The electrical specifications include capacitance, rated voltage, and the size code in inches. The DIMM vendors should select the capacitors based on the specifications provided in Table 13.

iable 13. Outp	able 13. Output Capacitor Electrical Specifications				
Component	Value	Physical Size			
Couta	47μF (x2)	6.3V; 0603			
Соитв	47μF (x2)	6.3V; 0603			
Соитс	47μF (x2)	6.3V; 0603			
CDISTA*	350μF	6.3V; 0402			
CDISTB*	350μF	6.3V; 0402			
CDISTC*	150μF	6.3V; 0402			
CLDO_1.8V	4.7μF	6.3V; 0402			
CLDO_1.0V	4.7μF	6.3V; 0402			

Table 13. Output Capacitor Electrical Specifications

Note 6. Note that capacitors C<sub>DISTB</sub>, C<sub>DISTB</sub>, and C<sub>DISTC</sub> represent the total distributed capacitance across the entire DIMM.

#### 16.3 Input Capacitor Selection

A buck converter generates a pulsating ripple current with high di/dt at the input. Without input capacitors, the ripple current is supplied by the upper power source. The resistance and inductance of the Printed circuit board (PCB) cause high-voltage ripple that disrupts electronic devices. The circulating ripple current results in increased conducted and radiated EMI. Input capacitors provide a short bypass path for ripple current and stabilize the bus voltage during transient events.

The capacitor voltage rating should meet reliability and safety requirements. Generally, selecting an input capacitor with voltage rating 1.5 times greater than the maximum input voltage is a conservatively safe design. Among the different types of capacitors, the multilayer ceramic capacitor (MLCC) is particularly good regarding allowable ripple current due to low ESR and ESL. The following equation is used to estimate the required effective capacitance that will meet the ripple requirement.

$$C_{IN} \ge \frac{I_{OUT} \times D \times (1-D)}{\Delta V_{IN-PP} \times f_{SW}}$$

DSQ5132-07



where D is calculated as follows:

$$D = \frac{V_O}{V_{IN} \times \eta}$$

Besides the ripple-voltage requirement, the ceramic capacitors should meet the thermal stress requirement. The input capacitor is used to supply the input RMS current, which can be approximately calculated using the following equation:

$$I_{RMS} = \sqrt{\frac{V_{OUT}}{V_{IN}}} \times \left[ (1 - \frac{V_{OUT}}{V_{IN}}) \times I_{OUT}^2 + \frac{\Delta I_L^2}{12} \right]$$

Note that ripple current ratings from capacitor manufacturers are often based on only 2000 hours of life, which makes it advisable to further de-rate the capacitor, or choose a capacitor rated at a higher temperature than required.

Besides, since the ESL of ceramic capacitors plays a significant role in voltage spikes at the input and phase node, it is desirable to add a small capacitor with low ESL near the VIN pin.

While the MLCC is excellent regarding allowable ripple current, it is also well-known regarding effective capacitance that is necessary to meet transient response requirements. There can be two VIN spikes during the transient: the first spike is related to the ESR; and the second spike is caused by the difference between the buck-converter input current (iIN\_B) and the bus-converter output current (iPS) as depicted in Figure 18. Both spikes should be lower than the VIN undershoot or overshoot requirement (VIN\_tran). First, since the MLCCs have very small ESR, the component of ESR drop can almost be ignored. The second spike is related to the response of the bus converter. The converter output-current rise time during a transient event, TR\_PS, can be approximated by the following equation:

$$T_{R\_PS} \cong \frac{0.35}{f_{BW\ PS}}$$

where fBW\_PS is the control loop bandwidth of the buck converter.

The equivalent capacitance of the input capacitors should be greater than that calculated with the following equation:

$$C_{IN} \ \geq \ \frac{\frac{1}{2} \times I_{Step} \times D_{max} \times T_{R\_PS}}{V_{IN\_Tran}}$$

. RICHTEK is a registered trademark of Richtek Technology Corporation

www.richtek.com

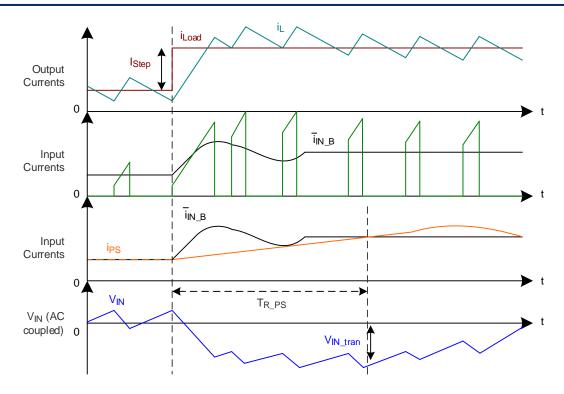


Figure 18. VIN Transient Current Diagram

Either VIN ripple ( $\Delta VIN_{PP}$ ) or Vin transient ripple ( $VIN_{Tran}$ ) should meet the design requirements. For the RTQ5132, the input voltage should always be higher than the VIN\_UVLO threshold to confirm the PMIC's functionality. Moreover, it should be noted that many de-rating factors, including VIN DC voltage, AC voltage, and operating temperature, make equivalent capacitance smaller than the capacitance without bias.

The standard electrical specifications for input capacitors are outlined in <u>Table 14</u>. These specifications include capacitance, rated voltage, and the size code in inches. DIMM vendors can choose the input capacitors based on the specifications provided in <u>Table 14</u>.

tubic 14. input Supuditor Electrical Specifications				
Component	Value	Physical Size		
CIN	4.7μF	10V; 0402		
CINA	22μF (x2)	10V; 0603		
CINB	22μF (x2)	10V; 0603		
CINC	22μF (x2)	10V; 0603		
Свур	0.1μF	10V; 0201		
Свура	0.1μF	10V; 0201		
Свурв	0.1μF	10V; 0201		
Свурс	0.1μF	10V; 0201		

**Table 14. Input Capacitor Electrical Specifications** 

#### 16.4 Bootstrap Circuit

The bootstrap circuit is useful in a high-voltage gate driver and operates as follows. When the SW node goes below the IC supply voltage Vcc (VDD) or is pulled down to ground (the low-side MOSFET is turned on and the high-side MOSFET is turned off), the bootstrap capacitor, CBOOT, charges through the bootstrap resistor, RBOOT, and bootstrap diode, DBOOT, from the VCC power supply, as shown in <u>Figure 19</u>. On the other hand, the voltage



across VBOOT and SW can supply gate charge to the high-side MOSFET when the low-side MOSFET is turned off and the SW node goes to a higher voltage, VOUT. In the meantime, the bootstrap diode reverses bias and blocks the rail voltage from the IC supply voltage, VCC.

Bootstrap charge current pathBootstrap discharge current path

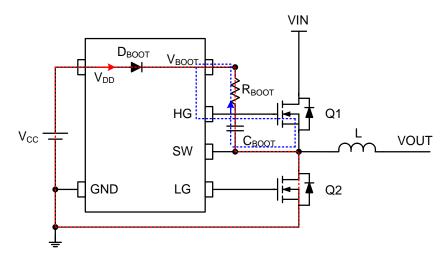


Figure 19. Bootstrap Power Supply Circuit

There are some design considerations for a bootstrap circuit. First, the selection of bootstrap capacitor ( $C_{BOOT}$ ) is based on the maximum voltage drop across  $C_{BOOT}$  to guarantee the high-side MOSFET has enough charge to turn on periodically. The maximum allowable voltage drop ( $\Delta V_{BOOT}$ ) depends on the minimum gate drive voltage to maintain the high-side MOSFET. If  $V_{GSMIN}$  is the minimum gate-source voltage, the capacitor drop must be:

$$\Delta V_{BOOT} = V_{CC} - V_{F} - V_{GSMIN}$$

where Vcc is the supply voltage of the gate driver, and VF is the forward voltage drop of the bootstrap diode.

Therefore, the value of the bootstrap capacitor is calculated as follows:

$$C_{BOOT} = \frac{Q_{Total}}{\Delta V_{BOOT}}$$

where Q<sub>Total</sub> is the total amount of the charge required for driving the high-side MOSFET and some leakage charge in the chip.

Second, when the external bootstrap resistor is used, the resistance, RBOOT, introduces an additional voltage drop:

$$V_{RBOOT} = \frac{Q_{Total}}{t_{Charge}} \times R_{BOOT}$$

where tcharge is the bootstrap charging time (the low-side MOSFET turn-on time).

The power dissipation on RBOOT should be considered when choosing the package size of the resistor. When estimating the maximum allowable voltage drop, the value of the voltage drop across the bootstrap resistor should be taken into account.

For example, assume V<sub>CC</sub> = 5V, V<sub>F</sub> = 0.7V, R<sub>BOOT</sub> =  $1\Omega$ , V<sub>GSMIN</sub> = 2.5V, and Q<sub>Total</sub> = 5nC. The  $\Delta$ V<sub>BOOT</sub> can be calculated as 1.8V. The estimated C<sub>BOOT</sub> is 2.8nF. Generally, the  $\Delta$ V<sub>BOOT</sub> is not suggested to be too large, and also need to consider the additional voltage drop on R<sub>BOOT</sub>. Moreover, the de-rating factors, including VIN DC voltage, AC voltage, and operating temperature, make the equivalent capacitance smaller. The common selection value of C<sub>BOOT</sub> is 100nF to 220nF, which makes the  $\Delta$ V<sub>BOOT</sub> to be 50mV and 25mV, resepectively. If choosing the bias capacitor with a 0201 package and 6.3V voltage rating, the de-rating factor is about 0.5. Therefore, the

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



 $\Delta$ VBOOT increases to 100mV and 50mV. In addition, the voltage drop on RBOOT = 1 $\Omega$  is 25mV as tcharge is 200nsec. Adding the RBOOT can reduce EMI noise as well as voltage spike on the phase node. However, the additional power loss will reduce the system efficiency.

## 16.5 VLDO\_1.8V and VLDO\_1.0V Decoupling Capacitor

The RTQ5132 integrates two LDO regulators: VLDO\_1.8V and VLDO\_1.0V. Both the VLDO\_1.8V and VLDO\_1.0V LDOs are powered by VIN and supply power to system devices such as SPD/HUB and CK on the DIMM. Each of them requires a decoupling capacitor to be placed near the output pin, with a minimum equivalent capacitance of at least  $2.2\mu F$ . In many applications, a  $4.7\mu F/6.3V/X5R/0402$  capacitor is recommended. When selecting the capacitor's package size and voltage rating, it is important to consider the de-rating coefficient based on voltage and temperature to account for the equivalent capacitance under actual operating conditions.

#### 16.6 Thermal Consideration

The junction temperature should never exceed the absolute maximum junction temperature T<sub>J(MAX)</sub>, listed under Absolute Maximum Ratings, to avoid permanent damage to the device. The maximum allowable power dissipation depends on the thermal resistance of the IC package, the PCB layout, the rate of surrounding airflow, and the difference between the junction and ambient temperatures. The maximum power dissipation can be calculated using the following formula:

$$P_{D(MAX)} = (T_{J(MAX)} - T_{A})/\theta_{JA}$$

where  $T_{J(MAX)}$  is the maximum junction temperature,  $T_A$  is the ambient temperature, and  $\theta_{JA}$  is the junction-to-ambient thermal resistance.

For continuous operation, the maximum operating junction temperature indicated under Recommended Operating Conditions is  $125^{\circ}$ C. The junction-to-ambient thermal resistance,  $\theta_{JA}$ , is highly package dependent. For a WQFN-28L 3x4 (FC) package, the thermal resistance,  $\theta_{JA}$ , is  $41^{\circ}$ C/W on high effective-thermal-conductivity four-layer test board. The maximum power dissipation at  $T_A = 25^{\circ}$ C can be calculated as follows:

 $PD(MAX) = (125^{\circ}C - 25^{\circ}C)/(41^{\circ}C/W) = 2.43W$  for a WQFN-28L 3x4 (FC) package.

The maximum power dissipation depends on the operating ambient temperature for the fixed  $T_{J(MAX)}$  and the thermal resistance,  $\theta_{JA}$ . The derating curve in <u>Figure 20</u> allows the designer to see the effect of rising ambient temperature on the maximum power dissipation.

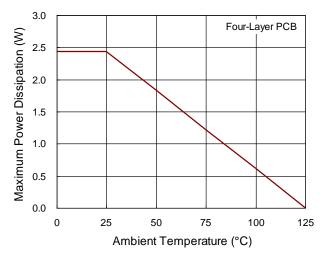


Figure 20. Derating Curve of Maximum Power Dissipation



#### 16.7 Layout Consideration

Layout is crucial in high-frequency switching converter design. If designed improperly, the PCB can radiate excessive noise and contribute to converter instability. The following points must be considered before starting a layout for the RTQ5132. Figure 21 and Figure 22 show the recommended layout guide for reference. Note that the components' sizes are considered and depicted in their actual relative sizes. Due to PMIC layout area limitations on the DIMM, the input capacitors and output capacitors are placed on this layer. Furthermore, the input capacitors have been divided into two parts: a small decoupling capacitor with a smaller package size and capacitance is mounted under one side of the VIN pin for each rail, and two bulk capacitors are placed directly beneath the VIN pin on the other side for each rail. The placement of the small decoupling capacitor helps filter out high-frequency voltage spikes, reducing phase ringing on the phase pin. The bulk capacitors provide prompt energy during output load transients. It is essential to keep noisy signals, such as the switching node and output capacitors' vias, away from sensitive areas. Below are the key considerations for the RTQ5132's EVB layout:

- Make the traces for high current paths as short and wide as possible to minimize resistance and inductance.
- Place the input capacitors as close to the device pins (VINA, VINB, and VINC) as possible to improve filtering and reduce noise.
- The SW node experiences high-frequency voltage swings, so keep it confined to a small area. Also, keep sensitive components away from the SW node to prevent noise coupling.
- Connect the PGND pin to a robust ground plane for effective heat sinking and noise suppression. For enhanced thermal dissipation, it is advisable to add thermal vias near the PGND pin to link different layers.
- It is recommended to connect the ground of VIN to AGND and then to the PGND layer through a single via to maintain signal integrity.
- Position decoupling capacitors as close to the device pins (VIN and AGND) as possible for optimal noise suppression.
- Differential route the feedback traces for each rail and ensure they are distanced from noisy signals on the EVB to avoid interference.
- The NC (No Connection) pins at the four corners are recommended to be connected to PGND for better heat dissipation.
- For the dual-phase applications, it is necessary to place the output capacitors (COUTA and COUTB) as close as
  possible to each other, and position the sense feedback node of SWA\_FB\_P at the center between VDD and
  VDDQ.

Copyright © 2024 Richtek Technology Corporation. All rights reserved.

DSQ5132-07 October 2024 www.richtek.com

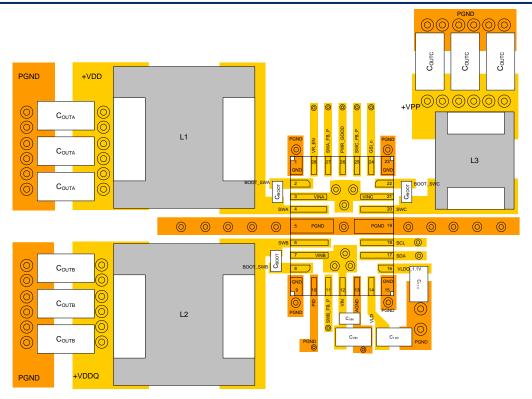


Figure 21. Layout Guide (Top Layer)

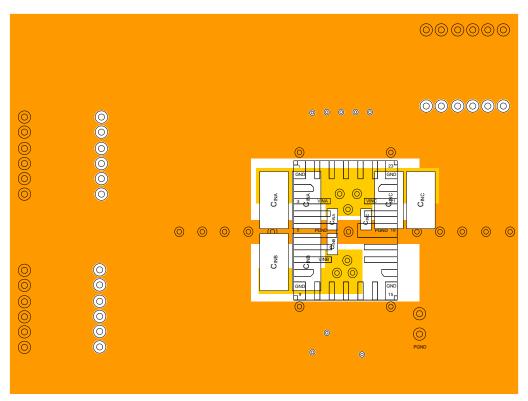


Figure 22. Layout Guide (Bottom Layer)

Note 7. The information provided in this section is for reference only. The customer is solely responsible for the designing, validating, and testing your product incorporating Richtek's product and ensure such product meets applicable standards and any safety, security, or other requirements.



# 17 Functional Register Description

**Register Attribute Definition** 

Attribute	Abbreviation	Description
Read Only	RO	This bit can be read by the host. Write has no effect.
Read/Write	RW	This bit can be read or written by the host.
Write Only	WO	This bit can only be written by the host. Read from this bit return '0'.
Reserved	RV	This bit is reserved for future expansion and its value must not be modified by the host. The bit will return '0' when read. Write has no effect.
Write '1' Only	10	This bit can only be set (write '1') but not reset (write '0'). Write '0' has no effect.
Persistent	Е	This bit is persistent during power cycles.
Protected	Р	This bit is protected by the password registers. This bit cannot be read or written unless the password code has been written into the password registers.

17.2 Register Map Breakdown

Region	Register Range	Restriction		
Host User (NVM and VM)	[0x15 – 0x2F, 0x32]			
DIMM Vendor (NVM)	[0x40 – R6F]	Register Modification is NOT allowed in Secure Mode		
PMIC Vendor (NVM)	[R70 – RFF]			
Host Region	[0x20 – 0x2D]	Registers are copied from DIMM Vendor Region Settings at power-on		

# 17.3 Register Memory Protection

The PMIC DIMM vendor registers (0x40 – 0x6F) are password protected registers. Both Read and Write access to DIMM vendor registers are blocked unless they are unlocked by providing the correct password. The default password for DIMM vendor registers is (Register\_0x37 = 0x73) and (Register\_0x38 = 0x94). The PMIC offers DIMM vendors to select their own passwords for DIMM vendor registers.

#### 17.3.1 Steps to Access DIMM Vendor Region Registers

To access the DIMM vendor registers, follow these steps:

- 1. Write the 8-bit password LSB code to Register 0x37.
- 2. Write the 8-bit password MSB code to Register 0x38.
- 3. Write 0x40 to Register 0x39.
- 4. Perform read operations on the DIMM vendor registers as needed.
- 5. Write 0x00 to Register 0x39 to lock the registers.

Copyright © 2024 Richtek Technology Corporation. All rights reserved.

DSQ5132-07 October 2024 www.richtek.com



### Steps to Change DIMM Vendor Region Password

By default, the DIMM vendor region register password is 0x9473. Follow these steps to change the password from the default:

- 1. Write 0x73 to Register 0x37 (default).
- 2. Write 0x94 to Register 0x38 (default).
- 3. Write 0x40 to Register 0x39.
- 4. Write the new 8-bit password LSB code, as desired by the DIMM vendor, to Register 0x37.
- 5. Write the new 8-bit password MSB code, as desired by the DIMM vendor, to Register 0x38.
- 6. Write 0x80 to Register 0x39.
- 7. Wait for 200 ms.
- 8. Write 0x00 to Register 0x39 (Lock).
- 9. Power cycle the PMIC by removing the VIN BULK supply. The new password will take effect after the power

To change the password again from this point on, repeat steps 1 to 8, but note that in steps 1 and 2, the current password is required.

#### Steps to Burn or Program DIMM Vendor Region Registers 17.3.3

The steps to burn or to program the DIMM vendor registers are as follows:

- 1. Write to "Register 0x37" = 8-bit password LSB code.
- 2. Write to "Register 0x38" = 8-bit password MSB code.
- 3. Write to "Register 0x39" = 0x40.
- 4. Programming DIMM vendor registers are done at the block level.

Block 40 addresses: 0x40 - 0x4F;

Block 50 addresses: 0x50 - 0x5F;

Block 60 addresses: 0x60 - 0x6F.

Perform write operations to each block as needed.

5. Burn each block one at a time:

Block 40 addresses: Write "Register 0x39" = 0x81.

Block 50 addresses: Write "Register 0x39" = 0x82.

Block 60 addresses: Write Register 0x39" = 0x85.

- 6. Wait for 200ms.
- 7. To check if programming is complete: Perform a read operation from "Register 0x39". The code 0x5A indicates it is complete. It takes 200ms per page to program.
- 8. To verify if programming is done correctly:

Perform a read operation from the appropriate block addresses.

9. Write to "Register 0x39" = 0x00. (Lock)



Table 15. Registers Map

Г	Table 15. Registers Map										
Address	Register Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default	Type
0x00	Reserved				R	2V				0x00	RV
0x01	Reserved				R	2V				0x00	RV
0x02	Reserved				R	2V				0x00	RV
0x03	Reserved				R	2V				0x00	RV
0x04	Global ERR Log	COUNT	BUCK_ OV_OR _UV	VIN_BU LK_OV	ОТР		R	V		0x00	ROE
0x05	PMIC Fault ERR Log	RV	A_NO_P G	RV	B_NO_P G	C_NO_P G	PMIC	C_ERROR_	LOG	0x00	ROE
0x06	UVLO/OV ERR Log	A_UVLO	RV	B_UVLO	C_UVLO	A_OV	RV	B_OV	C_OV	0x00	ROE
0x07	Reserved				R	.V				0x00	ROE
0x08	PMIC Status_0	RV	OTP	A_PG	RV	B_PG	C_PG	RV	VIN_BU CK_OV	0x00	RO
0x09	PMIC Status_1	HTW	RV	LDO_1.8 V PG	RV	A_HCW	RV	B_HCW	C_HCW	0x00	RO
0x0A	PMIC Status_2	A_OV	RV	B_OV	C_OV	PEC_ER R	PARITY ERR	IBI	RV	0x00	RO
0x0B	PMIC Status_3	A OC	RV	в ос	с ос	A_UVLO	RV	B UVLO	C UVLO	0x00	RO
0x0C	SWA Current & Power Measur ement	_	SWA_OUTPUT_CURRENT_POWER_MEASUREMENT							0x00	RO
0x0D	Reserved				R	٧.				0x00	RV
0x0E	SWB Current & Power Meas urement	R	V	SWB	SWB_OUTPUT_CURRENT_POWER_MEASUREMENT					0x00	RO
0x0F	SWC Current & Power Meas urement	R	v	SWC_OUTPUT_CURRENT_POWER_MEASUREMENT					MENT	0x00	RO
0x10	Clear Status Bits_0	R	V	A_PG	RV	B_PG	C_PG	RV	VIN_BU CK_OV	0x00	W10
0x11	Clear Status Bits_1	HTW	RV	LDO_1.8 V_PG	RV	A_HCW	RV	B_HCW	C_HCW	0x00	W10
0x12	Clear Status Bits_2	A_OV	RV	B_OV	C_OV	PEC _ERR	PARITY _ERR	R	RV	0x00	W10
0x13	Clear Status Bits_3	A_OC	RV	B_OC	c_oc	A_UVLO	RV	B_UVLO	C_UVLO	0x00	W10
0x14	Clear Status Bits_4			RV			LDO_1.0 V_PG	RV	GLOBAL _CLR	0x00	W10
0x15	Mask Status_0	R	V	A_PG	RV	B_PG	C_PG	RV	VIN_BU CK_OV	0x2C	RW
0x16	Mask Status_1	HTW	RV	LDO_1.8 V_PG	RV	A_HCW	RV	B_HCW	C_HCW	0x20	RW
0x17	Mask Status_2	A_OV	RV	B_OV	C_OV	PEC _ERR	PARITY _ERR	R	V	0x00	RW
0x18	Mask Status_3	A_OC	RV	B_OC	C_OC	A_UVLO	RV	B_UVLO	C_UVLO	0x00	RW
0x19	Mask Status_4			RV						0x04	RW
0x1A	Threshold Setti ngs_1		RV		LOW_IQ _EN	RV	V_PG LDO_1.8 V_PG	POWER _MEAS_	LDO_1.0 V_PG	0x00	RW

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



Address	Register Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default	Туре
	Name							SEL			
0x1B	Threshold Setti	VIN_BU CK_OV	CURRE NT_OR_ POWER _SEL	RV	PG_MA SK	GSI_N _ EN		HTW	HTW		RW
0x1C	SWA High Curr ent Warning T hreshold	SWA_OU	TPUT_HIG	_	NT_CONSU	JMPTION_\	WARNING	R	RV	0x60	RW
0x1D	Reserved		RV						0x00	RV	
0x1E	SWB High Cur rent Warning T hreshold	SWB_OU	TPUT_HIG	_	NT_CONSU	JMPTION_\	WARNING	R	°V	0x60	RW
0x1F	SWC High Cur rent Warning T hreshold	swc_ou	TPUT_HIG	_	NT_CONSU	JMPTION_\	WARNING	R	XV	0x60	RW
0x20	OC Threshold	A_	oc	R	RV	B_	oc	C_	ос	0xCF	RW
0x21	SWA Voltage & Threshold			VOL	TAGE_SET	TING		1	PGL	0x78	RW
0x22	SWA Threshold & Soft-stop Time	PC	ЭH	C	)V	UV	UVLO		SOFT_STOP_TIME		RW
0x23	Reserved		RV					0x00	RV		
0x24	Reserved		RV					0x00	RW		
0x25	SWB Voltage & Threshold			VOL	TAGE_SET	TING			PGL	0x78	RW
0x26	SWB Threshold & S oft-stop Time	PO	ЭН	OV U\		′LO	SOFT_ST	OP_TIME	0x63	RW	
0x27	SWC Voltage & Threshold			VOL	TAGE_SETTING				PGL	0x78	RW
0x28	SWC Threshold & S oft-stop Time	PC	ЭH	ov		UV	UVLO SOFT_S		OP_TIME	0x63	RW
0x29	FSW & Mode_ 1	A_MOI	DE_SEL	A_F	SW		F	RV	V		RW
0x2A	FSW & Mode_ 2	B_MOI	DE_SEL	B_F	SW	C_MOI	DE_SEL	C_F	SW	0x88	RW
0x2B	Buck & LDO Output Voltage Range		1.8V_ TAGE		RV			V_VOLTA SE	RV	0x42	RW
0x2C	Soft-start Time _1	A_SO	FT_START <sub>.</sub>	_TIME			RV			0x20	RW
0x2D	Soft-start Time	B_SO	FT_START <sub>.</sub>	_TIME	RV	C_SO	FT_START	_TIME	RV	0x22	RW
0x2E	OTP Threshold			RV				ОТР		0x04	RW
0x2F	PMIC Configur ation	RV	A_EN	RV	B_EN	C_EN	WRITE_ PROTE CTION	_	ITS_REGI ONTROL	0x06	RW
0x30	ADC Configura tion	ADC_E N		ADC	_SEL		RV ADC_UPDATE_FR EQ			0x00	RW
0x31	ADC Read	ADC_READ						0x00	RO		
0x32	PMIC_EN & Interface	VR_EN	I2C/I3C	PG_IO_ TYPE	PG_CC	NTROL		RV		0x00	RW/R O



Address	Register Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default	Туре
	Selection										
0x33	PMIC Status_4	Т	EMP_MEA	s	R	:V	LDO_1.0 V_PG	R	V	0x00	RO
0x34	PEC/IBI/PARIT Y/HID_CODE	PEC_EN	IBI_EN	PARITY _DIS	RV		HID_CODE		RV	0x0E	RO
0x35	Error Injection	EN		RAIL_SEL		OV_UV_ ERR_TY PE	MISC	_ERROR_	ГҮРЕ	0x00	RW
0x36	Reserved				F	.V				0x00	RV
0x37	DIMM Vendor Region Passwo rd Lower Byte			DIMN	_VENDOR	_PASSWO	RD_L			0x00	W
0x38	DIMM Vendor Region Passwo rd Upper Byte		DIMM_VENDOR_PASSWORD_H							0x00	W
0x39	DIMM Vendor Password Cont rol		DIMM_VENDOR_PASSWORD_CONTROL							0x00	RW
0x3A	Default Addres s Pointer Funct ion	RV	EN		TING_ RESS	BURST_	BURST_LENGTH RV		0x00	RW	
0x3B	Revision ID	R	RV MAJREV MINREV RV					ROE			
0x3C	Vendor ID Byte_0				VENDOR_	ID_BYTE0				0x8A	ROE
0x3D	Vendor ID Byte_1		VENDOR_ID_BYTE1							0x8C	ROE
0x3E	Reserved				F	2V				0x00	RV
0x3F	Reserved				F	2V				0x00	RV
0x40	Power-on sequ ence Configura tion 0	SEQ_E N	A_EN	RV	B_EN	C_EN		IDLE_TIME	:	0x89	RWPE
0x41	Power-on sequence Configuration 1	SEQ_E N	A_EN	RV	B_EN	C_EN		IDLE_TIME		0xD9	RWPE
0x42	Power-on sequence Configuration 2	SEQ_E N	A_EN	RV	B_EN	C_EN		IDLE_TIME		0x00	RWPE
0x43	Reserved				F	2V				0x00	RWPE
0x44	Reserved				F	²V				0x00	RWPE
0x45	DIMM_ SWA Voltage & Threshold			VOL	TAGE_SET	TING			PGL	0x78	RWPE
0x46	DIMM_ SWA Threshold & Soft-stop Ti me	PGH C			v	UVLO SOFT_ST		OP_TIME	0x63	RWPE	
0x47	Reserved			ı	F	:V				0x00	RWPE
0x48	Reserved					۲V				0x00	RWPE
0x49	DIMM_ SWB Voltage & Threshold			VOL	TAGE_SET				PGL	0x78	RWPE

Copyright © 2024 Richtek Technology Corporation. All rights reserved.

DSQ5132-07 October 2024 www.richtek.com



Address	Register Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default	Туре
0x4A	DIMM_ SWB Threshol d & Soft-stop Time	PG	ЭН	0	V	UV	UVLO SO		SOFT_STOP_TIME		RWPE
0x4B	DIMM_ SWC Voltage & Threshold			VOL	TAGE_SET	TING			PGL	0x78	RWPE
0x4C	DIMM_ SWC Threshol d & Soft-stop Time	PO	ЭН	0	V	UV	'LO	SOFT_ST	OP_TIME	0x63	RWPE
0x4D	DIMM_ FSW & Mode_ 1	A_MOD	E_SEL	A_F	SW		Res	erved		0x80	RWPE
0x4E	DIMM_ FSW & Mode_ 2	B_MOD	E_SEL	B_F	SW	С_МОГ	DE_SEL	C_F	sw	0x88	RWPE
0x4F	Reserved				F	RV				0x00	RWPE
0x50	DIMM_ OC Threshold	A_0	oc	R	V	В_	ос	C_	ос	0xCF	RWPE
0x51	DIMM_ Buck & LDO Output Voltage Range	LDO_1.8V_ VOLTAGE		R	V	I RV I		V_VOLTA RV		0x42	RWPE
0x52	Reserved		RV						0x00	RV	
0x53	Reserved		RV						0x00	RV	
0x54	Reserved		RV						0x00	RV	
0x55	Reserved				F	٧٧				0x00	RV
0x56	Reserved				F	٧٧				0x00	RV
0x57	Reserved				F	RV				0x00	RV
0x58	Power-off sequ ence Configura tion 0	SEQ_E N	A_DIS	RV	B_DIS	C_DIS		IDLE_TIME	Ē	0xD1	RWPE
0x59	Power-off sequ ence Configura tion 1	SEQ_E N	A_DIS	RV	B_DIS	C_DIS		IDLE_TIME	Ē	0xD9	RWPE
0x5A	Power-off sequ ence Configura tion 2	SEQ_E N	A_DIS	RV	B_DIS	C_DIS		IDLE_TIME	<u> </u>	0x00	RWPE
0x5B	Reserved				F	RV				0x00	RV
0x5C	Reserved				F	RV				0x00	RV
0x5D	DIMM_Soft-star t Time_1	A_SOI	FT_START	_TIME			RV			0x20	RWPE
0x5E	DIMM_Soft-star t Time_2	B_SOI	FT_START	_TIME	RV	C_SO	FT_START	_TIME	RV	0x22	RWPE
0x5F	Reserved					RV				0x00	RV
0x60	Reserved					RV				0x00	RV
0x61	Reserved					RV				0x00	RV
0x62	Reserved		RV							0x00	RV
0x63	Reserved					RV				0x00	RV
0x64	Reserved				F	RV				0x00	RV



Address	Register Name	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Default	Туре
0x65	Reserved				F	2V				0x00	RV
0x66	Reserved		RV								RV
0x67	Reserved		RV								RV
0x68	Reserved		RV							0x00	RV
0x69	Reserved				F	²V				0x00	RV
0x6A	Reserved				F	2V				0x00	RV
0x6B	Reserved				F	²V				0x00	RV
0x6C	Reserved				F	2V				0x00	RV
0x6D	Reserved		RV							0x00	RV
0x6E	Reserved		RV							0x00	RV
0x6F	Reserved				F	²V				0x00	RV

# 17.4 B-5 Host Region Registers

# Table 16. Reserved 0x00

	Address: 0x00 Description: Reserved							
Bits	Attribute	Default	Description					
7:0	RV	0	0x00 [7:0]: Reserved					

# Table 17. Reserved 0x01

	Address: 0x01 Description: Reserved							
Bits	Attribute	Default	Description					
7:0	RV	0	0x01 [7:0]: Reserved					

# Table 18. Reserved 0x02

	Address: 0x02 Description: Reserved							
Bits	Attribute	Default	Description					
7:0	RV	0	0x02 [7:0]: Reserved					

# Table 19. Reserved 0x03

	Address: 0x03 Description: Reserved							
Bits	Attribute	Default	Description					
7:0	RV	0	0x03 [7:0]: Reserved					

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# Table 20. Global Error Log

	Address: 0x04 Description: Global Error Log								
Bits	Attribute	Default	Description						
7	ROE	0	0x04 [7]: GLOBAL_ERROR_COUNT Global Error Count Since Last Erase Operation 0 = No Error or Only 1 Error since last Erase Operation 1 = > 1 Error Count since last Erase Operation						
6	ROE	0	0x04 [6]: GLOBAL_ERROR_LOG_BUCK_OV_OR_UV Global Error Log History for Buck Regulator Output Overvoltage or Undervoltage 0 = No Error Occurred 1 = Error Occurred						
5	ROE	0	0x04 [5]: GLOBAL_ERROR_LOG_VIN_BULK_OVER_VOTLAGE Global Error Log History for VIN_BULK Overvoltage 0 = No Error Occurred 1 = Error Occurred						
4	ROE	0	0x04 [4]: GLOBAL_ERROR_LOG_CRITICAL_TEMPERATURE Global Error Log History for Critical Temperature 0 = No Error Occurred 1 = Error Occurred						
3:0	RV	0	0x04 [3:0]: Reserved						

Table 21. PG-On-Reset ERR Log

	ss: 0x05 iption: PG-C	n-Reset EF	RR Log
Bits	Attribute	Default	Description
7	RV	0	0x05 [7]: Reserved
6	ROE	0	0x05 [6]: SWA_POWER_GOOD SWA Condition from Previous Power Cycle 0 = Normal Power-On 1 = SWA Power Not Good
5	RV	0	0x05 [5]: Reserved
4	ROE	0	0x05 [4]: SWB_POWER_GOOD SWB Condition from Previous Power Cycle 0 = Normal Power-On 1 = SWB Power Not Good
3	ROE	0	0x05 [3]: SWC_POWER_GOOD SWC Condition from Previous Power Cycle 0 = Normal Power-On 1 = SWC Power Not Good
2:0	ROE	0	0x05 [2:0]: PMIC_ERROR_LOG PMIC Power On - High Level Status Bit to Indicate Previous Power Down Cycle 000 = Normal Power-On 001 = Reserved 010 = Buck Regulator Output Over or Undervoltage 011 = Critical Temperature 100 = VIN_Bulk Input Overvoltage 101 = Reserved 110 = Reserved 111 = Reserved



Table 22. UVLO/OV ERR Log

Address: 0x06
Description: UVLO/OV ERR Log

Descr	Description: UVLO/OV ERR Log							
Bits	Attribute	Default	Description					
7	ROE	0	0x06 [7]: SWA_UNDER_VOLTAGE_LOCKOUT PMIC Power-On - SWA Undervoltage-Lockout 0 = Normal Power-On 1 = Power-On - SWA Undervoltage-Lockout					
6	RV	0	0x06 [6]: Reserved					
5	ROE	0	0x06 [5]: SWB_UNDER_VOLTAGE_LOCKOUT PMIC Power-On - SWB Undervoltage-Lockout 0 = Normal Power-On 1 = SWB Undervoltage-Lockout					
4	ROE	0	0x06 [4]: SWC_UNDER_VOLTAGE_LOCKOUT PMIC Power-On - SWC Undervoltage-Lockout 0 = Normal Power-On 1 = SWC Undervoltage-Lockout					
3	ROE	0	0x06 [3]: SWA_OVER_VOLTAGE PMIC Power-On - SWA Overvoltage 0 = Normal Power-On 1 = SWA Overvoltage					
2	RV	0	0x06 [2]: Reserved					
1	ROE	0	0x06 [1]: SWB_OVER_VOLTAGE PMIC Power-On - SWB Overvoltage 0 = Normal Power-On 1 = SWB Overvoltage					
0	ROE	0	0x06 [0]: SWC_OVER_VOLTAGE PMIC Power-On - SWC Overvoltage 0 = Normal Power-On 1 = SWC Overvoltage					

# Table 23. Reserved 0x07

Address: 0x07 Description: Reserved							
Bits	Attribute	Default	Description				
7:0	RV	0	0x07 [7:0]: Reserved				

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# Table 24. Power-Good Status

Address: 0x08

Descr	<b>Description:</b> Power-Good Status						
Bits	Attribute	Default	Description				
7	RV	0	0x08 [7]: Reserved				
6	RO	0	0x08 [6]: CRITICAL_TEMP_SHUTDOWN_STATUS Critical Temperature Shutdown Status 0 = No Critical Temperature Shutdown 1 = Critical Temperature Shutdown				
5	RO	0	0x08 [5]: SWA_OUTPUT_POWER_GOOD_STATUS Switch Node A Output Power-Good Status 0 = Power Good 1 = Power Not Good				
4	RV	0	0x08 [4]: Reserved				
3	RO	0	0x08 [3]: SWB_OUTPUT_POWER_GOOD_STATUS Switch Node B Output Power-Good Status 0 = Power Good 1 = Power Not Good				
2	RO	0	0x08 [2]: SWC_OUTPUT_POWER_GOOD_STATUS Switch Node C Output Power-Good Status 0 = Power Good 1 = Power Not Good				
1	RV	0	0x08 [1]: Reserved				
0	RO	0	0x08 [0]: VIN_BULK_INPUT_OVER_VOLTAGE_STATUS VIN_BULK Input Supply Overvoltage Status 0 = No Overvoltage 1 = Overvoltage				



#### Table 25. PMIC Status\_1

Address: 0x09 **Description: PMIC Status 1** Bits **Attribute Default** Description 0x09 [7]: PMIC HIGH TEMP WARNING STATUS PMIC High Temperature Warning Status 7 RO 0 0 = Temperature Below the Warning Threshold 1 = Temperature Exceeded the Warning Threshold 6 RV 0 0x09 [6]: Reserved 0x09 [5]: VLDO 1.8V OUTPUT POWER GOOD STATUS VLDO 1.8V LDO Output Power-Good Status 5 RO 0 0 = Power Good 1 = Power Not Good 0 4 RV 0x09 [4]: Reserved SWA HIGH OUTPUT CURRENT CONSUMPTION WARNING STATUS 0 3 RO Switch Node A High Output Current Consumption Warning Status 0 = No High Current Consumption Warning 1 = High Current Consumption Warning 2 RV 0 0x09 [2]: Reserved 0x09 [1]: SWB HIGH OUTPUT CURRENT CONSUMPTION WARNING STATUS 0 1 RO Switch Node B High Output Current Consumption Warning Status 0 = No High Current Consumption Warning 1 = High Current Consumption Warning SWC HIGH OUTPUT CURRENT CONSUMPTION WARNING STATUS 0 Switch Node C High Output Current Consumption Warning Status 0 RO 0 = No High Current Consumption Warning 1 = High Current Consumption Warning



## Table 26. PMIC Status\_2

Address: 0x0A

Descri	Description: PMIC Status_2				
Bits	Attribute	Default	Description		
7	RO	0	0x0A [7]: SWA_OUTPUT_OVER_VOLTAGE_STATUS Switch Node A Output Overvoltage Status 0 = No Overvoltage 1 = Overvoltage		
6	RV	0	0x0A [6]: Reserved		
5	RO	0	0x0A [5]: SWB_OUTPUT_OVER_VOLTAGE_STATUS Switch Node B Output Overvoltage Status 0 = No Overvoltage 1 = Overvoltage		
4	RO	0	0x0A [5]: SWC_OUTPUT_OVER_VOLTAGE_STATUS Switch Node C Output Overvoltage Status 0 = No Overvoltage 1 = Overvoltage		
3	RO	0	0x0A [3]: PEC_ERROR_STATUS Packet Error Code Status 0 = No PEC Error 1 = PEC Error		
2	RO	0	0x0A [2]: PARITY_ERROR_STATUS T Bit Parity Error Status 0 = No Parity Error 1 = Parity Error		
1	RO	0	0x0A [1]: IBI_STATUS In Band Interrupt Status 0 = No Pending IBI 1 = Pending IBI		
0	RV	0	0x0A [0]: Reserved		



## Table 27. PMIC Status\_3

Address: 0x0B
Description: PMIC Status\_3

Descr	Description: PMIC Status_3					
Bits	Attribute	Default	Description			
7	RO	0	0x0B [7]: SWA_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Switch Node A Output Current Limiter Warning Status 0 = No Current Limiter Event 1 = Current Limiter Event			
6	RV	0	0x0B [6]: Reserved			
5	RO	0	0x0B [5]: SWB_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Switch Node B Output Current Limiter Warning Status 0 = No Current Limiter Event 1 = Current Limiter Event			
4	RO	0	0x0B [4]: SWC_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Switch Node C Output Current Limiter Warning Status 0 = No Current Limiter Event 1 = Current Limiter Event			
3	RO	0	0x0B [3]: SWA_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Switch Node A Output Undervoltage-Lockout Status 0 = No Undervoltage-Lockout 1 = Undervoltage-Lockout			
2	RV	0	0x0B [2]: Reserved			
1	RO	0	0x0B [1]: SWB_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Switch Node B Output Undervoltage-Lockout Status 0 = No Undervoltage-Lockout 1 = Undervoltage-Lockout			
0	RO	0	0x0B [0]: SWC_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Switch Node C Output Undervoltage-Lockout Status 0 = No Undervoltage-Lockout 1 = Undervoltage-Lockout			



#### **Table 28. SWA Current and Power Measurement**

Address: 0x0C **Description:** SWA Current and Power Measurement

Bits	Attribute	Default	Description
7:0	RO	0	0x0C [7:0]: SWA_OUTPUT_CURRENT_POWER_MEASUREMENT If Register 0x1A [1] = 0, Switch Node A Output Current or Output Power Measurement 0000 0000 = Un-defined 0000 0001 = 0.125A or 125mW 0000 0010 = 0.25A or 250mW 0000 0110 = 0.375A or 375mW 0000 0100 = 0.5A or 500mW 0000 0110 = 0.625A or 625mW 0000 0110 = 0.75A or 750mW 0000 0111 = 0.875A or 875mW 0000 1110 = 0.75A or 750mW 0000 1001 = 1.0A or 1000mW 0000 1001 = 1.125A or 1125mW 0011 0111 = 6.875A or 6875mW 0011 1001 = 7.125A or 7125mW 0011 1001 = 7.25A or 7250mW 0011 1010 = 7.25A or 7550mW 0011 1011 = 7.375A or 7375mW 0011 1011 = 7.365A or 7625mW 0011 1110 = 7.5A or 7500mW 0011 1110 = 7.75A or 7750mW 0011 1111 ≥ 7.875A or 7875mW All other encodings are reserved  If Register 0x1A [1] = 1, Sum of SWA, SWB, and SWC Output Power 0000 0000 = Un-defined 0000 0001 = 125mW 0000 0010 = 250mW 0000 0110 = 375mW 0000 0100 = 500mW 1111 1110 = 31500mW 1111 1110 = 31750mW 1111 1111 ≥ 31875mW

#### Table 29. Reserved 0x0D

Address: 0x0D **Description:** Reserved **Bits Attribute** Default **Description** 7:0 RV0

0x0D [7:0]: Reserved



#### **Table 30. SWB Current and Power Measurement**

Address: 0x0E **Description:** SWB Current and Power Measurement **Bits Default Attribute** Description 7:6 RV 0 0x0E [7:6]: Reserved 0x0E [5:0]: SWB OUTPUT CURRENT POWER MEASUREMENT Switch Node B Output Current or Output Power Measurement 000000 = Un-defined000001 = 0.125A or 125mW 000010 = 0.25A or 250mW 000011 = 0.375A or 375mW 000100 = 0.5A or 500mW000101 = 0.625A or 625mW000110 = 0.75A or 750mW 000111 = 0.875A or 875mW 001000 = 1.0A or 1000 mW5:0 RO 0 001001 = 1.125A or 1125mW 001010 = 1.25A or 1250mW 110111 = 6.875A or 6875mW 111000 = 7.0A or 7000mW 111001 = 7.125A or 7125mW 111010 = 7.25A or 7250mW 111011 = 7.375A or 7375mW 111100 = 7.5A or 7500mW 111101 = 7.625A or 7625mW 111110 = 7.75A or 7750mW

 $111111 \ge 7.875A$  or 7875mW



#### Table 31. SWC Current and Power Measurement

Bits	Attribute	Default	Description
7:6	RV	0	0x0F [7:6]: Reserved
5:0	RO	0	0x0F [5:0]: SWC_OUTPUT_CURRENT_POWER_MEASUREMENT Switch Node C Output Current or Output Power Measurement 000000 = Un-defined 000001 = 0.125A or 125mW 000010 = 0.25A or 250mW 000011 = 0.375A or 375mW 000100 = 0.5A or 500mW 000101 = 0.625A or 625mW 000110 = 0.75A or 750mW 000111 = 0.875A or 875mW 001000 = 1.0A or 1000mW 001001 = 1.125A or 1125mW 110111 = 6.875A or 6875mW 111000 = 7.0A or 7000mW 111001 = 7.125A or 7125mW 111010 = 7.25A or 7250mW 111011 = 7.375A or 7375mW 111100 = 7.5A or 7500mW 111110 = 7.75A or 7750mW

#### Table 32. Clear Status Bits 0

 $111111 \ge 7.875A$  or 7875mW

	Address: 0x10 Description: Clear Status Bits 0				
Bits	Attribute	Default	Description		
7:6	RV	0	0x10 [7:6]: Reserved		
5	10	0	0x10 [5]: CLEAR_SWA_OUTPUT_POWER_GOOD_STATUS Clear SWA Output Power-Good Status. 1 = Clear "Register 0x08" [5]		
4	RV	0	0x10 [4]: Reserved		
3	10	0	0x10 [3]: CLEAR_SWB_OUTPUT_POWER_GOOD_STATUS Clear SWB Output Power-Good Status. 1 = Clear "Register 0x08" [3]		
2	10	0	0x10 [2]: CLEAR_SWC_OUTPUT_POWER_GOOD_STATUS Clear SWC Output Power-Good Status. 1 = Clear "Register 0x08" [2]		
1	RV	0	0x10 [1]: Reserved		
0	10	0	0x10 [0]: CLEAR_VIN_BULK_INPUT_OVER_VOLTAGE_STATUS Clear VIN_BULK Input Supply Overvoltage Status. 1 = Clear "Register 0x08" [0]		



## Table 33. Clear Status Bits\_1

Address: 0x11
Description: Clear Status Bits\_1

Desc	escription: Clear Status Bits_1					
Bits	Attribute	Default	Description			
7	10	0	0x11 [7]: CLEAR_PMIC_HIGH_TEMP_WARNING_STATUS Clear PMIC High Temperature Warning Status. 1 = Clear "Register 0x09" [7]			
6	RV	0	0x11 [6]: Reserved			
5	10	0	0x11 [5]: CLEAR_VLDO_1.8V_OUTPUT_POWER_GOOD_STATUS Clear VLDO_1.8V Output Power-Good Status 1 = Clear "Register 0x09" [5]			
4	RV	0	0x11 [4]: Reserved			
3	10	0	0x11 [3]: CLEAR_SWA_HIGH_OUTPUT_CURRENT_CONSUMPTION_WARNING_STATUS Clear Switch Node A High Output Current Consumption Warning Status. 1 = Clear "Register 0x09" [3]			
2	RV	0	0x11 [2]: Reserved			
1	10	0	0x11 [1]: CLEAR_SWB_HIGH_OUTPUT_CURRENT_CONSUMPTION_WARNING_STATUS Clear Switch Node B High Output Current Consumption Warning Status. 1 = Clear "Register 0x09" [1]			
0	10	0	0x11 [0]: CLEAR_SWC_HIGH_OUTPUT_CURRENT_CONSUMPTION_WARNING_STATUS Clear Switch Node C High Output Current Consumption Warning Status. 1 = Clear "Register 0x09" [0]			



#### Table 34. Clear Status Bits\_2

Address: 0x12 Description: Clear Status Rits 2

Bits	Attribute	Default	Description
7	10	0	0x12 [7]: CLEAR_SWA_OUTPUT_OVER_VOLTAGE_STATUS Clear Switch Node A Output Overvoltage Status. 1 = Clear "Register 0x0A" [7]
6	RV	0	0x12 [6]: Reserved
5	10	0	0x12 [5]: CLEAR_SWB_OUTPUT_OVER_VOLTAGE_STATUS Clear Switch Node B Output Overvoltage Status. 1 = Clear "Register 0x0A" [5]
4	10	0	0x12 [4]: CLEAR_SWC_OUTPUT_OVER_VOLTAGE_STATUS Clear Switch Node C Output Overvoltage Status. 1 = Clear "Register 0x0A" [4]
3	10	0	0x12 [3]: CLEAR_PEC_ERROR_STATUS Clear PEC Error Status. 1 = Clear "Register 0x0A" [3]
2	10	0	0x12 [2]: CLEAR_PARITY_ERROR_STATUS Clear Parity Error Status. 1 = Clear "Register 0x0A" [2]
1:0	RV	0	0x12 [1:0]: Reserved

#### Table 35. Clear Status Bits\_3

Address: 0x13 **Description:** Clear Status Bits 3 **Bits Attribute** Default Description 0x13 [7]: CLEAR SWA OUTPUT CURRENT LIMITER WARNING STATUS Clear Switch Node A Output Current Limiter Warning Status. 7 0 10 1 = Clear "Register 0x0B" [7] 0 0x13 [6]: Reserved 6 RV 0x13 [5]: CLEAR\_SWB\_OUTPUT\_CURRENT\_LIMITER\_WARNING\_STATUS 5 10 0 Clear Switch Node B Output Current Limiter Warning Status. 1 = Clear "Register 0x0B" [5] 0x13 [4]: CLEAR SWC OUTPUT CURRENT LIMITER WARNING STATUS Clear Switch Node C Output Current Limiter Warning Status. 0 4 10 1 = Clear "Register 0x0B" [4] 0x13 [3]: CLEAR SWA OUTPUT UNDER VOLTAGE LOCKOUT STATUS 0 Clear Switch Node A Output Undervoltage-Lockout Status. 3 10 1 = Clear "Register 0x0B" [3] 2 0 RV 0x13 [2]: Reserved 0x13 [1]: CLEAR SWB OUTPUT UNDER VOLTAGE LOCKOUT STATUS 0 Clear Switch Node B Output Undervoltage-Lockout Status. 1 10 1 = Clear "Register 0x0B" [1] 0x13 [0]: CLEAR SWC OUTPUT UNDER VOLTAGE LOCKOUT STATUS Clear Switch Node C Output Undervoltage-Lockout Status. 0 0 10 1 = Clear "Register 0x0B" [0]



## Table 36. Clear Status Bits\_4

2 101011	Address: 0x14  Description: Clear Status Bits_4				
Bits	Attribute	Default	Description		
7:3	RV	0	0x14 [7:3]: Reserved		
2	10	0	0x14 [2]: CLEAR_VLDO_1.0V_OUTPUT_POWER_GOOD_STATUS Clear VLDO_1.0V Output Power-Good Status. 1 = Clear "Register 0x33" [2]		
1	RV	0	0x14 [1]: Reserved		
0	10	0	0x14 [0]: GLOBAL_CLEAR_STATUS Clear all status bits. 1 = Clear all status bits		

Table 37. Mask Status\_0

2 10.0	Address: 0x15 Description: Mask Status_0				
Bits	Attribute	Default	Description		
7:6	RV	0	0x15 [7:6]: Reserved		
5	RW	1	0x15 [5]: MASK_SWA_OUTPUT_POWER_GOOD_STATUS Mask SWA Output Power-Good Status Event. 0 = Do Not Mask SWA Output Power-Good Status Event 1 = Mask SWA Output Power-Good Status Event		
4	RV	0	0x15 [4]: Reserved		
3	RW	1	0x15 [3]: MASK_SWB_OUTPUT_POWER_GOOD_STATUS Mask SWB Output Power-Good Status Event. 0 = Do Not Mask SWB Output Power-Good Status Event 1 = Mask SWB Output Power-Good Status Event		
2	RW	1	0x15 [2]: MASK_SWC_OUTPUT_POWER_GOOD_STATUS Mask SWC Output Power-Good Status Event. 0 = Do Not Mask SWC Output Power-Good Status Event 1 = Mask SWC Output Power-Good Status Event		
1	RV	0	0x15 [1]: Reserved		
0	RW	0	0x15 [0]: MASK_VIN_BULK_INPUT_OVER_VOLTAGE_STATUS Mask VIN_Bulk Input Supply Overvoltage Status Event. 0 = Do Not Mask VIN_Bulk Input Supply Overvoltage Status Event 1 = Mask VIN_Bulk Input Supply Overvoltage Status Event		



## Table 38. Mask Status\_1

Address: 0x16

Descr	Description: Mask Status_1				
Bits	Attribute	Default	Description		
7	RW	0	0x16 [7]: MASK_PMIC_HIGH_TEMP_WARNING_STATUS Mask PMIC High Temperature Warning Status Event. 0 = Do Not Mask PMIC High Temperature Warning Status Event 1 = Mask PMIC High Temperature Warning Status Event		
6	RV	0	0x16 [6]: Reserved		
5	RW	1	0x16 [5]: MASK_VLDO_1.8V_OUTPUT_POWER_GOOD_STATUS Mask VLDO_1.8V Output Power-Good Status Event. 0 = Do Not Mask 1.8V Output Power-Good Status Event 1 = Mask 1.8V Output Power-Good Status Event		
4	RV	0	0x16 [4]: Reserved		
3	RW	0	0x16 [3]: MASK_SWA_HIGH_OUTPUT_CURRENT_CONSUMPTION_ WARNING_STATUS Mask Switch Node A High Output Current Consumption Warning Status Event. 0 = Do Not Mask Switch Node A Output Current Consumption Warning Status Event 1 = Mask Switch Node A Output Current Consumption Warning Status Event		
2	RV	0	0x16 [2]: Reserved		
1	RW	0	0x16 [1]: MASK_SWB_HIGH_OUTPUT_CURRENT_CONSUMPTION_ WARNING_STATUS Mask Switch Node B High Output Current Consumption Warning Status Event 0 = Do Not Mask Switch Node B Output Current Consumption Warning Status Event 1 = Mask Switch Node B Output Current Consumption Warning Status Event		
0	RW	0	0x16 [0]: MASK_SWC_HIGH_OUTPUT_CURRENT_CONSUMPTION_WARNING_STATUS Mask Switch Node C High Output Current Consumption Warning Status Event. 0 = Do Not Mask Switch Node C Output Current Consumption Warning Status Event 1 = Mask Switch Node C Output Current Consumption Warning Status Event		



## Table 39. Mask Status\_2

Address: 0x17
Description: Mask Status\_2

Descri	Description: Mask Status_2				
Bits	Attribute	Default	Description		
7	RW	0	0x17 [7]: MASK_SWA_OUTPUT_OVER_VOLTAGE_STATUS Mask Switch Node A Output Overvoltage Status Event. 0 = Do Not Mask Switch Node A Output Overvoltage Status Event 1 = Mask Switch Node A Output Overvoltage Status Event		
6	RV	0	0x17 [6]: Reserved		
5	RW	0	0x17 [5]: MASK_SWB_OUTPUT_OVER_VOLTAGE_STATUS Mask Switch Node B Output Overvoltage Status Event. 0 = Do Not Mask Switch Node B Output Overvoltage Status Event 1 = Mask Switch Node B Output Overvoltage Status Event		
4	RW	0	0x17 [4]: MASK_SWC_OUTPUT_OVER_VOLTAGE_STATUS Mask Switch Node C Output Overvoltage Status Event. 0 = Do Not Mask Switch Node C Output Overvoltage Status Event 1 = Mask Switch Node C Output Overvoltage Status Event		
3	RW	0	0x17 [3]: MASK_PEC_ERROR_STATUS Mask PEC Error Event for GSI_n output Only 0 = Do Not Mask PEC Error Status Event 1 = Mask PEC Error Status		
2	RW	0	0x17 [2]: MASK_PARITY_ERROR_STATUS  Mask Parity Error Event for GSI_n output Only 0 = Do Not Mask Parity Error Status Event 1 = Mask Parity Error Status		
1:0	RV	0	0x17 [1:0]: Reserved		



# Table 40 Mack Status 3

	ess: 0x18 ription: Mask	Status_3	
Bits	Attribute	Default	Description
7	RW	0	0x18 [7]: MASK_SWA_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Mask Switch Node A Output Current Limiter Warning Status Event.  0 = Do Not Mask Switch Node A Output Current Limiter Warning Status Event  1 = Mask Switch Node A Output Current Limiter Warning Status Event
6	RV	0	0x18 [6]: Reserved
5	RW	0	0x18 [5]: MASK_SWB_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Mask Switch Node B Output Current Limiter Warning Status Event.  0 = Do Not Mask Switch Node B Output Current Limiter Warning Status Event  1 = Mask Switch Node B Output Current Limiter Warning Status Event
4	RW	0	0x18 [4]: MASK_SWC_OUTPUT_CURRENT_LIMITER_WARNING_STATUS Mask Switch Node C Output Current Limiter Warning Status Event.  0 = Do Not Mask Switch Node C Output Current Limiter Warning Status Event  1 = Mask Switch Node C Output Current Limiter Warning Status Event
3	RW	0	0x18 [3]: MASK_SWA_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Mask Switch Node A Output Undervoltage-Lockout Status Event.  0 = Do Not Mask Switch Node A Output Undervoltage-Lockout Status Event  1 = Mask Switch Node A Output Undervoltage-Lockout Status Event
2	RV	0	0x18 [2]: Reserved
1	RW	0	0x18 [1]: MASK_SWB_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Mask Switch Node B Output Undervoltage-Lockout Status Event. 0 = Do Not Mask Switch Node B Output Undervoltage-Lockout Status Event 1 = Mask Switch Node B Output Undervoltage-Lockout Status Event
0	RW	0	0x18 [0]: MASK_SWC_OUTPUT_UNDER_VOLTAGE_LOCKOUT_STATUS Mask Switch Node C Output Undervoltage-Lockout Status Event. 0 = Do Not Mask Switch Node C Output Undervoltage-Lockout Status Event

#### Table 41. Mask Status 4

1 = Mask Switch Node C Output Undervoltage-Lockout Status Event

Address: 0x19 Description: Mask Status_4				
Bits	Attribute	Default	Description	
7:3	RV	0	0x19 [7:3]: Reserved	
2	RW	1	0x19 [2]: MASK_VLDO_1.0V_OUTPUT_POWER_GOOD_STATUS Mask VLDO_1.0V Output Power-Good Status Event. 0 = Do Not Mask 1.0V Output Power-Good Status Event 1 = Mask 1.0V Output Power-Good Status Event	
1:0	RV	0	0x19 [1:0]: Reserved	



Table 42. Threshold Settings\_1

Address: 0x1A

**Description:** Threshold Settings 1

Bits	Attribute	Default	Description
7:5	RV	0	0x1A [7:5]: Reserved
4	RW	0	0x1A [4]: QUIESCENT_STATE_EN PMIC Quiescent State Entry Enable 0 = Disable 1 = Enable
3	RV	0	0x1A [3]: Reserved
2	RW	0	0x1A [2]: VLDO_1.8V_POWER_GOOD_THRESHOLD_VOLTAGE VOUT 1.8V LDO Output Threshold Voltage for Power-Good Status 0 = 1.6V 1 = Reserved
1	RW	0	0x1A [1]: OUTPUT_POWER_SELECT Switch Regulator Output Power Select 0 = Report Power Measurement for Each Rail in 0x0C, 0x0E & 0x0F 1 = Report Total Power Measurement of Each Rail in 0x0C
0	RW	0	0x1A [0]: VLDO_1.0V_POWER_GOOD_THRESHOLD_VOLTAGE VOUT 1.0V LDO Output Threshold Voltage for Power-Good Status 0 = -10% from the setting in "Register 0x51" [2:1] 1 = -15% from the setting in "Register 0x51" [2:1]



Table 43. Threshold Settings\_2

Address: 0x1B

**Description:** Threshold Settings 2

Desci	Description: Threshold Settings_2			
Bits	Attribute	Default	Description	
7	RW	0	0x1B [7]: VIN_BULK_OVER_VOLTAGE_THRESHOLD VIN_Bulk Input Overvoltage Threshold Setting For GSI_n Assertion 0 = 6V 1 = Reserved	
6	RW	0	0x1B [6]: CURRENT_OR_POWER_METER_SELECT PMIC Output Regulator Measurement - Current or Power Meter 0 = Report Current Measurements in registers 1 = Report Power Measurements in registers	
5	RV	0	0x1B [5]: Reserved	
4	RW	0	0x1B [4]: GLOBAL_PWR_GOOD_PIN_STATUS_MASK Global Mask PWR_GOOD Output Pin 0 = Not Masked 1 = Masked	
3	RW	0	0x1B [3]: GSI_N_PIN_ENABLE Enable GSI_n Pin 0 = Disable GSI_n Pin 1 = Enable GSI_n Pin	
2:0	RW	101	0x1B [2:0]: PMIC_HIGH_TEMPERATURE_WARNING_THRESHOLD PMIC High Temperature Warning Threshold 000 = Reserved 001 = PMIC temperature ≥ 85°C 010 = PMIC temperature ≥ 95°C 011 = PMIC temperature ≥ 105°C 100 = PMIC temperature ≥ 115°C 101 = PMIC temperature ≥ 125°C 110 = PMIC temperature ≥ 135°C 111 = Reserved	



**Table 44. SWA High Current Warning Threshold** 

	Address: 0x1C Description: SWA High Current Warning Threshold			
Bits	Attribute	Default	Description	
7:2	RW	011000	0x1C [7:2]: SWA_OUTPUT_HIGH_CURRENT_CONSUMPTION_WARNING_THRESHOLD Switch Node A Output High Current Consumption Warning Threshold $000000 = \text{Un-defined}$ $000001 \ge 0.125\text{A}$ $000010 \ge 0.25\text{A}$ $000011 \ge 0.375\text{A}$ $000100 \ge 0.5\text{A}$ $000101 \ge 0.625\text{A}$ $000111 \ge 0.875\text{A}$ $000111 \ge 0.875\text{A}$ $001000 \ge 1.0\text{A}$ $001001 \ge 1.125\text{A}$ $010111 \ge 2.875\text{A}$ $011000 \ge 3.0\text{A}$ $011001 \ge 3.125\text{A}$ $110111 \ge 6.875\text{A}$ $111001 \ge 7.25\text{A}$ $11111101 \ge 7.25\text{A}$ $11111101 \ge 7.375\text{A}$ $11111101 \ge 7.575\text{A}$ $11111101 \ge 7.575\text{A}$ $1111111 \ge 7.7575\text{A}$ $1111111 \ge 7.7575\text{A}$ $1111111 \ge 7.7575\text{A}$	
1:0	RV	0	0x1C [1:0]: Reserved	

#### Table 45. Reserved 0x1D

	Address: 0x1D Description: Reserved				
Bits	Attribute	Default	Description		
7:0	RV	0	0x1D [7:0]: Reserved		

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



## Table 46. SWB High Current Warning Threshold

Address: 0x1E **Description:** SWB High Current Warning Threshold

Bits	Attribute	Default	Description
7:2	RW	011000	0x1E [7:2]: SWB_OUTPUT_HIGH_CURRENT_CONSUMPTION_WARNING_THRESHOLD Switch Node B Output High Current Consumption Warning Threshold $000000 = Un-defined$ $000001 \ge 0.125A$ $000010 \ge 0.25A$ $0000100 \ge 0.5A$ $000101 \ge 0.625A$ $000101 \ge 0.75A$ $000111 \ge 0.875A$ $000111 \ge 0.875A$ $001000 \ge 1.0A$ $001001 \ge 1.125A$ $010111 \ge 2.875A$ $011000 \ge 3.0A$ $110111 \ge 6.875A$ $1111000 \ge 7.0A$ $1111111 \ge 7.25A$ $1111100 \ge 7.25A$ $1111100 \ge 7.5A$ $1111100 \ge 7.5A$ $1111110 \ge 7.5A$
1:0	RV	0	0x1E [1:0]: Reserved



**Table 47. SWC High Current Warning Threshold** 

Address: 0x1F
<b>Description:</b> SWC High Current Warning Threshold

Bits	Attribute	Default	Description
7:2	RW	011000	0x1F [7:2]: SWC_OUTPUT_HIGH_CURRENT_CONSUMPTION_WARNING_THRESHOLD Switch Node C Output High Current Consumption Warning Threshold 000000 = Un-defined 000001 ≥ 0.125A 000010 ≥ 0.25A 000011 ≥ 0.375A 000100 ≥ 0.5A 000110 ≥ 0.75A 000111 ≥ 0.875A 000101 ≥ 1.025A 001011 ≥ 0.875A 001000 ≥ 1.0A 001001 ≥ 1.125A 010111 ≥ 2.875A 011000 ≥ 3.0A 011001 ≥ 3.125A 110111 ≥ 6.875A 111100 ≥ 7.0A 111101 ≥ 7.125A 1111101 ≥ 7.25A 111110 ≥ 7.55A 111110 ≥ 7.55A 111110 ≥ 7.55A 111110 ≥ 7.75A 111111 ≥ 7.875A
1:0	RV	0	0x1F [1:0]: Reserved



#### Table 48. OC Threshold

Address: 0x20 **Description:** OC Threshold **Bits Attribute Default** Description 0x20 [7:6]: SWA\_OUTPUT\_CURRENT\_LIMITER\_WARNING\_THRESHOLD\_SETTING For COT Mode, Ivalley limit: RW 7:6 11 00 = 3.0A01 = 3.5A10 = 4.0A11 = 4.5A0 5:4 RV0x20 [5:4]: Reserved 0x20 [3:2]: SWB\_OUTPUT\_CURRENT\_LIMITER\_WARNING\_THRESHOLD\_SETTING For COT Mode, Ivalley limit: 3:2 RW 11 00 = 3.0A01 = 3.5A10 = 4.0A11 = 4.5A0x20 [1:0]: SWC OUTPUT CURRENT LIMITER WARNING THRESHOLD SETTING For COT Mode, Ivalley limit: 1:0 RW 11 00 = 0.5A01 = 1.0A10 = 1.5A11 = 2.0A



**Table 49. SWA Voltage Setting** 

			Table 49. SWA Voltage Setting
Address: 0x21 Description: SWA Voltage Setting			
Bits	Attribute	Default	Description
7:1	RW	0111100	0x21 [7:1]: SWA_VOLTAGE_SETTING Switch Node A Output Regulator Voltage Setting 000 0000 = 800mV 000 0001 = 805mV 000 0010 = 810mV 011 1100 = 1100mV 111 1101 = 1425mV 111 1111 = 1435mV
0	RW	0	0x21 [0]: SWA_POWER_GOOD_THRESHOLD_LOW_SIDE_VOLTAGE_SETTING Switch Node A Output Threshold Low-Side Voltage For Power-Good Status 0 = -5% from the setting in "Register 0x21" [7:1] 1 = -7.5% from the setting in "Register 0x21" [7:1]



#### Table 50. SWA Threshold and Soft-Stop Time

Address: 0x22 **Description:** SWA Threshold & Soft-stop Time

Desci	Description: SWA Infesnoid & Soπ-stop Time			
Bits	Attribute	Default	Description	
7:6	RW	01	0x22 [7:6]: SWA_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node A Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x21" [7:1] 01 = +7.5% from the setting in "Register 0x21" [7:1] 10 = +10% from the setting in "Register 0x21" [7:1] 11 = +2.5% from the setting in "Register 0x21" [7:1]	
5:4	RW	10	0x22 [5:4]: SWA_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node A Output Regulator Threshold For Overvoltage Status 00 = +7.5% from the setting in "Register 0x21" [7:1] 01 = +10% from the setting in "Register 0x21" [7:1] 10 = +12.5% from the setting in "Register 0x21" [7:1] 11 = +5% from the setting in "Register 0x21" [7:1]	
3:2	RW	00	$0x22$ [3:2]: SWA_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node A Output Regulator Threshold For Undervoltage-Lockout Status $00 = -10\%$ from the setting in "Register $0x21$ " [7:1] $01 = -12.5\%$ from the setting in "Register $0x21$ " [7:1] $10 = -5\%$ from the setting in "Register $0x21$ " [7:1] $11 = -7.5\%$ from the setting in "Register $0x21$ " [7:1]	
1:0	RW	11	0x22 [1:0]: SWA_OUTPUT_SOFT_STOP_TIME SWA Output Regulator Soft-Stop Time After VR Disable 00 = 0.5ms 01 = 1ms 10 = 2ms 11 = 4ms	

#### Table 51. Reserved 0x23

Address: 0x23 **Description:** Reserved Default **Bits Attribute Description** 7:0 RV0 0x23 [7:0]: Reserved

#### Table 52. Reserved 0x24

	Address: 0x24 Description: Reserved		
Bits	Attribute	Default	Description
7:0	RV	0	0x24 [7:0]: Reserved



**Table 53. SWB Voltage Setting** 

	Address: 0x25 Description: SWB Voltage Setting				
Bits	Attribute	Default	Description		
7:1	RW	0111100	0x25 [7:1]: SWB_VOLTAGE_SETTING Switch Node B Output Regulator Voltage Setting 000 0000 = 800mV 000 0001 = 805mV 000 0010 = 810mV 011 1100 = 1100mV 111 1101 = 1425mV 111 1111 = 1435mV		
0	RW	0	0x25 [0]: SWB_POWER_GOOD_THRESHOLD_LOW_SIDE_VOLTAGE_SETTING Switch Node B Output Threshold Low-Side Voltage For Power-Good Status 0 = -5% from the setting in "Register 0x25" [7:1] 1 = -7.5% from the setting in "Register 0x25" [7:1]		

Table 54. SWB Threshold and Soft-Stop Time

	Address: 0x26  Description: SWB Threshold and Soft-Stop Time			
Bits	Attribute	Default	Description	
7:6	RW	01	0x26 [7:6]: SWB_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node B Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x25" [7:1] 01 = +7.5% from the setting in "Register 0x25" [7:1] 10 = +10% from the setting in "Register 0x25" [7:1] 11 = +2.5% from the setting in "Register 0x25" [7:1]	
5:4	RW	10	0x26 [5:4]: SWB_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node B Output Regulator Threshold For Overvoltage Status 00 = +7.5% from the setting in "Register 0x25" [7:1] 01 = +10% from the setting in "Register 0x25" [7:1] 10 = +12.5% from the setting in "Register 0x25" [7:1] 11 = +5% from the setting in "Register 0x25" [7:1]	
3:2	RW	00	0x26 [3:2]: SWB_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node B Output Regulator Threshold For Undervoltage-Lockout Status 00 = -10% from the setting in "Register 0x25" [7:1] 01 = -12.5% from the setting in "Register 0x25" [7:1] 10 = -5% from the setting in "Register 0x25" [7:1] 11 = -7.5% from the setting in "Register 0x25" [7:1]	
1:0	RW	11	0x26 [1:0]: SWB_OUTPUT_SOFT_STOP_TIME SWB Output Regulator Soft-Stop Time After VR Disable 00 = 0.5ms 01 = 1ms 10 = 2ms 11 = 4ms	

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



#### Table 55. SWC Voltage Setting

Address: 0x27 **Description:** SWC Voltage Setting **Bits Attribute Default** Description 0x27 [7:1]: SWC\_VOLTAGE\_SETTING Switch Node C Output Regulator Voltage Setting 000 0000 = 1500mV 000 0001 = 1505mV 000 0010 = 1510mV 7:1 RW 0111100 011 1100 = 1800mV 111 1101 = 2125mV 111 1110 = 2130mV 111 1111 = 2135mV 0x27 [0]: SWC POWER GOOD THRESHOLD LOW SIDE VOLTAGE SETTING RW 0 Switch Node C Output Threshold Low-Side Voltage For Power-Good Status 0 0 = -5% from the setting in "Register 0x27" [7:1] 1 = -7.5% from the setting in "Register 0x27" [7:1]

#### Table 56. SWC Threshold and Soft-Stop Time

	Address: 0x28  Description: SWC Threshold and Soft-Stop Time				
Bits	Attribute	Default	Description		
7:6	RW	01	0x28 [7:6]: SWC_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node C Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x27" [7:1] 01 = +7.5% from the setting in "Register 0x27" [7:1] 10 = +10% from the setting in "Register 0x27" [7:1] 11 = +2.5% from the setting in "Register 0x27" [7:1]		
5:4	RW	10	0x26 [5:4]: SWC_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node C Output Regulator Threshold For Overvoltage Status 00 = +7.5% from the setting in "Register 0x27" [7:1] 01 = +10% from the setting in "Register 0x27" [7:1] 10 = +12.5% from the setting in "Register 0x27" [7:1] 11 = +5% from the setting in "Register 0x27" [7:1]		
3:2	RW	00	0x26 [3:2]: SWC_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node C Output Regulator Threshold For Undervoltage-Lockout Status 00 = -10% from the setting in "Register 0x27" [7:1] 01 = -12.5% from the setting in "Register 0x27" [7:1] 10 = -5% from the setting in "Register 0x27" [7:1] 11 = -7.5% from the setting in "Register 0x27" [7:1]		
1:0	RW	11	0x26 [1:0]: SWC_OUTPUT_SOFT_STOP_TIME SWC Output Regulator Soft-Stop Time After VR Disable 00 = 1ms 01 = 2ms 10 = 4ms 11 = 8ms		



## Table 57. FSW and Mode\_1

Address: 0x29 Description: FSW and Mode 1

Descri	Description: FSW and Mode_1					
Bits	Attribute	Default	Description			
7:6	RW	10	0x29 [7:6]: SWA_MODE_SELECT Switch Node A Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant On-Time; Discontinuous Current Mode) 11 = COT; Forced CCM (Constant On-Time; Continuous Current Mode)			
5:4	RW	00	0x29 [5:4]: SWA_SWITCHING_FREQ Switch Node A Output Regulator Switching Frequency (Note) 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz			
3:0	RV	00	0x29 [3:0]: Reserved			

## Table 58. FSW and Mode\_2

Address: 0v2A

	Address: 0x2A  Description: FSW and Mode_2				
Bits	Attribute	Default	Description		
7:6	RW	10	0x2A [7:6]: SWB_MODE_SELECT Switch Node B Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant On-Time; Discontinuous Current Mode) 11 = COT; Forced CCM (Constant On-Time; Continuous Current Mode)		
5:4	RW	00	0x2A [5:4]: SWB_SWITCHING_FREQ Switch Node B Output Regulator Switching Frequency 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz		
3:2	RW	10	0x2A [3:2]: SWC_MODE_SELECT Switch Node C Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant On-Time; Discontinuous Current Mode) 11 = COT; Forced CCM (Constant On-Time; Continuous Current Mode)		
1:0	RW	00	0x2A [1:0]: SWC_SWITCHING_FREQ Switch Node C Output Regulator Switching Frequency 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz		

Copyright © 2024 Richtek Technology Corporation. All rights reserved. DSQ5132-07 October 2024



## **Table 59. LDO Output Voltage Range**

Address: 0x2B Description: LDO Output Voltage Range

Descri	Description: LDO Output voltage Range					
Bits	Attribute	Default	Description			
7:6	RW	01	0x2B [7:6]: VLDO_1.8V _VOLTAGE_SETTING VLDO_1.8V Voltage Setting: 00 = 1.7V 01 = 1.8V 10 = 1.9V 11 = 2.0V			
5:3	RV	000	0x2B [5:3]: Reserved			
2:1	RW	01	0x2B [2:1]: VLDO_1.0V _VOLTAGE_SETTING VLDO_1.0V Voltage Setting: 00 = 0.9V 01 = 1.0V 10 = 1.1V 11 = 1.2V			
0	RV	0	0x2B [0]: Reserved			

## Table 60. Soft-start Time\_1

Address: 0x2C  Description: Soft-start Time_1					
Bits	Attribute	Default	Description		
7:5	RW	001	0x2C [7:5]: SWA_OUTPUT_SOFT_START_TIME SWA Output Regulator Soft-Start Time After VR Enable 000 = 1ms 001 = 2ms 010 = 4ms 011 = 6ms  111 = 14ms		
4:0	RV	0	0x2C [4:0]: Reserved		



#### Table 61. Soft-Start Time\_2

Address: 0x2D

Description: Soft-Start Time\_2

Bits Attribute Default Description

Bits	Attribute	Default	Description
7:5	RW	001	0x2D [7:5]: SWB_OUTPUT_SOFT_START_TIME SWB Output Regulator Soft-Start Time After VR Enable 000 = 1ms 001 = 2ms 010 = 4ms 011 = 6ms 111 = 14ms
4	RV	0	0x2D [4]: Reserved
3:1	RW	001	0x2D [3:1]: SWC_OUTPUT_SOFT_START_TIME SWC Output Regulator Soft-Start Time After VR Enable 000 = 1ms 001 = 2ms 010 = 4ms 011 = 6ms  111 = 14ms
0	RV	0	0x2D [0]: Reserved

#### Table 62. OTP Threshold

Address: 0x2E **Description: OTP Threshold** Bits **Attribute** Default Description 7:3 RV 10110 0x2E [7:3]: Internal settings 0x2E [2:0]: PMIC\_SHUTDOWN\_TEMPERATURE\_THRESHOLD PMIC Shutdown Temperature Threshold 000 = PMIC Temperature ≥ 105°C 001 = PMIC Temperature ≥ 115°C 010 = PMIC Temperature ≥ 125°C 2:0 RW 100 011 = PMIC Temperature ≥ 135°C 100 = PMIC Temperature ≥ 145°C 101 = Reserved 110 = Reserved 111 = Reserved



#### **Table 63. PMIC Configuration**

Address: 0x2F **Description: PMIC Configuration** Default **Bits Attribute** Description 7 RV 0 0x2F [7]: Reserved 0x2F [6]: SWA REGULATOR CONTROL Disable SWA Regulator Output 6 RW 0 0 = Disable Switch Node A Output Regulator 1 = Enable Switch Node A Output Regulator 5 RV 0 0x2F [5]: Reserved 0x2F [4]: SWB\_REGULATOR\_CONTROL Disable SWB Regulator Output RW 0 4 0 = Disable Switch Node B Output Regulator 1 = Enable Switch Node B Output Regulator 0x2F [3]: SWC\_REGULATOR\_CONTROL Disable SWC Regulator Output 0 3 RW 0 = Disable Switch Node C Output Regulator 1 = Enable Switch Node C Output Regulator 0x2F [2]: SECURE MODE **PMIC Mode Operation** 2 RW 1 0 = Secure Mode Operation 1 = Programmable Mode Operation 0x2F [1:0]: MASK BITS REGISTER CONTROL Mask Bits Register Control 00 = Mask GSI\_n Signal Only (PWR\_GOOD Signal will assert) 1:0 RW 10 01 = Mask PWR\_GOOD Only (GSI\_n signal will assert) 10 = Mask GSI n and PWR GOOD Signals (neither PWR GOOD assert or GSI n signal will assert)

11 = Reserved



## **Table 64. ADC Configuration**

	Address: 0x30  Description: ADC Configuration				
Bits	Attribute	Default	Description		
7	RW	0	0x30 [7]: ADC_ENABLE Enable ADC (Analog to Digital Conversion) 0 = Disable 1 = Enable		
6:3	RW	0	0x30 [6:3]: ADC_SELECT Input Selection for ADC Readout 0000 = SWA Output Voltage 0001 = Reserved 0010 = SWB Output Voltage 0011 = SWC Output Voltage 0100 = Reserved 0101 = VIN_BULK Input Voltage 0110 = Reserved 0111 = Reserved 1011 = Reserved 1000 = VLDO_1.8V Output Voltage 1001 = VLDO_1.0V Output Voltage All other encodings are reserved.		
2	RV	0	0x30 [2]: Reserved		
1:0	RW	0	0x30 [1:0]: ADC_REGISTER_UPDATE_FREQUENCY ADC Current or Power Measurement Update Frequency 00 = 1ms 01 = 2ms 10 = 4ms		

#### Table 65. ADC Read

11 = 8 ms

	Address: 0x31 Description: ADC Read				
Bits	Attribute	Default	Description		
7:0	RO	0	0x31 [7:0]: ADC_READ ADC Output Voltage Reading (Applies to SW[A:C], VLDO_1.8V, VLDO_1.0V) 0000 0000 = Undefined 0000 0001 = 15mV 0000 0010 = 30mV 1111 1111 ≥ 3825mV  ADC Output Voltage Reading (Applies to VIN_BULK Input Voltage) 0000 0000 = Undefined 0000 0001 = 70mV 0000 0010 = 140mV 1111 1111 ≥ 17850mV		

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



## Table 66. PMIC\_EN and Interface Selection

	Address: 0x32  Description: PMIC_EN and Interface Selection				
Bits	Attribute	 Default	Description		
7	RW	0	0x32 [7]: VR_ENABLE PMIC Enable 0 = PMIC Disable 1 = PMIC Enable		
6	RO	0	0x32 [6]: MANAGEMENT_INTERFACE_SELECTION PMIC Management Bus Interface Protocol Selection 0 = I <sup>2</sup> C Interface (Max speed 1MHz) 1 = I3C Basic Protocol		
5	RW	0	0x32 [5]: PWR_GOOD_IO_TYPE PMIC PWR_GOOD Output Signal Type 0 = Output only 1 = Input and Output		
4:3	RW	0	0x32 [4:3]: PMIC_PWR _OUTPUT_SIGNAL_CONTROL PMIC PWR_GOOD Output Signal Control 0x = PMIC controls PWR_GOOD on its own based on internal status 10 = PWR_GOOD Output Low 11 = PWR_GOOD Output Float		
2:0	RV	0	0x32 [2:0]: Reserved		

## Table 67. PMIC Status\_4

	Address: 0x33 Description: PMIC Status_4					
Bits	Attribute	Default	Description			
7:5	RO	0	0x33 [7:5]: TEMPERATURE_MEASUREMENT PMIC Temperature 000 =< $80^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 001 = $85^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 010 = $95^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 011 = $105^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 100 = $115^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 101 = $125^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 110 = $135^{\circ}$ C ( $\pm$ $5^{\circ}$ C) 111 $\geq$ 140°C ( $\pm$ $5^{\circ}$ C)			
4:3	RV	0	0x33 [4:3]: Reserved			
2	RO	0	0x33 [2]: VLDO_1.0V_OUTPUT_POWER_GOOD_STATUS VLDO_1.0V LDO Output Power-Good Status 0 = Power Good 1 = Power Not Good			
1:0	RV	0	0x33 [1:0]: Reserved			



3:1

0

RO

RV

111

0

0x34 [0]: Reserved

#### Table 68. PEC/IBI/PARITY/HID\_CODE

Address: 0x34 Description: PEC/IBI/PARITY/HID CODE **Bits Attribute Default** Description 0x34 [7]: PEC ENABLE Packet Error Code Enable (Applicable Only if 0x32 [6] = '1') 7 RO 0 0 = Disable 1 = Enable 0x34 [6]: IBI\_ENABLE In Band Interrupt Enable (Applicable Only if 0x32 [6] = '1') 6 RO 0 0 = Disable 1 = Enable 0x34 [5]: PARITY\_DISABLE T Bit Parity Code Disable (Applicable Only if 0x32 [6] = '1'.) 5 RO 0 0 = Enable 1 = Disable 4 RV 0 0x34 [4]: Reserved 0x34 [3:1]: HID CODE PMIC's 3-bit HID Code 000 001 010



## Table 69. Error Injection

	Address: 0x35  Description: Error Injection				
Bits	Attribute	Default	Description		
7	RW	0	0x35 [7]: ERROR_INJECTION_ENABLE Error Injection Enable 0 = Disable 1 = Enable		
6:4	RW	0	0x35 [6:4]: ERROR_INJECTION_RAIL_SELECTION Error Injection - Input Rail and Output Rail Selection 000 = Undefined 001 = SWA Output Only 010 = Reserved 011 = SWB Output Only 100 = SWC Output Only 101 = VIN_Bulk Input Only 110 = Reserved 111 = Do Not Use		
3	RW	0	0x35 [3]: OVER_VOLTAGE_UNDER_VOLTAGE_SELECT Overvoltage or Undervoltage Selection for Bits 0x35[6:4] 0 = Overvoltage 1 = Undervoltage		
2:0	RW	0	0x35 [2:0]: MISC_ERROR_INJECTION_TYPE Miscellaneous Error Injection Type 000 = Undefined 001 = Reserved 010 = Critical Temperature Shutdown 011 = High Temperature Warning Threshold 100= VLDO_1.8V LDO Power Good 101 = High Current Consumption Warning 110 = Reserved 111 = Current Limiter Warning		

### Table 70. Reserved 0x36

	Address: 0x36  Description: Reserved				
Bits	Attribute	Default	Description		
7:0	RV	0	0x36 [7:0]: Reserved		

## **Table 71. DIMM Vendor Region Password Lower Byte**

	Address: 0x37  Description: DIMM Vendor Region Password Lower Byte			
Bits	Attribute	Default	Description	
7:0	WO	0	0x37 [7:0]: DIMM_VENDOR_MEMORY_REGION_PASSWORD_LOWER_BYTE DIMM Vendor Memory Region (0x40 - R6F) Password - Lower Byte [7:0] = 0x73	



Table 72. DIMM Vendor Region Password Upper Byte

	Address: 0x38  Description: DIMM Vendor Region Password Upper Byte				
Bits	Attribute	Default	Description		
7:0	WO	0	0x38 [7:0]: DIMM_VENDOR_MEMORY_REGION_PASSWORD_UPPER_BYTE DIMM Vendor Memory Region (0x40 - R6F) Password - Upper Byte [7:0] = 0x94		

## **Table 73. DIMM Vendor Password Control**

	Address: 0x39  Description: DIMM Vendor Password Control				
Bits	Attribute	Default	Description		
7:0	RW	0	Host Region Codes: 0x74: Clear Registers 0x04 to 0x07, Erase MTP memory for 0x04 Register.  DIMM Vendor Region (0x40 to 0x6F) Write Codes: 0x00: Lock DIMM Vendor Region. 0x40: Unlock DIMM Vendor Region. Password needs to be present in 0x37 and 0x38 registers. 0x80: Burn DIMM Vendor Region Password. New password needs to be present in 0x37 and 0x38. 0x81: Burn DIMM Vendor Region - 0x40 to 0x4F 0x82: Burn DIMM Vendor Region - 0x50 to 0x5F 0x85: Burn DIMM Vendor Region - 0x60 to R6F  DIMM Vendor Region (0x40 to 0x6F) Read Codes: 0x5A: Burning is complete in DIMM Vendor region.		

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



#### **Table 74. Default Address Pointer**

			Table 74. Delauit Address Former		
	Address: 0x3A  Description: Default Address Pointer				
Bits	Attribute	Default	Description		
7	RV	0	0x3A [7]: Reserved		
6	RW	0	0x3A [6]: DEFAULT_READ_ADDRESS_POINTER_ENABLE Enable Default Address Read Pointer when PMIC sees STOP operation 0 = Disable Default Address Pointer (address pointer is set by Host) 1 = Enable Default Address Pointer; Address selected by register bits [5:4]		
5:4	RW	0	0x3A [5:4]: DEFAULT_READ_STARTING_ADDRESS Default Read Address Pointer Selection when PMIC sees STOP operation 00 = 0x08 01 = 0x0C 10 = Reserved 11 = Reserved		
3:2	RW	0	0x3A [3:2]: BURST_LENGTH_FOR_READ_DEFAULT_ADDR_POINTER Burst Length (# of Bytes) to be transferred for Read Default Address Pointer Mode 00 = 2 Bytes 01 = 4 Bytes 10 = Reserved 11 = 16 Bytes		
1:0	RV	0	0x3A [1:0]: Reserved		

#### Table 75. Revision ID

	Address: 0x3B  Description: Revision ID				
Bits	Attribute	Default	Description		
7:6	RV	0	0x3B [7:6]: Reserved		
5:4	ROE		0x3B [5:4]: REVISION_ID_MAJOR_STEPPING Major Revision Stepping 00 = Revision 1 01 = Revision 2 10 = Revision 3 11 = Revision 4		
3:1	ROE		0x3B [3:1]: REVISION_ID_MINOR_STEPPING Minor Revision Stepping 000 = Revision 0 001 = Revision 1 010 = Revision 2 011 = Revision 3 All other encodings are reserved.		
0	RV		0x3B [0]: Reserved		



## Table 76. Vendor ID Byte 0

	Address: 0x3C  Description: Vendor ID Byte 0			
Bits	Attribute	Default	Description	
7:0	ROE	10001010	0x3C [7:0]: VENDOR_ID_BYTE0 Vendor Identification Register Byte 0.	

## Table 77. Vendor ID Byte 1

	Address: 0x3D  Description: Vendor ID Byte 1			
Bits	Attribute	Default	Description	
7:0	ROE	10001100	0x3D [7:0]: VENDOR_ID_BYTE1 Vendor Identification Register Byte 1.	

## Table 78. Reserved 0x3E

	Address: 0x3E  Description: Reserved				
Bits	Bits Attribute Default Description				
7:0	RV	0	0x3E [7:0]: Reserved		

## Table 79. Reserved 0x3F

	Address: 0x3F Description: Reserved				
Bits	Attribute	Default	Description		
7:0	RV	0	0x3F [7:0]: Reserved		

Copyright © 2024 Richtek Technology Corporation. All rights reserved. 

RICHTEK is a registered trademark of Richtek Technology Corporation

DSQ5132-07 October 2024

www.richtek



#### 17.5 DIMM Vendor Region Registers

Table 80. Power-On Sequence Configuration 0

Address: 0x40 Description: Power-On Sequence Configuration 0 **Bits Attribute** Default Description 0x40 [7]: POWER\_ON\_SEQUENCE\_CONFIG0 PMIC Power-On Sequence Config0 7 **RWPE** 1 0 = Do Not Execute Config0 1 = Execute Config0 0x40 [6]: POWER\_ON\_SEQUENCE\_CONFIGO\_SWA\_ENABLE Enable Switch Node A Output Regulator. **RWPE** 6 0 0 = Disable Switch Node A Output Regulator 1 = Enable Switch Node A Output Regulator 5 RV 0 0x40 [5]: Reserved 0x40 [4]: POWER ON SEQUENCE CONFIGO SWB ENABLE Enable Switch Node B Output Regulator. **RWPE** 0 4 0 = Disable Switch Node B Output Regulator 1 = Enable Switch Node B Output Regulator 0x40 [3]: POWER\_ON\_SEQUENCE\_CONFIG0\_SWC\_ENABLE Enable Switch Node C Output Regulator. 3 **RWPE** 1 0 = Disable Switch Node C Output Regulator 1 = Enable Switch Node C Output Regulator 0x40 [2:0]: POWER ON SEQUENCE CONFIGO IDLE Idle Time After Power-On Sequence Config0 000 = 0 ms001 = 2ms010 = 4 ms2:0 **RWPE** 001 011 = 6 ms100 = 8 ms101 = 10 ms

110 = 12ms111 = 24ms



Table 81. Power-On Sequence Configuration 1

Address: 0x41

**Description:** Power-On Sequence Configuration 1

Bits	Attribute	Default	Description
7	RWPE	1	0x41 [7]: POWER_ON_SEQUENCE_CONFIG1 PMIC Power-On Sequence Config 1 0 = Do Not Execute Config 1 1 = Execute Command 1
6	RWPE	1	0x41 [6]: POWER_ON_SEQUENCE_CONFIG1_SWA_ENABLE Enable Switch Node A Output Regulator. 0 = Disable Switch Node A Output Regulator 1 = Enable Switch Node A Output Regulator
5	RV	0	0x41 [5]: Reserved
4	RWPE	1	0x41 [4]: POWER_ON_SEQUENCE_CONFIG1_SWB_ENABLE Enable Switch Node B Output Regulator 1 = Enable Switch Node B Output Regulator
3	RWPE	1	0x41 [3]: POWER_ON_SEQUENCE_CONFIG1_SWC_ENABLE Enable Switch Node C Output Regulator 1 = Enable Switch Node C Output Regulator
2:0	RWPE	001	0x41 [2:0]: POWER_ON_SEQUENCE_CONFIG1_IDLE Idle Time After Power-On Sequence Config1 000 = 0ms 001 = 2ms 010 = 4ms 011 = 6ms 100 = 8ms 101 = 10ms 110 = 12ms 111 = 24ms



# Table 82 Power-On Sequence Configuration 2

	Table 82. Power-On Sequence Configuration 2				
	Address: 0x42 Description: Power-On Sequence Configuration 2				
Bits	Attribute	Default	Description		
7	RWPE	0	0x42 [7]: POWER_ON_SEQUENCE_CONFIG2 PMIC Power-On Sequence Config2 0 = Do Not Execute Config2 1 = Execute Config2		
6	RWPE	0	0x42 [6]: POWER_ON_SEQUENCE_CONFIG2_SWA_ENABLE Enable Switch Node A Output Regulator. 0 = Disable Switch Node A Output Regulator 1 = Enable Switch Node A Output Regulator		
5	RV	0	0x42 [5]: Reserved		
4	RWPE	0	0x42 [4]: POWER_ON_SEQUENCE_CONFIG2_SWB_ENABLE Enable Switch Node B Output Regulator. 0 = Disable Switch Node B Output Regulator 1 = Enable Switch Node B Output Regulator		
3	RWPE	0	0x42 [3]: POWER_ON_SEQUENCE_CONFIG2_SWC_ENABLE Enable Switch Node C Output Regulator. 0 = Disable Switch Node C Output Regulator 1 = Enable Switch Node C Output Regulator		
2:0	RWPE	000	0x42 [2:0]: POWER_ON_SEQUENCE_CONFIG2_IDLE Idle time after Power-On Sequence Config2 000 = 0ms 001 = 2ms 010 = 4ms 011 = 6ms 100 = 8ms 101 = 10ms		

## Table 83. Reserved 0x43

110 = 12ms111 = 24 ms

Address: 0x43 Description: Reserved					
Bits	Attribute	Default	Description		
7:0	RV	0	0x43 [7:0]: Reserved		

## Table 84. Reserved 0x44

Address: 0x44 Description: Reserved					
Bits	Attribute	Default	Description		
7:0	RV	0	0x44 [7:0]: Reserved		



Table 85. DIMM SWA Voltage Setting

	Address: 0x45  Description: DIMM SWA Voltage Setting				
Bits	Attribute	Default	Description		
7:1	RWPE	0111100	0x45 [7:1]: SWA_VOLTAGE_SETTING Switch Node A Output Regulator Voltage Setting (Note 8) 000 0000 = 800mV 000 0001 = 805mV 000 0010 = 810mV 011 1100 = 1100mV 111 1101 = 1425mV 111 1110 = 1430mV 111 1111 = 1435mV		
0	RWPE	0	$0x45$ [0]: SWA_POWER_GOOD_THRESHOLD_LOW_SIDE_VOLTAGE_SETTING Switch Node A Output Threshold Low-Side Voltage For Power-Good Status $0 = -5\%$ from the setting in "Register 0x45" [7:1] $1 = -7.5\%$ from the setting in "Register 0x45" [7:1]		

Note 8. RTQ5132GQWF-XX0: 0x45[7:1] = 0111100 for SWA\_VOLTAGE\_SETTING = 1.1V RTQ5132GQWF-XX2: 0x45[7:1] = 0111011 for LPCAMM2 SWA\_VOLTAGE\_SETTING = 1.05V

# Table 86. DIMM SWA Threshold and Soft-Stop Time

	Address: 0x46  Description: DIMM SWA Threshold and Soft-Stop Time			
Bits	Attribute	Default	Description	
7:6	RWPE	01	0x46 [7:6]: SWA_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node A Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x45" [7:1] 01 = +7.5% from the setting in "Register 0x45" [7:1] 10 = +10% from the setting in "Register 0x45" [7:1] 11 = +2.5% from the setting in "Register 0x45" [7:1]	
5:4	RWPE	10	0x46 [5:4]: SWA_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node A Output Regulator Threshold For Overvoltage Status 00 = +7.5% from the setting in "Register 0x45" [7:1] 01 = +10% from the setting in "Register 0x45" [7:1] 10 = +12.5% from the setting in "Register 0x45" [7:1] 11 = +5% from the setting in "Register 0x45" [7:1]	
3:2	RWPE	00	0x46 [3:2]: SWA_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node A Output Regulator Threshold For Undervoltage-Lockout Status 00 = -10% from the setting in "Register 0x45" [7:1] 01 = -12.5% from the setting in "Register 0x45" [7:1] 10 = -5% from the setting in "Register 0x45" [7:1] 11 = -7.5% from the setting in "Register 0x45" [7:1]	
1:0	RWPE	11	0x46 [1:0]: SWA_OUTPUT_SOFT_STOP_TIME SWA Output Regulator Soft-Stop Time After VR Disable 00 = 0.5ms 01 = 1ms 10 = 2ms 11 = 4ms	

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# Table 87. Reserved 0x47

Address: 0x47 Description: Reserved					
Bits	Attribute	Default	Description		
7:0	RV	0	0x47 [7:0]: Reserved		

# Table 88. Reserved 0x48

Address: 0x48 Description: Reserved				
Bits	Bits Attribute Default Description			
7:0	RV	0	0x48[7:0]: Reserved	

Table 89. DIMM SWB Voltage Setting

	Address: 0x49 Description: DIMM SWB Voltage Setting				
Bits	Attribute	Default	Description		
7:1	RWPE	0111100	0x49 [7:1]: SWB_VOLTAGE_SETTING Switch Node B Output Regulator Voltage Setting 000 0000 = 800mV 000 0001 = 805mV 000 0010 = 810mV 011 1100 = 1100mV 111 1101 = 1425mV 111 1110 = 1430mV 111 1111 = 1435mV		
0	RWPE	0	$0x49 [0]$ : SWB_POWER_GOOD_THRESHOLD_LOW_SIDE_VOLTAGE_SETTING Switch Node B Output Threshold Low-Side Voltage For Power-Good Status $0 = -5\%$ from the setting in "Register 0x49" [7:1] $1 = -7.5\%$ from the setting in "Register 0x49" [7:1]		



# Table 90. DIMM SWB Threshold, Soft-stop Time

Address: 0x4A **Description:** DIMM SWB Threshold, Soft-stop Time

Bits	Attribute	Default	Description
7:6	RWPE	01	0x4A [7:6]: SWB_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node B Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x49" [7:1] 01 = +7.5% from the setting in "Register 0x49" [7:1] 10 = +10% from the setting in "Register 0x49" [7:1] 11 = +2.5% from the setting in "Register 0x49" [7:1]
5:4	RWPE	10	0x4A [5:4]: SWB_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node B Output Regulator Threshold for Overvoltage Status 00 = +7.5% from the setting in "Register 0x49" [7:1] 01 = +10% from the setting in "Register 0x49" [7:1] 10 = +12.5% from the setting in "Register 0x49" [7:1] 11 = +5% from the setting in "Register 0x49" [7:1]
3:2	RWPE	00	0x4A [3:2]: SWB_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node B Output Regulator Threshold For Undervoltage-Lockout Status 00 = -10% from the setting in "Register 0x49" [7:1] 01 = -12.5% from the setting in "Register 0x49" [7:1] 10 = -5% from the setting in "Register 0x49" [7:1] 11 = -7.5% from the setting in "Register 0x49" [7:1]
1:0	RWPE	11	0x4A [1:0]: SWB_OUTPUT_SOFT_STOP_TIME SWB Output Regulator Soft-Stop Time After VR Disable 00 = 0.5ms 01 = 1ms 10 = 2ms 11 = 4ms

# Table 91. DIMM SWC Voltage Setting

Address: 0x4B

Descr	Description: DIMM SWC Voltage Setting				
Bits	Attribute	Default	Description		
7:1	RWPE	0111100	0x4B [7:1]: SWC_VOLTAGE_SETTING Switch Node C Output Regulator Voltage Setting2 000 0000 = 1500mV 000 0001 = 1505mV 000 0010 = 1510mV 011 1100 = 1800mV 111 1101 = 2125mV 111 1111 = 2135mV		
0	RWPE	0	0x4B [0]: SWC_POWER_GOOD_THRESHOLD_LOW_SIDE_VOLTAGE_SETTING Switch Node C Output Threshold Low-Side Voltage For Power-Good Status 0 = -5% from the setting in "Register 0x4B" [7:1] 1 = -7.5% from the setting in "Register 0x4B" [7:1]		

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# Table 92. DIMM SWC Threshold, Soft-Stop Time

Address: 0x4C Description: DIMM SWC Threshold, Soft-Stop Time

	escription. Divini Swc Trireshold, Soit-Stop Time					
Bits	Attribute	Default	Description			
7:6	RWPE	01	0x4C [7:6]: SWC_POWER_GOOD_THRESHOLD_HIGH_SIDE_VOLTAGE_SETTING Switch Node C Output Threshold High-Side Voltage "Upper bound level" For Power-Good Status 00 = +5% from the setting in "Register 0x4B" [7:1] 01 = +7.5% from the setting in "Register 0x4B" [7:1] 10 = +10% from the setting in "Register 0x4B" [7:1] 11 = +2.5% from the setting in "Register 0x4B" [7:1]			
5:4	RWPE	10	0x4C [5:4]: SWC_OVER_VOLTAGE_THRESHOLD_SETTING Switch Node C Output Regulator Threshold For Overvoltage Status 00 =+7.5% from the setting in "Register 0x4B" [7:1] 01 = +10% from the setting in "Register 0x4B" [7:1] 10 = +12.5% from the setting in "Register 0x4B" [7:1] 11 = +5% from the setting in "Register 0x4B" [7:1]			
3:2	RWPE	00	0x4C [3:2]: SWC_UNDER_VOLTAGE_LOCKOUT_THRESHOLD_SETTING Switch Node C Output Regulator Threshold For Undervoltage-Lockout Status 00 = -10% from the setting in "Register 0x4B" [7:1] 01 = -12.5% from the setting in "Register 0x4B" [7:1] 10 = -5% from the setting in "Register 0x4B" [7:1] 11 = -7.5% from the setting in "Register 0x4B" [7:1]			
1:0	RWPE	11	0x4C [1:0]: SWC_OUTPUT_SOFT_STOP_TIME SWC Output Regulator Soft-Stop Time After VR Disable 00 = 1ms 01 = 2ms 10 = 4ms 11 = 8ms			

# Table 93. DIMM FSW & Mode\_1

Address: 0x4D

Description: DIMM FSW & Mode_1					
Bits	Attribute	Default	Description		
7:6	RWPE	10	0x4D [7:6]: SWA_MODE_SELECT Switch Node A Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant on Time; Discontinuous Current Mode) 11 = COT; CCM (Constant on Time; Continuous Current Mode)		
5:4	RWPE	00	0x4D [5:4]: SWA_SWITCHING_FREQ Switch Node A Output Regulator Switching Frequency 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz		
3:0	RWPE	00	0x4D [3:2]: Reserved		

112



# Table 94. DIMM FSW & Mode\_2

Address: 0x4E Description: DIMM FSW & Mode 2

Bits	Attribute	Default	Description
7:6	RWPE	10	0x4E [7:6]: SWB_MODE_SELECT Switch Node B Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant on Time; Discontinuous Current Mode) 11 = COT; CCM (Constant on Time; Continuous Current Mode)
5:4	RWPE	00	0x4E [5:4]: SWB_SWITCHING_FREQ Switch Node B Output Regulator Switching Frequency 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz
3:2	RWPE	10	0x4E [3:2]: SWC_MODE_SELECT Switch Node C Output Regulator Mode Selection 00 = Reserved 01 = Reserved 10 = COT; DCM (Constant on Time; Discontinuous Current Mode) 11 = COT; CCM (Constant on Time; Continuous Current Mode)
1:0	RWPE	00	0x4E [1:0]: SWC_SWITCHING_FREQ Switch Node C Output Regulator Switching Frequency 00 = 750kHz 01 = 1000kHz 10 = 1250kHz 11 = 1500kHz

#### Table 95. Reserved 0x4F

Address: 0x4F **Description:** Reserved Bits **Attribute** Default **Description** 7:1 RV 0 Reserved 0x4F [0]: SWA\_SWB\_PHASE\_MODE\_SELECT Switch Node A and Switch Node B Phase Regulator Mode Selection (Note 9) 0 **RWPE** 0 0 = Single Phase Regulator Mode 1 = Dual Phase Regulator Mode

Note 9. RTQ5132GQWF-X2X: 0x4F[0] = 1; RTQ5132GQWF-X1X: R4F[0] = 0



#### Table 96. DIMM OC Threshold

	Table 96. DIMM OC Threshold				
Address: 0x50 Description: DIMM OC Threshold					
Bits	Attribute	Default	Description		
7:6	RWPE	11	0x50 [7:6]: SWA_OUTPUT_CURRENT_LIMITER_WARNING_THRESHOLD_SETTING Switch Node A Output Current Limiter Warning Threshold Setting For COT Mode, Ivalley_limit: 00 = 3.0A 01 = 3.5A 10 = 4.0A 11 = 4.5A		
5:4	RWPE	0	0x50 [5:4]: Reserved		
3:2	RWPE	11	0x50 [3:2]: SWB_OUTPUT_CURRENT_LIMITER_WARNING_THRESHOLD_SETTING Switch Node B Output Current Limiter Warning Threshold Setting1 For COT Mode, Ivalley_limit: 00 = 3.0A 01 = 3.5A 10 = 4.0A 11 = 4.5A		
1:0	RWPE	11	0x50 [1:0]: SWC_OUTPUT_CURRENT_LIMITER_WARNING_THRESHOLD_SETTING Switch Node C Output Current Limiter Warning Threshold Setting For COT Mode, Ivalley_limit: 00 = 0.5A 01 = 1.0A 10 = 1.5A		

# Table 97. DIMM Buck and LDO Output Voltage Range

	Table 37: Billilli Back and EBO Satpat Voltage Range				
	Address: 0x51 Description: DIMM Buck and LDO Output Voltage Range				
Bits	Attribute	Default	Description		
7:6	RWPE	01	0x51 [7:6]: VLDO_1.8V_VOLTAGE_SETTING VOUT 1.8 V LDO Output Voltage Setting1 00 = 1.7V 01 = 1.8V 10 = 1.9V 11 = 2.0V		
5:3	RV	0	0x51 [5:3]: Reserved		
2:1	RWPE	01	0x51 [2:1]: VLDO_1.0V_VOLTAGE_SETTING VOUT 1.0 V LDO Voltage Setting 00 = 0.9V 01 = 1.0V 10 = 1.1V 11 = 1.2V		
0	RV	0	0x51 [0]: Reserved		

11 = 2.0A



#### Table 98. Reserved 0x52-0x57

	Address: 0x52 - 0x57 Description: Reserved							
Bits	Attribute	Default	Description					
7:0	RV	0	x52 [7:0] – 0x57 [7:0]: Reserved					

Table 99. Power-Off Sequence Configuration 0

Table 99. Power-Off Sequence Configuration 0								
	ss: 0x58 iption: Powe	er-Off Sequ	ence Configuration 0					
Bits	Attribute	Default	Description					
7	RWPE	1	0x58 [7]: POWER_OFF_SEQUENCE_CONFIG0 PMIC Power-Off Sequence Config0 0 = Do Not Execute Config0 1 = Execute Config0					
6	RWPE	1	0x58 [6]: POWER_OFF_SEQUENCE_CONFIG0_SWA_DISABLE Disable Switch Node A Output Regulator. 0 = Do Not Disable Switch Node A Output Regulator 1 = Disable Switch Node A Output Regulator					
5	RV	0	0x58 [5]: Reserved					
4	RWPE	1	0x58 [4]: POWER_OFF_SEQUENCE_CONFIG0_SWB_DISABLE Enable Switch Node B Output Regulator. 0 = Do Not Disable Switch Node B Output Regulator 1 = Disable Switch Node B Output Regulator					
3	RWPE	0	0x58 [3]: POWER_OFF_SEQUENCE_CONFIG0_SWC_DISABLE Disable Switch Node C Output Regulator. 0 = Do Not Disable Switch Node C Output Regulator 1 = Disable Switch Node C Output Regulator					
2:0	RWPE	001	0x58 [2:0]: POWER_OFF_SEQUENCE_CONFIG0_IDLE Idle Time After Power-Off Sequence Config0 000 = 0ms 001 = 1ms 010 = 2ms 011 = 3ms 100 = 4ms 101 = 5ms 110 = 6ms 111 = 7ms					

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# Table 100. Power-Off Sequence Configuration 1

Address: 0x59 **Description:** Power-Off Sequence Configuration 1

	<u> </u>	· ·	ence Configuration 1				
Bits	Attribute	Default	Description				
7	RWPE	1	0x59 [7]: POWER_OFF_SEQUENCE_CONFIG1 PMIC Power-Off Sequence Config1 0 = Do Not Execute Config1 1 = Execute Config1				
6	RWPE	1	Dx59 [6]: POWER_OFF_SEQUENCE_CONFIG1_SWA_DISABLE Disable Switch Node A Output Regulator. D = Do Not Disable Switch Node A Output Regulator 1 = Disable Switch Node A Output Regulator				
5	RV	0	0x59 [5]: Reserved				
4	RWPE	1	0x59 [4]: POWER_OFF_SEQUENCE_CONFIG1_SWB_DISABLE Disable Switch Node B Output Regulator. 0 = Do Not Disable Switch Node B Output Regulator 1 = Disable Switch Node B Output Regulator				
3	RWPE	1	0x59 [3]: POWER_OFF_SEQUENCE_CONFIG1_SWC_DISABLE Disable Switch Node C Output Regulator. 0 = Do Not Disable Switch Node C Output Regulator 1 = Disable Switch Node C Output Regulator				
2:0	RWPE	001	0x59 [2:0]: POWER_OFF_SEQUENCE_CONFIG1_IDLE Idle Time After Power-Off Sequence Config1 000 = 0ms 001 = 1ms 010 = 2ms 011 = 3ms 100 = 4ms 101 = 5ms 110 = 6ms 111 = 7ms				



Table 101. Power-Off Sequence Configuration 2

Address: 0x5A
<b>Description:</b> Power-Off Sequence Configuration 2

Descr	Description: Power-Off Sequence Configuration 2								
Bits	Attribute	Default	Description						
7	RWPE	0	0x5A [7]: POWER_OFF_SEQUENCE_CONFIG2 PMIC Power-Off Sequence Config2 0 = Do Not Execute Config2 1 = Execute Config2						
6	RWPE	0	0x5A [6]: POWER_OFF_SEQUENCE_CONFIG2_SWA_DISABLE Disable Switch Node A Output Regulator. 0 = Do Not Disable Switch Node A Output Regulator 1 = Disable Switch Node A Output Regulator						
5	RV	0	0x5A [5]: Reserved						
4	RWPE	0	0x5A [4]: POWER_OFF_SEQUENCE_CONFIG2_SWB_DISABLE Disable Switch Node B Output Regulator. 0 = Do Not Disable Switch Node B Output Regulator 1 = Disable Switch Node B Output Regulator						
3	RWPE	0	0x5A [3]: POWER_OFF_SEQUENCE_CONFIG2_SWC_DISABLE Disable Switch Node C Output Regulator. 0 = Do Not Disable Switch Node C Output Regulator 1 = Disable Switch Node C Output Regulator						
2:0	RWPE	0	0x5A [2:0]: POWER_OFF_SEQUENCE_CONFIG2_IDLE Idle Time After Power-Off Sequence Config2 000 = 0ms 001 = 1ms 010 = 2ms 011 = 3ms 100 = 4ms 101 = 5ms 110 = 6ms 111 = 7ms						

#### Table 102. Reserved 0x5B

Address: 0x5B Description: Reserved								
Bits	Attribute	Default	Description					
7:0	RV	0	0x5B [7:0]: Reserved					

# Table 103. Reserved 0x5C

Address: 0x5C Description: Reserved							
Bits	Attribute	Default	Description				
7:0	RV	0	0x5C [7:0]: Reserved				

Copyright © 2024 Richtek Technology Corporation. All rights reserved. DSQ5132-07 October 2024 www.richtek.com

117



#### Table 104. DIMM Soft-Start Time\_1


Address: 0x5D **Description:** DIMM Soft-Start Time\_1 **Bits Attribute Default** Description 0x5D [7:5]: SWA\_OUTPUT\_SOFT\_START\_TIME SWA Output Regulator Soft-Start Time After VR Enable 000 = 1 ms001 = 2ms**RWPE** 001 7:5 010 = 4 ms011 = 6 ms111 = 14 ms4:0 RV 0 0x5D [4:0]: Reserved

#### Table 105. DIMM Soft-Start Time\_1

	Address: 0x5E  Description: DIMM Soft-Start Time_2							
Bits	Attribute	Default	Description					
7:5	RWPE	001	0x5E [7:5]: SWB_OUTPUT_SOFT_START_TIME SWB Output Regulator Soft-Start Time After VR Enable 000 = 1ms 001 = 2ms 010 = 4ms 011 = 6ms 111 = 14ms					
4	RV	0	0x5E [4]: Reserved					
3:1	RWPE	001	0x5E [3:1]: SWC_OUTPUT_SOFT_START_TIME SWC Output Regulator Soft-Start Time After VR Enable 000 = 1ms 001 = 2ms 010 = 4ms 011 = 6ms 111 = 14ms					
0	RV	0	0x5E [0]: Reserved					



# 18 Outline Dimension

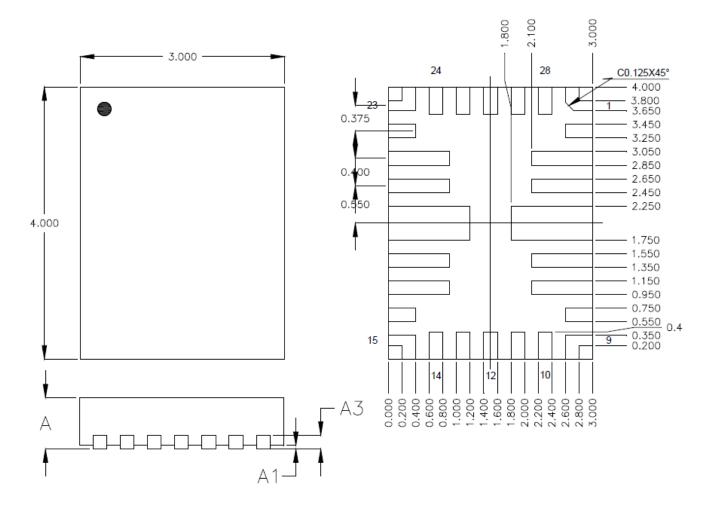


Symbol	Dimensions I	n Millimeters	Dimensions In Inches			
Symbol	Min	Max	Min	Max		
А	0.700	0.800	0.028	0.031		
A1	0.000	0.050	0.000	0.002		
А3	0.175	0.250	0.007	0.010		

Tolerance ±0.050

W-Type 28L QFN 3x4 (FC) Package




# 19 Footprint Information

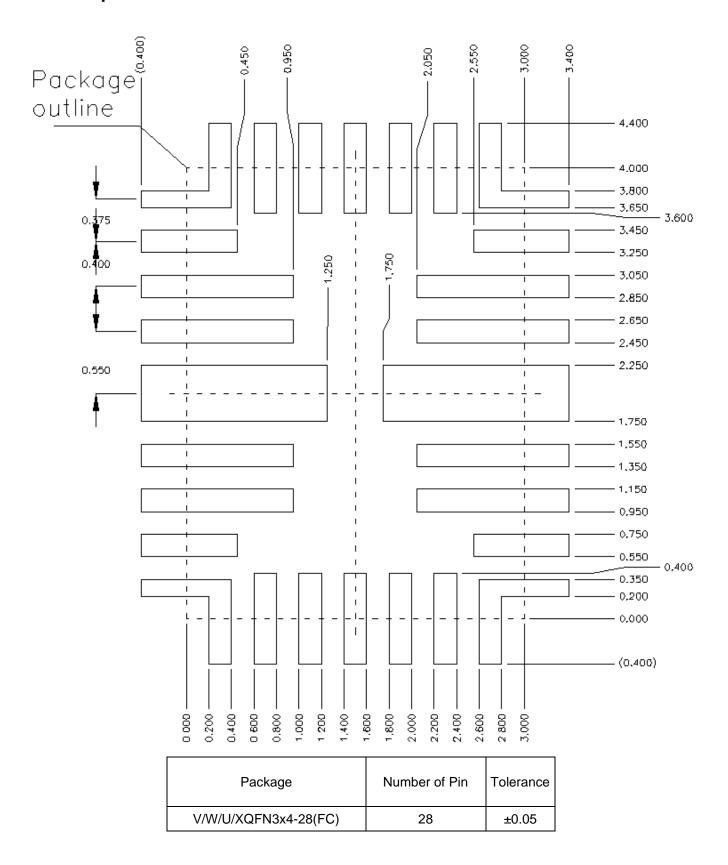




# 20 Packing Information

# 20.1 Tape and Reel Data

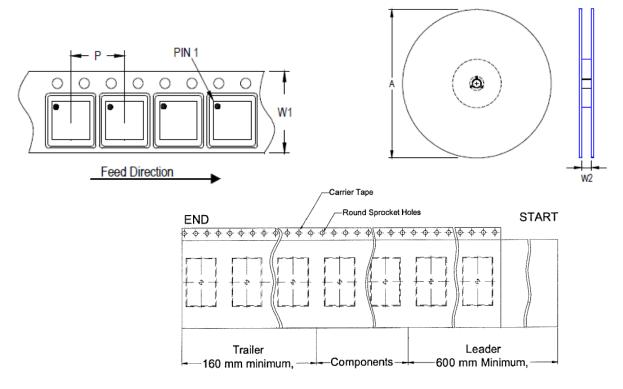

D	Tape Size	Pocket Pitch	Reel Size (A)		Units	Trailer	Leader	Reel Width (W2)	
Package Type	(W1) (mm)	(P) (mm)	(mm)	(in)	per Reel	(mm)	(mm)	Min./Max. (mm)	
QFN/DFN 3x4	12	8	180	7	1,500	160	600	12.4/14.4	

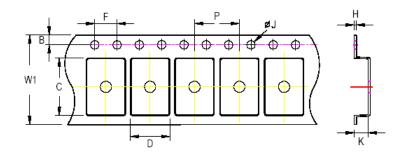

- C, D, and K are determined by component size. The clearance between the components and the cavity is as follows:
- For 12mm carrier tape: 0.5mm max.

Tape Size	W1	Р		В		F		Ø٦		Н
	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Max.
12mm	12.3mm	7.9mm	8.1mm	1.65mm	1.85mm	3.9mm	4.1mm	1.5mm	1.6mm	0.6mm

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# 20.2 Tape and Reel Packing

Step	Photo/Description	Step	Photo/Description
1	Reel 7"	4	3 reels per inner box Box A
2	Commentations:  Commentations:	5	
3	HIC & Desiccant (1 Unit) inside  Caution label is on backside of Al bag	6	Outer box Carton A

Container	Container Reel		Вох			Carton		
Package	Size	Units	Item	Reels	Units	Item	Boxes	Unit
QFN & DFN 3x4	7" 1,50	1,500	Box A	3	4,500	Carton A	12	54,000
			Box E	1	1,500	For Combined or Partial Reel.		



# 20.3 Packing Material Anti-ESD Property

Surface Resistance	Aluminum Bag	Reel	Cover tape	Carrier tape	Tube	Protection Band
$\Omega$ /cm <sup>2</sup>	10 <sup>4</sup> to 10 <sup>11</sup>					

# **Richtek Technology Corporation**

14F, No. 8, Tai Yuen 1<sup>st</sup> Street, Chupei City Hsinchu, Taiwan, R.O.C. Tel: (8863)5526789

Richtek products are sold by description only. Richtek reserves the right to change the circuitry and/or specifications without notice at any time. Customers should obtain the latest relevant information and data sheets before placing orders and should verify that such information is current and complete. Richtek cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Richtek product. Information furnished by Richtek is believed to be accurate and reliable. However, no responsibility is assumed by Richtek or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Richtek or its subsidiaries.

Copyright © 2024 Richtek Technology Corporation. All rights reserved.



# 21 Datasheet Revision History

Version	Date	Description	Item
05	2022/12/19	Modify	Electrical Characteristics on page 1 Application Information on page 52
06	2023/9/14	Modify	Ordering Information on page 1 General Description on page 1 Simplified Application Circuit on page 2 Electrical Characteristics page 40 Note 2 on page 42 Typical Application Circuit on page 44 Application Information on page 60, 61, 67
07	2024/7/4 Modify  Modify  Per Full Ab Re Ele Op Ap,		General Description on page 1 Ordering Information on page 1 Features on page 1 Functional Pin Description on page 4, 5 Absolute Maximum Ratings on page 7 Recommended Operating Conditions on page 7 Electrical Characteristics page 8 to 13 Operation page 23 to 49 Application Information on page 54 to 60 Functional Register Description on page 66 to 117